

## How to open:

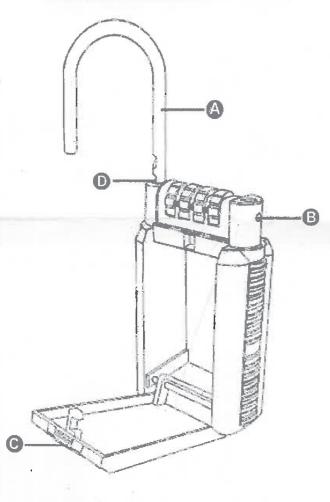


Rotate dials until your specific code is aligned with red bars. Pull shackle up and open the lid at the red arrow.

## How to reset:

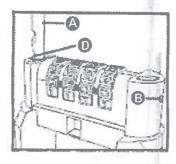

Lockbox is preset at 0-0-0-0, rotate dials to preset code and pull shackle up to second gap (D).

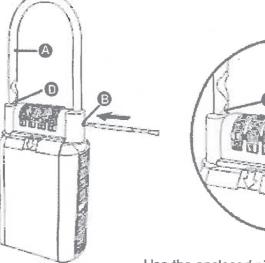

Use the enclosed pick to depress pin in hole (B) and set dials to your desired code. Release reset pin and your lock is ready.

## ∃How to lock :

