

CC300 plus network configuration



ENGEL
be the first

Step by step instruction

1. Step – connect network cabling

The network connection for the CC300 plus is located in the machine's control cabinet. A network router is installed there, which has an RJ45 interface on the “WAN” port for connection to the local network.




This is the only interface on the machine intended for this purpose. Please ensure that the cable is connected here, e.g., to the EDGE device.

2. step – login with user level 11


Please log in to the control system with a user with at least user level 11.

3. step – starting the serviceapplication

Tasks >  System settings >  System administration

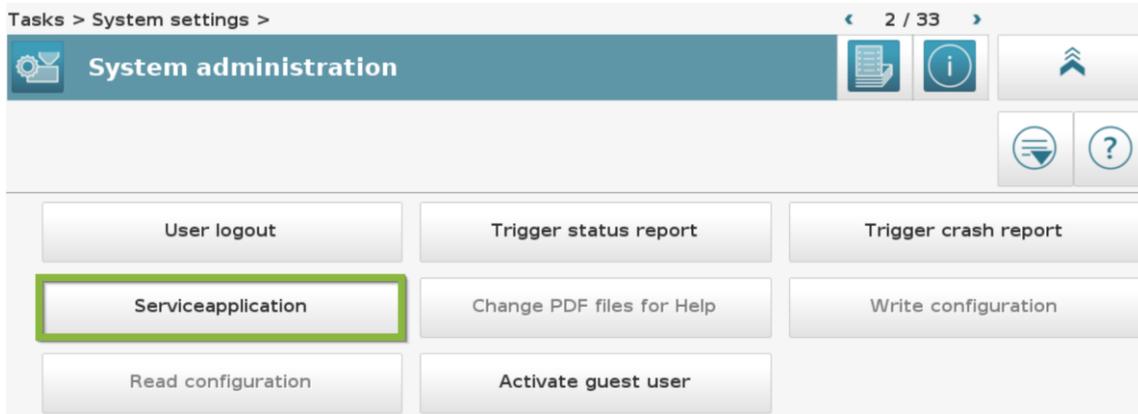

4. step – go to network settings

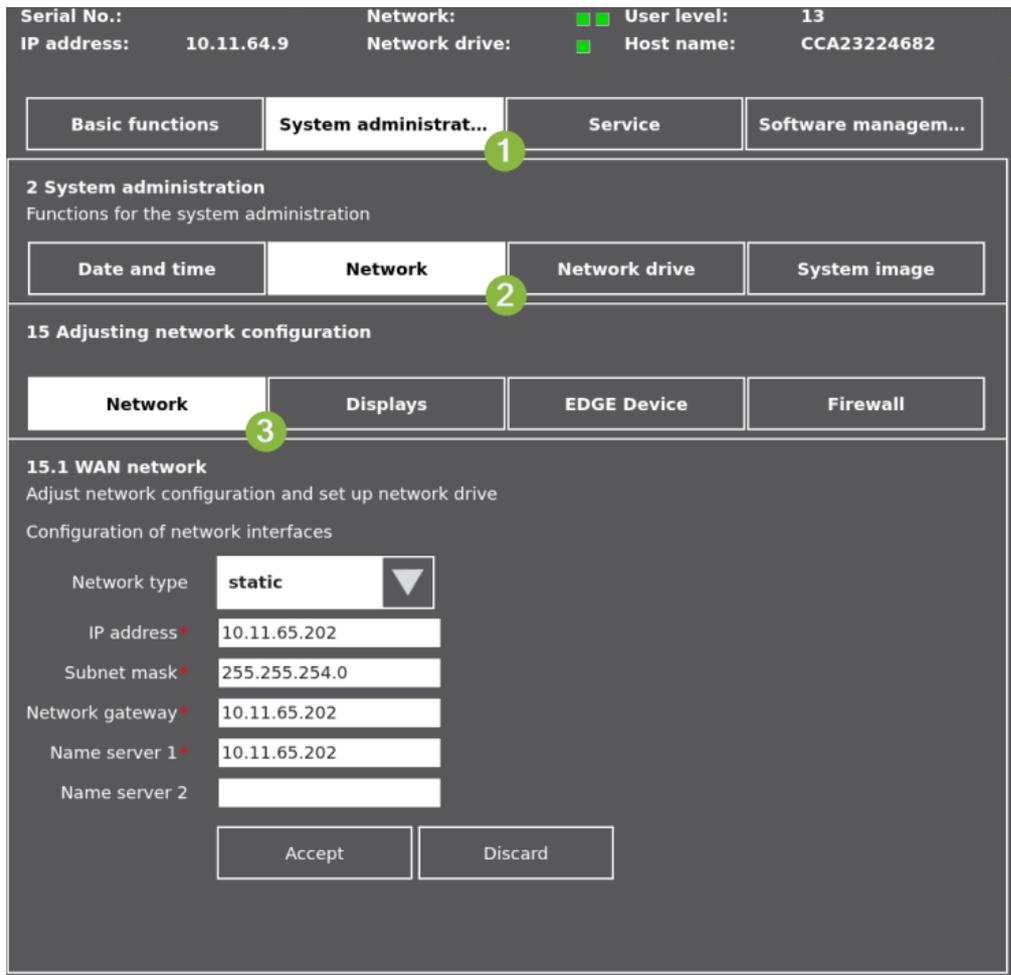

5. step – set network settings

Attention! Consultation with your IT department necessary.

Network type	can be selected between DHCP or static
IP-address, Subnetmask	must also be configured for network type “static”
DNS-Server	mandatory (if none is used, we recommend entering the same address as in the IP address field)
Default Gateway	mandatory (if none is used, we recommend entering the same address as in the IP address field)

Important!

The following IP address ranges are already used by ENGEL and therefore cannot be set as the IP address of the machine.

Machine control unit	IP subnet
CC100	192.168.0.0/24 -> all software versions
CC200	192.168.51.0/24 -> all software versions 192.168.1.0/24 -> up to software version V3.00.00 192.168.83.0/24 -> since software version V3.00.01
CC300	192.168.100.0/24 -> all software versions 192.168.101.0/24 -> all software versions 192.168.102.0/24 -> all software versions with KEBA panel 192.168.110.0/24 -> all software versions

Communication issues? Switch to the “Firewall” tab and check whether port 22 is entered there. If this is not the case, the port can be activated with user level 13.

15 Adjusting network configuration

Network Displays EDGE Device **Firewall**

15.3 Firewall
Settings for blocked connections and port forwarding

 **Changing the firewall settings requires a restart of the control unit when exiting the service application**

Configuration type: **Port forwarding** 

Legend

- Added
- Changed
- Marked for removal

	Port number	Forward to port	IP address	Description
	22	22	192.168.100.1	no_comment

Incoming port  0 - 65535

Forward to port  0 - 65535

IP address  ex.: 192.168.100.1

Description