

GRAND PIANO KEYS GAME SETUP

The game will arrive on 1 pallet. Please inspect for shipping damage and report immediately to the freight company if any damage found.

Tools Needed:

2 Square head bit

7/16" Wrench

2 people

1 step ladder (6-8 foot)

5/32" Allen Hex bit

T-30 Torx Bit

Wire Snips

Phillips Screwdriver

Important:

Portions of this game are heavy, bulky and large. Assembly requires 2 people to lift heavy components, and ladders that are tall and strong enough to position components to the top of the game.

Instructions:

- From the large pallet, remove the cardboard surround, and plastic wrapping.

- Using 2 people, carefully remove the bench from the top of cabinet and set aside for later installation.


- Remove the bag of keys taped to the top console.

- Unlock and open the coin box to remove the hardware kit.

- Unlock and open the lower back door.

- Remove the 4 lag screws using a T-30 Torx bit.
The lag bolts can be discarded.

- Using 2 people, slide the game backwards off of the pallet, and place in final game room position.

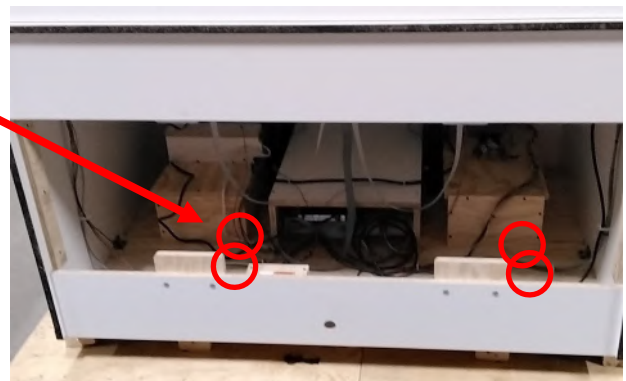

- From the large pallet, remove the cardboard top, and remove the bubble wrapped instruction panel and unwrap.



- Locate 2 small bolts from the hardware kit.



- The instruction panel will be attached here.



- Attach the instruction panel by inserting the tabs into the top of the cabinet and slide it towards the front of the cabinet.




- Secure with Phillips bolts from the hardware kit using a Phillips screwdriver.



- Slide the bench up to the cabinet.

- Locate 3 Phillips bolts and 3 lock washers, and 3 washers from the hardware kit.

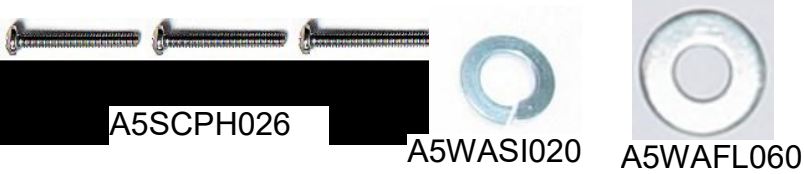

- Install the 3 sets of bolts, lock washers, and washers to secure the bench to the cabinet using a Phillips screwdriver.



- Using 2 people, carefully lift the marquee up to the top of the game. One person should hold the marquee in place, as the other person installs the hardware to secure.

- Locate 4 bolts and 4 lock washers, and 4 washers from the hardware kit.




- Secure the marquee with the 4 bolts, lock washers, and washers using a 7/16" wrench.



- Route the cables from the upper left corner of the cabinet up through the hole into the marquee.



- Plug in the cables to the connectors in the marquee:
CE5324 to CB5325
CE5326 to CE5303 (2 connectors)

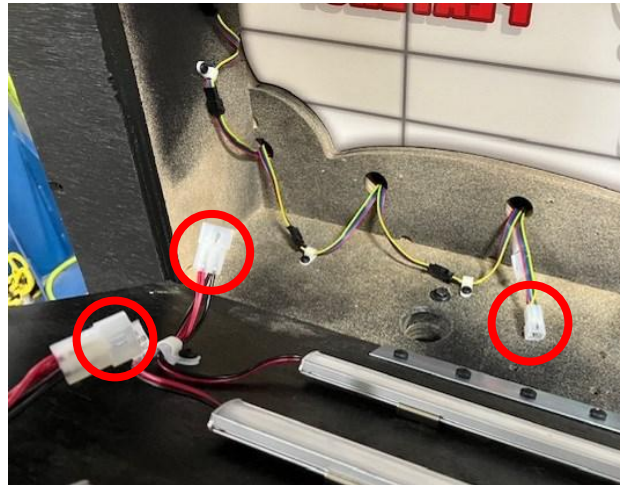

- Power game on by flipping the rocker switch on the power strip located inside the right side station door.



- The game is now set up and ready to play!
Enter the menu to adjust settings to your specific location.
Price per play / Ticket Settings / etc..