

# ICEE SLUSH RUSH GAME SETUP

Welcome to the set up guide for the ICEE Slush Rush game.

The game will arrive on 1 pallet. Please inspect the pallets for shipping damage and report immediately to the freight company if any damage is found.

## Tools Needed:

Ladder (8-10 foot)                      7/16" Wrench                      5/32" Hex Bit  
2 - 3 people                              # 2 Square head screwdriver bit  
Snips

## Important:

Portions of this game are heavy, bulky and large.

Assembly requires 2 people to lift heavy components, and ladders that are tall and strong enough to position components to the top of the game.

The game will arrive with multiple cabinet components, and hardware for assembly.

Assembly time is about 30 minutes.

## Instructions:

Remove cardboard covering and plastic shrink wrap.

Remove the 2 ICEE Marquee Cups from top of cabinet.

Remove packing material surrounding from behind cups.

Remove bag of keys from top console for later use.



# ICEE SLUSH RUSH GAME SETUP

Carefully snip the 2 banding straps.

Remove the 4 wood blocks using a #2 square bit.

Unlock the front door and coin box.  
Remove the hardware kit from the coin box.

On the right side of the cabinet, remove the 4 wood blocks using a #2 square bit.

Unlock the back door and remove the marquee parts:  
Bear Head, Bear Body, and Wire Cover Assembly.

Locate 4 black screws from hardware kit.



A5SCPH152


Place Bear Body face down on a soft flat surface.  
Place Wire Cover Assy on top as shown and secure with the 4 black screws using a #2 square bit.

Plug the ribbon cable from Bear Body into circuit board attached to Wire Cover Assy.

Locate 3 black screws from hardware kit.




A5SCFH040

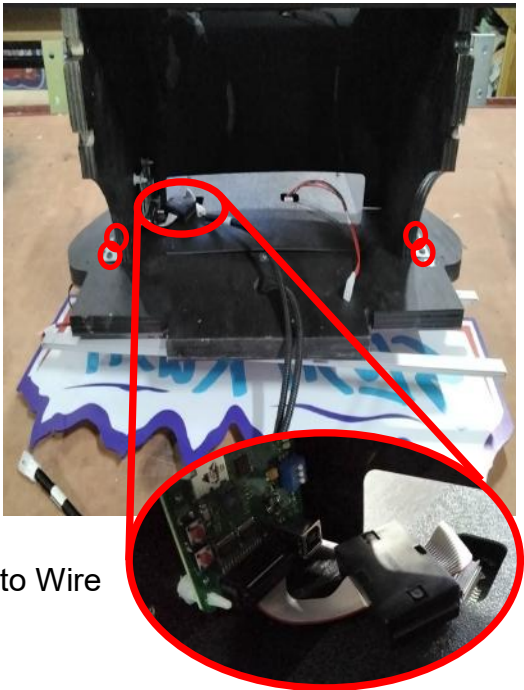

# ICEE SLUSH RUSH GAME SETUP

\* If you have the short version refer to page 10

Stand Marquee upright and attach Bear Head by installing the 3 screws using a # 2 square bit.

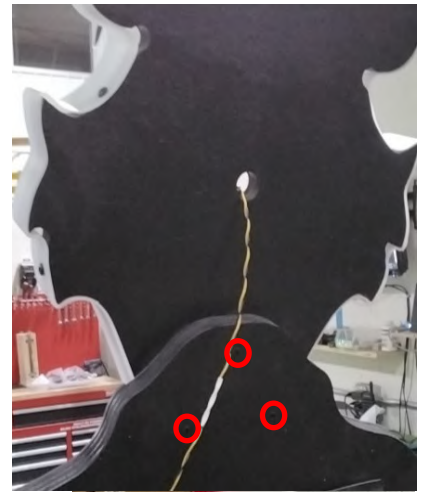

## Install the Left and Right ICEE Cups

Note: Cups should be installed so that the “Straws” are leaning toward center of cabinet.

Remove the black plastic door from the rear of both ICEE cups using a #2 square bit.

Locate the 2 cables (CE34007 & CE34014) on the roof of the cabinet.

- One pair on each side.

Remove the tape to prepare the wires for the cups.

Carefully lift the cup to the top of the cabinet.

The straws should point to the outside of the cabinet.

Route the 2 cables through the hole in the bottom of the cup while placing.



Locate 4 bolts, lock washers, and washers from the hardware kit.




Hand thread all 4 from the inside of the cup, down into the cabinet.

Tighten all 4 with a 7/16” wrench.

Connect the CE34007 cable to the CE34030  
And connect the CE34014 cable to the CE34032 & CE34042 cables.

Repeat this process for the other side ICEE cup.

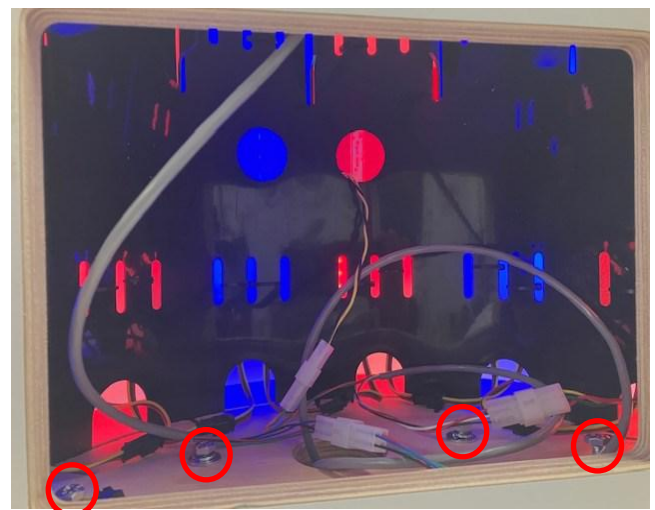




# ICEE SLUSH RUSH GAME SETUP

## Install Center Bear Marquee

Carefully lift the assembled bear up to the top of the cabinet.

Locate 4 screws from the hardware kit.


Install screws into L brackets using a #2 square bit.

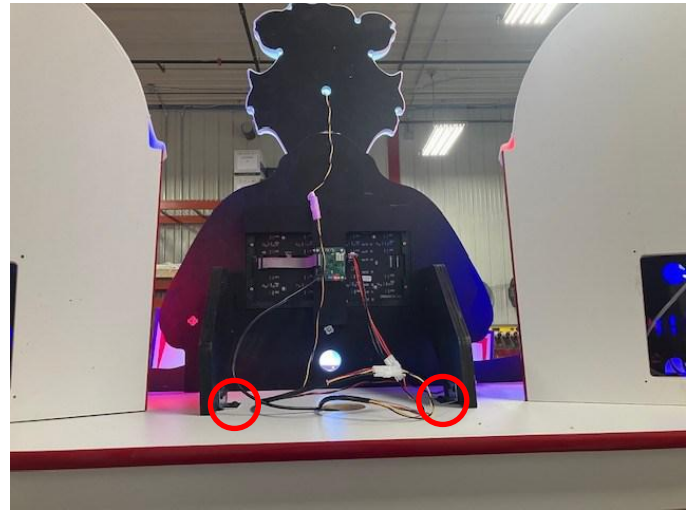

## Connect Cables

Plug USB cable into display driver board.

Plug CE34011 into the CE34034 & CE34019 cables.

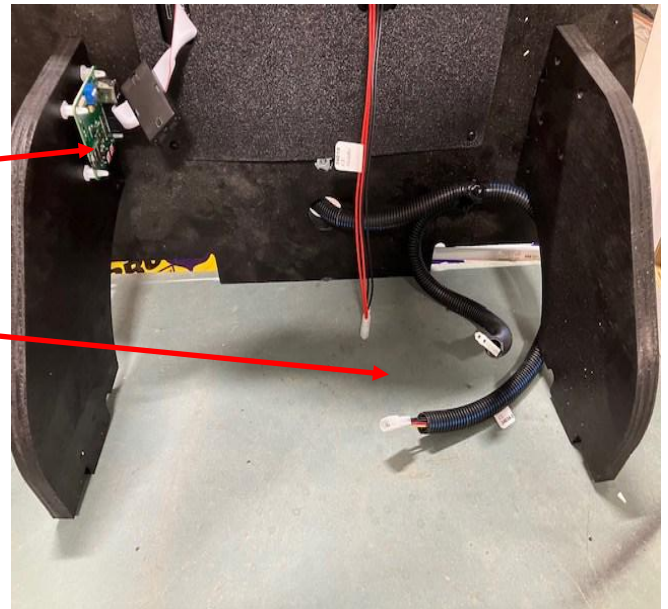

The game is now set up and ready for play!

Plug game in and power on.


Enter the menu to adjust settings to your location specific price per play and ticket payout.

# ICEE SLUSH RUSH GAME SETUP

If your game is the short version, the pieces that will be situated on top of the cabinet will be different.



The colored splashing decals will be installed on the left and right sides of the top of the cabinet. There are three pilot holes to secure the decals in place with screws provided in the game's hardware kit.

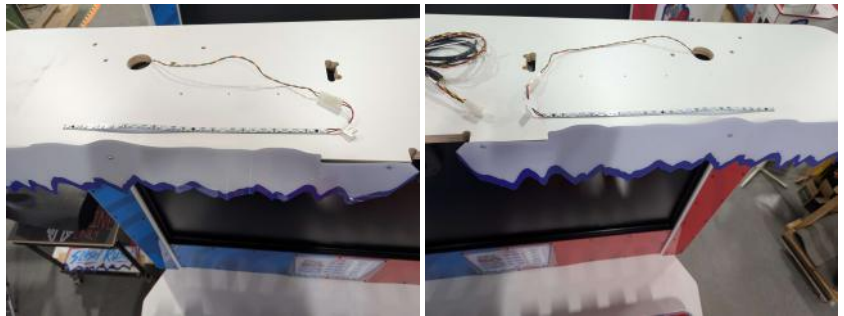

The display on the short version does not have the bear decal, but fits the same way as the tall version.

Slot the wooden frame of the display into the slots cut out into the top of the cabinet.



Plug USB cable into display driver board.

Plug CE34011 into the CE34034 & CE34019 cables.

The game is now set up and ready for play!

Plug game in and power on.

Enter the menu to adjust settings to your location specific price per play and ticket payout.

