

LIL TICKET MONSTER GAME SETUP

The game will arrive on one pallet.
Please inspect the pallet for shipping damage and report immediately to the freight company if any damage is found.



Remove the cardboard from the pallet.

Carefully remove the plastic wrap securing the printed plexi wrapped to the side of the cabinet. Save this printed plexi for later installation.

Remove the large plastic bag from the cabinet and proceed to assembly instructions.

Tools Needed:

1 step ladder (4-6 foot)	#2 square bit screwdriver	
T-30 Torx bit	Phillips screwdriver	11/32" wrench



Remove the protection plastic from the front plexi.

Remove the keys from the small plastic bag taped to the top console.

Unlock the front door using a H95 key.



Important!

Remove the **first of 2 shipping screws** using a T-30 Torx bit.

There is another shipping bolt accessed from the back door.

Unlock the coin box door using a A05/E00 key.



Remove the hardware kit (Part # A5KIT-LTM), wood blocks and service manual from the coin box.

Remove the eyeball light to be installed later.

Close and lock coin box door, remove key to allow the front door to close fully.



LIL TICKET MONSTER GAME SETUP

Hardware kits consist of:

32 of A5SCPH151 used to install the eyeball light and printed plexi wrap.
2 of A5SCPH230 and 2 of A5NULO030 used to secure plexi wrap below monitor.

1 of A5BOHH060, 1 of A5WASI020, and 1 of A5WAFL060 are to be saved with the wood blocks and used to support the wheel in case of a future solenoid replacement.



A5SCPH151



A5NULO030



A5SCPH230



A5BOHH060




A5WASI020



A5WAFL060

Unlock the back door using a H95 key.


Remove the back door by using both handles to lift upwards and pull out.

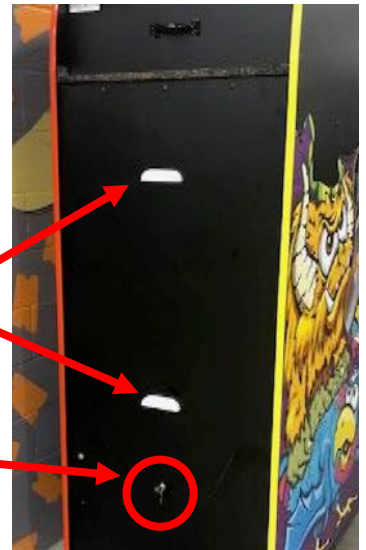

Important!

Remove the 2nd of 2 shipping screws using a T-30 Torx bit.

Ensure the shipping bolt from the front door is also removed.

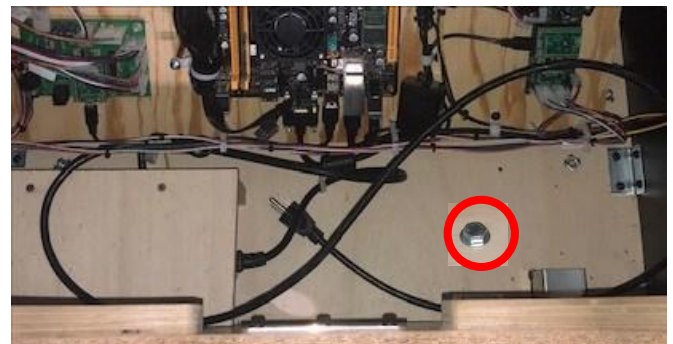

Replace the back door and remove the game from the pallet.


Using a ladder, carefully position the eyeball light on top of the game by positioning it inline with pilot holes.

Secure using 2 of the black screws from the hardware kit using a #2 square bit screwdriver.



A5SCPH151

Connect the CE22506 cable from eyeball light to the game cable CE22505 located in the top of the game.

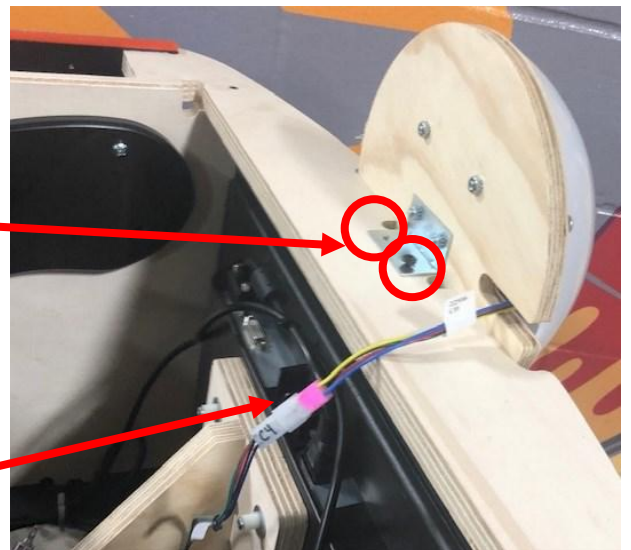

LIL TICKET MONSTER GAME SETUP

Rotate upper marquee in place:

Remove the lower bolt (A5BOPH320) from both left and right sides of marquee arm.
Leave the top bolt in place.



Rotate the marquee upward and re-insert the same bolts previously removed into the left hole.

Do this on both arms of the marquee.



Install the printed plexi wrap.


Remove the clear protective film from both sides of the printed plexi wrap.

The idea is to secure **one** screw into the left side of the plexi, then wrap it around the game and install screws into the right side.

The first screw to be installed will be this one.
Line up the printed plexi with this pilot hole and insert 1 of the black screws from the hardware kit using a #2 square bit screwdriver.



A5SCPH151

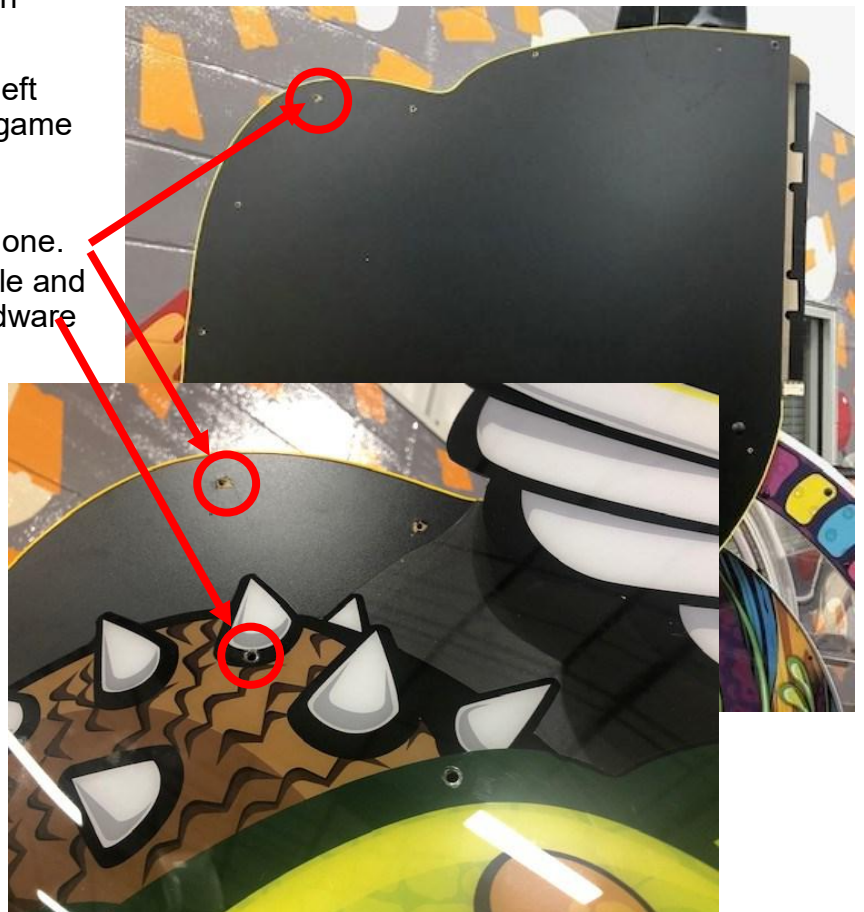

LIL TICKET MONSTER GAME SETUP

Pull the printed plexi wrap around the front of the game tightly, with the eyeball light through the round cutout in the plexi.

Continue wrapping the top of the cabinet and get ready to insert one screw in this location.

Line up the printed plexi with this pilot hole and insert 1 of the black screws from the hardware kit using a #2 square bit screwdriver.



A5SCPH151


Make sure the bolt hole is centered in the hole of the printed plexi.

Pull the printed plexi snugly until this bolt is centered in the hole of the printed plexi.

Insert another of the black screws from the hardware kit using a #2 square bit screwdriver.



A5SCPH151

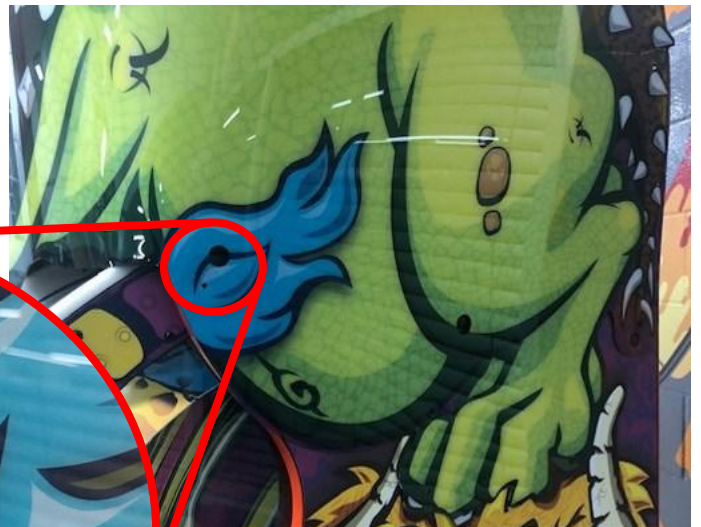

LIL TICKET MONSTER GAME SETUP

Continue installing the black screws from the hardware kit using a #2 square bit screwdriver in both the left side and right side printed plexi wrap.



A5SCPH151

There are a total of 15 screws in each side.

If the plexi bulges in spots, it may be necessary to remove screws close to bulge and re-install screws.



LIL TICKET MONSTER GAME SETUP

Install the 2 center bolts and nuts under the monitor.

The printed plexi wrap is secured to small “L” brackets using a Phillips bolt and nut from the hardware kit.



A5NULO030




A5SCPH230



Push the 2 bolts through the printed plexi, through the hole in the “L” bracket, and secure with the nut by reaching under the lip of the plexi.

Secure using a Phillips screwdriver and 11/32” wrench.

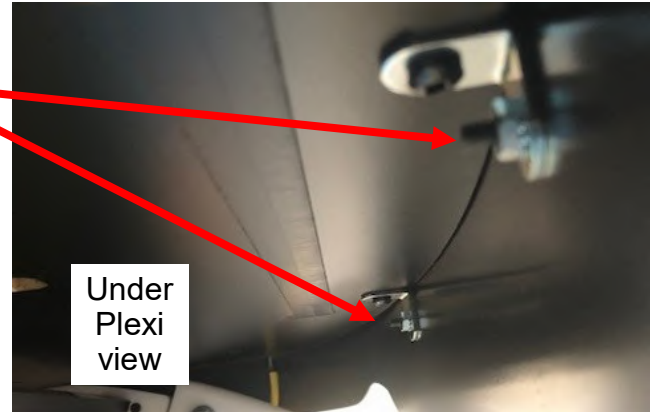

Remove the power cord from the coin box, and thread the power cord through this hole, out the rear of the cabinet and plug into a grounded outlet.



Power on game:

Open the front door and turn on the rocker switch on the power strip along the right side of coin box.

The rocker switch is located behind the 1st power cord on the strip



The game is now set up and ready for play!

Enter menu to adjust settings to your location specific price per play and ticket payout.



This unit is capable of producing sound levels hazardous to human hearing.

Consult local sound regulations and adjust volume accordingly.