

TOILET BOWL TOSS GAME SETUP

The game will arrive on 1 pallet. Please inspect for shipping damage and report immediately to the freight company if any damage found.

Tools Needed:

# 2 Square head bit	5/32" Allen Hex bit
7/16" Wrench	T-30 Torx Bit
2 people	Wire Snips
	1 step ladder (6-8 foot)

Important:

Portions of this game are heavy, bulky and large. Assembly requires 2 people to lift heavy components, and ladders that are tall and strong enough to position components to the top of the game.

Instructions:

- Remove the cardboard surround, and plastic wrapping.
- Remove the 2 side windows from the pallet and set aside for later use.



- Use wire snips to cut the banding straps on cabinet, and 1 banding strap on toilet seat.

- Remove the 4 lag screws using a T-30 Torx bit. The lag bolts can be discarded.

- Using 2 people, slide the game backwards off of the pallet, and place in final game room position.



- Remove the big box and set aside for later use.



- Remove the box from inside the cabinet.

Open box and remove the hardware kit to be used in assembling the cabinet.



- Remove the bag of game keys and use as needed.



- Remove the 2 screws holding down the marquee using a # 2 square bit.

- Remove the marquee from the cabinet and set aside for later installation.

Note: This marquee is top heavy and must be set aside something so that it will not tip over.



- The cabinet can now be tipped down onto the wheels, off the pallet, and brought to the game location - in front of the back section of the game.

Unload the big box:

- Open the big box previously removed from the pallet and verify the following parts are included:

- 2 Plunger Assy with lights (Left & Right)
- 2 Side Wall Arches (Left & Right)
- 1 Top Cabinet Wood
- 2 Large Connection Plates (A5ME14004)
- 2 Medium Connection Plates (A5ME14008)
- 2 Small Connection Plates (A5ME14009)



Attach cabinet sections together:


- Push the 2 cabinet sections close together and plug in the 2 connections on the right side of cabinet.

CE14014 to CE14012

CE14004 to CE14002

- Plug in the 2 pin connectors on the left side of cabinet.

CE14037 to CE14038

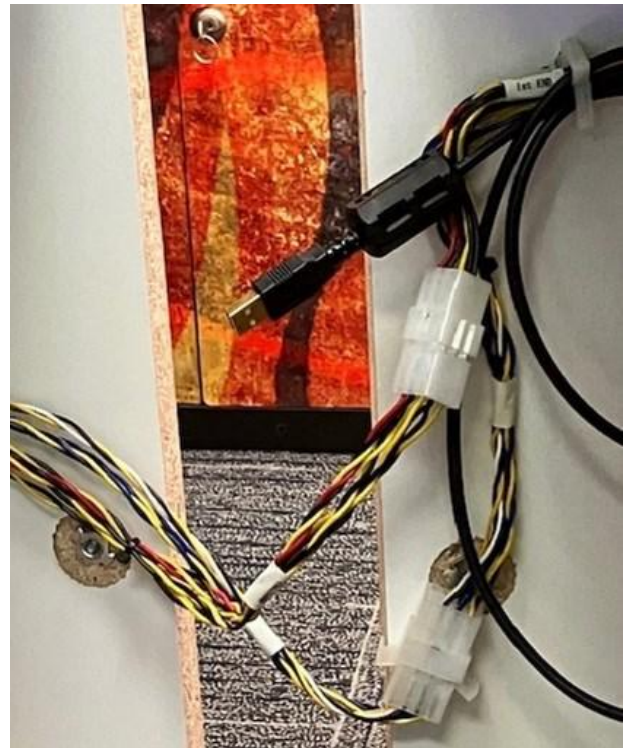

- Uncoil the USB cable and bring to the rear of cabinet and plug into any open USB socket on the motherboard.

- Push cabinets up tight against each other.

- Locate 8 of bolts (A5SCHX025) from the hardware kit.



A5SCHX025

- Locate 1 large connector plate (A5ME14004)



- Position large connector plate on the left side of cabinet as shown with high angled top to back.

- Hand thread all 8 bolts into plate.

Note: If some holes do not line up, the front of the cabinet may have to be raised slightly.

- Tighten all 8 bolts using a 5/32 hex bit.

- Repeat this process for the right side cabinet.



Attach side walls:

- The medium connector plate (A5ME14008) with curve and angle following cabinet outline will be already attached to your cabinet.

- Locate 6 of bolts (A5SCHX025) from the hardware kit.




A5SCHX025

- Locate 1 small connector plate (A5ME14008)



- Position small connector plate on top as shown with curve and angle following cabinet outline.

- Hand thread 2 bolts into left edge of plate.

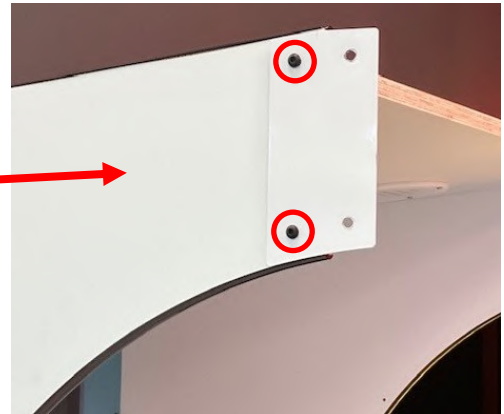

- Locate Left Side Wall Arch and place in position as shown.

- Hand thread 2 bolts into the top connector plate, and hand thread 2 bolt into the bottom connector plate.

- Tighten all 6 bolts using a 5/32 hex bit.

- Repeat this process for the right side cabinet.





A5WASI020

Attach top wood piece:

To attach components to the inside and top of the game, you must carefully climb inside the cabinet.

Most surfaces are strong and will support the weight of a person, we ask that you avoid stepping on this center plexi.

It is the least supported section of the cabinet.

- Locate 4 of bolts from the hardware kit.
- Locate the top wood piece and place on the top of the cabinet as shown.



A5SCHX025

Ensure the center T nuts are on the bottom of the board.

- Hand thread 4 bolts from under, up into the top wood piece.
- Tighten all 4 bolts using a 5/32 hex bit.



Attach marquee:

- Locate 2 bolts, 2 lock nuts, 2 washers.



A5BOHH060



A5WASI020




A5WAFL060

- While the marquee is on the floor, place the bolts, lock washers, and washers into the 2 mounting holes. This will help in mounting by guiding the bolts in place when it is on top of the game.

- Using 2 people, carefully lift the marquee to the top of the cabinet.


- Position the marquee so that the 2 bolts fall into the 2 mounting holes. Hand thread both bolts into the top of the game.

- Tighten both bolts using a 7/16" wrench.

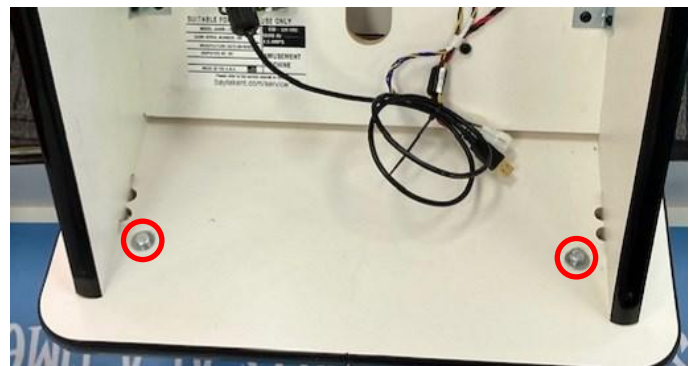


Connect Marquee Cables:

- Place a 6 - 8 foot ladder on the right side of the cabinet.
- Carefully snip plastic cable tie using a wire snips.

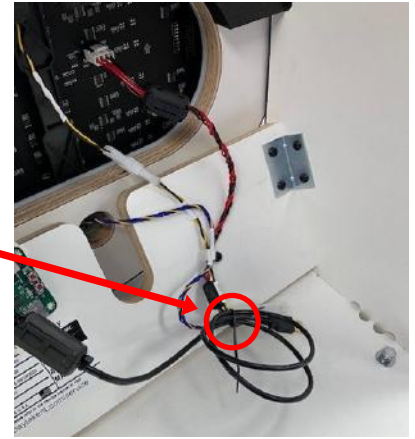

- Connect the 2 cables together:
CE14006 to CE14005
CE14020 to CE14013

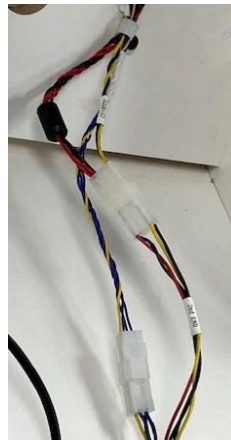

- Connect the 2 USB cables together.



Attach Side Windows:

- Locate 12 of black 8 screws.



A5SCPH151

- Locate left side window. It is the one with the notch cutout on the left side of center.



- Bring the left side window inside the cabinet and place in position. Ensure the notch cutout lines up with the T-nuts on the inside of the cabinet.



- Install all 12 screws using a # 2 square bit drive.

- Repeat this process for the right side cabinet.




Attach Plunger Plexi with Lights:

- Locate 2 bolts and 2 washers from hardware kit.



- Locate left side plunger plexi assembly. It follows the curve of the cabinet.

- Lift the plunger plexi assembly into place and feed the light cable into the hole in the main cabinet.

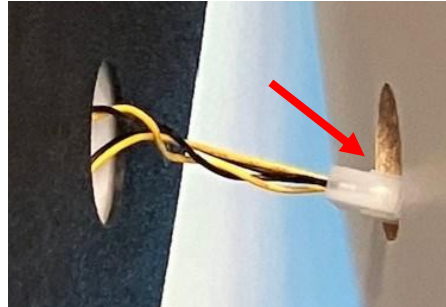

- Hand thread the 2 bolts in place, and tighten with a # 2 square bit.


- Repeat this process for the right side cabinet.

Plug in Plunger Light Cables under cabinet:


- Locate the access panel on the right side of game.
- Remove the 5 bolts using a # 2 square bit drive.



- Locate the CE14004 cable, uncoil and plug into the left side plunger.

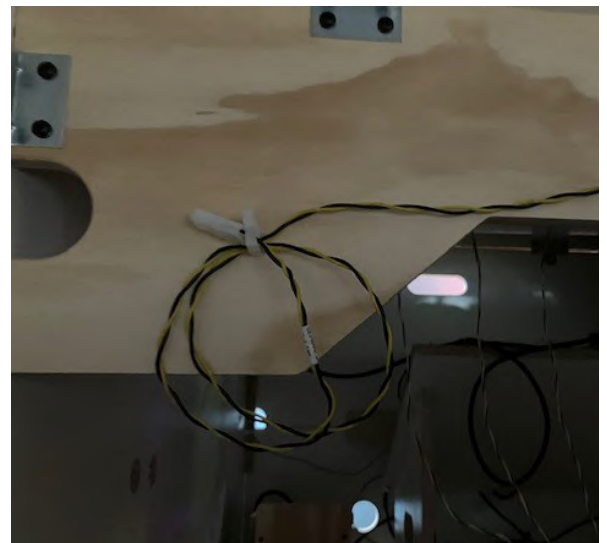

- Locate the other CE14004 cable, uncoil and plug into the right side plunger.

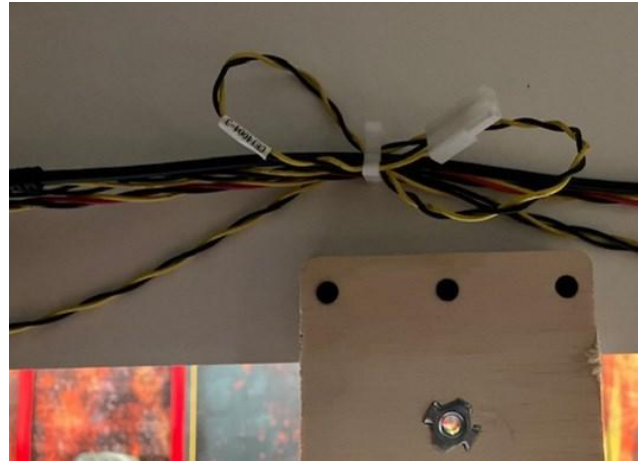

The cabinet is now fully assembled!


Turn on game:

- Remove the lower back door by unlocking the 2 locks.




- Route the power cable out the hole in the back of game and plug into the wall.

- Flip the rocker switch on power switch ON in the back of the game.

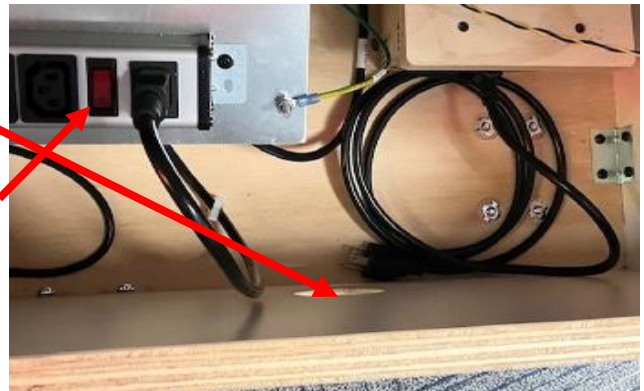

- Flip the rocker switch ON in the front of the cabinet and allow game to boot up.

- Remove the box of 30 balls and toss up into the cabinet. (There are 20 spare balls to keep until needed)

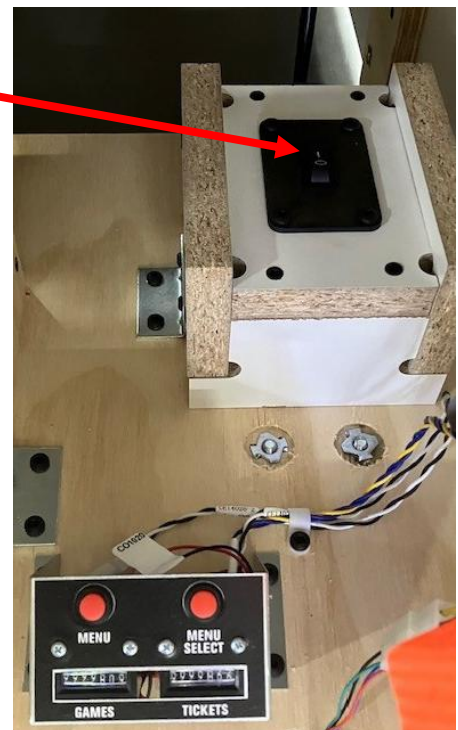

The game is now set up and ready to play!
Enter the menu to adjust settings to your specific location. Price per play / Ticket Settings / etc..