


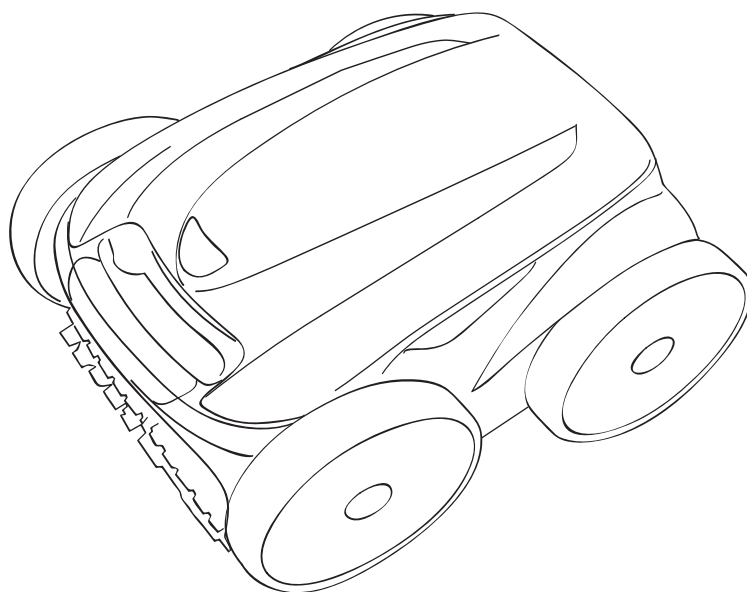

P93

P94



OWNER'S MANUAL

ENGLISH | FRANÇAIS |

⚠ WARNING

FOR YOUR SAFETY - For anything other than the routine cleaning and maintenance described in this manual, this product must be serviced by a contractor who is licensed and qualified in pool equipment by the jurisdiction in which the product will be installed where such state or local requirements exist. In the event no such state or local requirement exists, the maintainer must be a professional with sufficient experience in pool equipment installation and maintenance so that all of the instructions in this manual can be followed exactly. Improper installation and/or operation will void the warranty.

⚠ AVERTISSEMENT

POUR VOTRE SÉCURITÉ – Pour toute opération autre que l'entretien de routine et la maintenance décrite dans ce manuel, ce produit doit être pris en charge par une entreprise qui est autorisée et qualifiée pour la réparation des équipements de piscine par la juridiction où le dit produit est installé lorsque de telles exigences locales ou provinciales sont édictées. Si aucune exigence locale ou provinciale n'est disponible, l'agent d'entretien doit être un professionnel avec suffisamment d'expérience dans l'installation et la maintenance d'équipement de piscine pour appliquer correctement les consignes du présent manuel. L'installation ou l'utilisation inappropriée annulera la garantie.

Table of Contents

Section 1. Important Safety Instructions..... 3

Section 2. Cleaner Specifications 5

2.1 General Specifications 5

Section 3. Assembly and Initial Usage 5

3.1 Unpacking 5

3.2 Assembling the Transport Caddy 5

3.3 Connecting the Control Unit to the Caddy 7

Section 4. Operation..... 8

4.1 Submerging the Cleaner 8

4.2 Operating the Cleaner 9

Section 5. Cleaning and Maintenance 10

Section 6. Replacement Parts 13

Section 7. Troubleshooting 14

THANK YOU FOR PURCHASING THE POLARIS® P93 P94 CLEANER.

YOUR POLARIS ROBOTIC CLEANER HAS BEEN DESIGNED AND MANUFACTURED TO BE EASILY INSTALLED AND TO PROVIDE LOW MAINTENANCE OPERATION. PRIOR TO INSTALLING YOUR NEW POLARIS CLEANER, PLEASE DO THE FOLLOWING:

- 1) Complete and return the warranty card.
- 2) Record your purchase information on the spaces provided below.
- 3) Attach your invoice (or a copy) to this page.

Taking these steps will help ensure prompt warranty service, should it be required. If service is required, please contact your original dealer. If the original dealer does not perform warranty service, please visit www.polarispool.com to locate an independent service company near you. If you are unable to locate a service company, please call our Technical Support department at 800-822-7933.

RECORD YOUR POLARIS CLEANER DATA HERE:

Date of Purchase _____ Purchased From _____ Serial Number: _____
(located on machine head)

City _____ State _____ Zip Code _____

Section 1. Important Safety Instructions

Congratulations on purchasing the Polaris P93 P94 Robotic Cleaner. Please take a moment to read through the entire manual before installing your new robotic pool cleaner. Your cleaner must be installed and operated as specified.

READ AND FOLLOW ALL INSTRUCTIONS

WARNING

Failure to comply with the following warnings can result in permanent injury, electrocution or drowning.

PREVENT ELECTRICAL SHOCK

To reduce risk of electrical shock:

- Connect unit to receptacle protected by a ground fault circuit interrupter (GFCI). Such a GFCI receptacle should be provided by a qualified installer and should be tested on a routine basis. To test the GFCI, push the test button. The GFCI should interrupt power. Push the reset button. Power should be restored. If the GFCI fails to operate in this manner, the GFCI is defective. If the GFCI interrupts power to the pump without the test button being pushed, a ground current is flowing, indicating the possibility of an electric shock. Do not use this product. Disconnect the cleaner and have the problem corrected by a qualified service representative before using.
- Per the United States National Electric Code (NEC®), keep the control unit at least five (5) feet from the edge of the (pool/spa) water. In Canada, the Canadian Electrical Code (CEC®) requires a minimum distance of 3m (10 ft.) to be maintained between the pool edge and the control unit. Never submerge the control unit.
- Do not enter pool while the Polaris P93 P94 is in water.
- Do not bury cord. Locate cord so as to prevent it from being damaged by lawn mowers, hedge trimmers and other equipment.
- To reduce the risk of electrical shock, do not use the Polaris P93 P94 robotic cleaner or control unit if the cord is worn or damaged. Contact Zodiac Pool Systems, Inc. Technical Support immediately for a replacement cord.
- Double insulation—For continued protection against possible electric shock, use only identical replacement parts when servicing. Do not attempt repair of the Polaris P93 P94 robotic cleaner, control unit, power cord, or floating cable.
- NEVER OPEN CONTROL UNIT.
- Do not use an extension cord to connect the unit to electric supply; provide a properly located outlet. The control unit should be placed near the outlet box.

PREVENT CHILD INJURY AND DROWNING

- To reduce the risk of injury, do not permit children to operate this product.
- Do not let anyone, especially small children, sit, step, lean, or climb on any equipment installed as part of your pool's operational system.

⚠ CAUTION

Failure to comply with the following warnings could cause damage to pool equipment or personal injury.

- The Polaris P93 P94 must be installed and operated as specified.
- This product is intended for use with permanently-installed pools. Do not use with storable pools. A permanently-installed pool is constructed in or on the ground or in a building such that it cannot be readily disassembled for storage. A storable pool is constructed so that it is capable of being readily disassembled for storage and reassembled to its original integrity.
- Turn the Polaris P93 P94 off before removing it from water, and do not operate out of water.
- Do not remove the cleaner from the pool for 15 minutes after the cleaning cycle has completed.
- Clean the filter canister in the Polaris P93 P94 after each use.
- Do not use the product in your pool if the water temperature is above 95° F (35° C) or below 55° F (13° C).

⚠ CAUTION**USE OF THE POLARIS P93 P94 ROBOTIC CLEANER IN A VINYL LINER POOL**

Certain vinyl liner patterns are particularly susceptible to rapid surface wear of pattern removal caused by objects coming into contact with the vinyl surface, including pool brushes, pool toys, floats, fountains, chlorine dispensers, and automatic pool cleaners. Some vinyl liner patterns can be seriously scratched or abraded simply by rubbing the surface with a pool brush. Ink from the pattern can also rub off during the installation process or when it comes into contact with objects in the pool. Zodiac Pool Systems, Inc., is not responsible for, and the Limited Warranty does not cover, pattern removal, abrasion or markings on vinyl liners.

SAVE THESE INSTRUCTIONS

Section 2. Cleaner Specifications

2.1 General Specifications

The general specifications for the cleaner are as follows:

Control box supply voltage	100-125 VAC, 60 Hz
Supply voltage	30 V DC
Installed load	150 W max
Cable length	60 ft (18 m)
Cleaner size (WxDxH)	16.9 x 18.9 x 10.6 in. 43 x 48 x 27 cm
Pack size (WxDxH)	22.8 x 22.8 x 23.2 in. 58 x 58 x 59 cm
Weight of Cleaner	21 lbs. (9.5 kg)
Packed weight	42 lbs. (19 kg)
Filtration	less than 100 microns
Cycle lengths	1.30 hrs, 2.30 hrs.

The cleaner is a double-insulated product. A double-insulated electrical appliance is one which has been designed in such a way that it does not require a safety connection to ground. The basic requirement for double-insulation is that no single failure can result in dangerous voltage becoming exposed so that it might cause an electric shock and that this is achieved without relying on an earthed (grounded) metal casing. This is achieved by having two (2) layers of insulating material surrounding live parts or by using reinforced insulation. Therefore, devices having double-insulated construction, such as this cleaner, do not utilize a grounded (three-prong) cord/plug.

Section 3. Assembly and Initial Usage

3.1 Unpacking

The packaging should contain the following items (Refer to Figure 1):

- Polaris cleaner
- Control unit
- Transport and storage caddy (complete with assembly components)

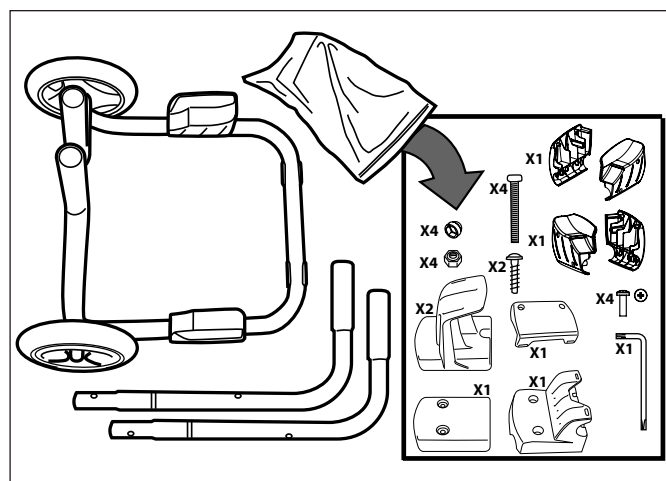


Figure 1. Components

Check that the unit has not been damaged during transport. If you detect damage, contact Zodiac Pool Systems, Inc. at 1-800-822-7933 before using your cleaner.

To unpack the cleaner and its components:

1. Remove the lower portion of the caddy along with the upper and lower power cable hooks, control unit hook, power cable hook plate, locking plate, nuts, bolts and screws.
2. Remove the small box that contains the control unit.
3. Remove the handles (left and right) of the caddy, which are located against one side of the box.
4. Remove the cleaner from the box.

3.2 Assembling the Transport Caddy

1. Insert the upper tubes (handles) into the bottom tubes on the cart as shown in Figure 2. Make sure the upper tubes (handles) are in the proper orientation and align the screw holes.

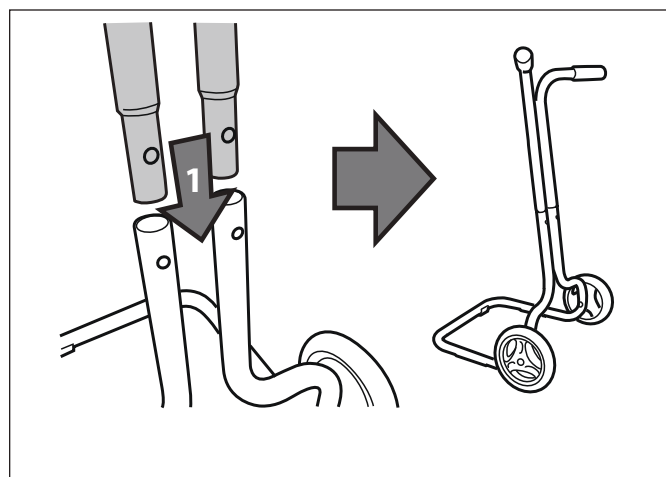


Figure 2. Install the Handles

2. Position the bottom power cable hook as shown in Figure 3. Place the cable hook plate opposite the power cable hook. Secure using a screw and tightening with the Torx® wrench. Refer to Figure 4.

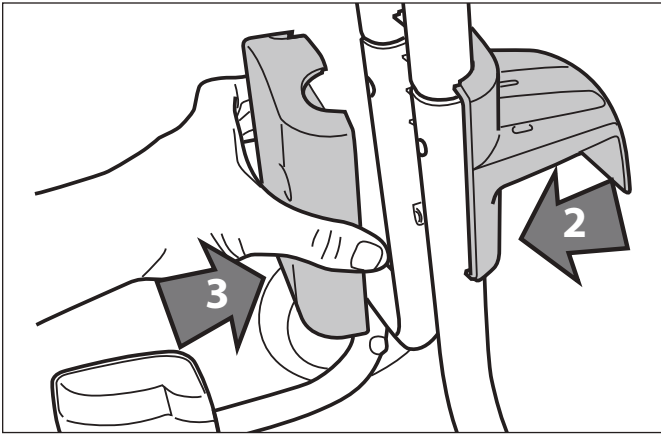


Figure 3. Position the Bottom Power Cable Hook

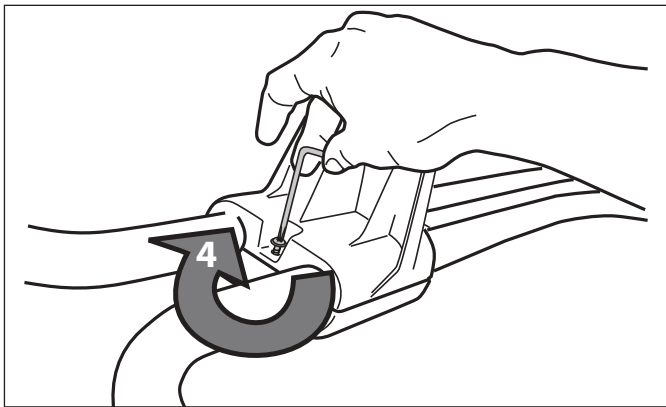


Figure 4. Secure the Bottom Power Cable Hook

3. Secure the cable hook plate using two (2) bolts and two (2) nuts and tighten with Torx wrench. Refer to Figure 5.

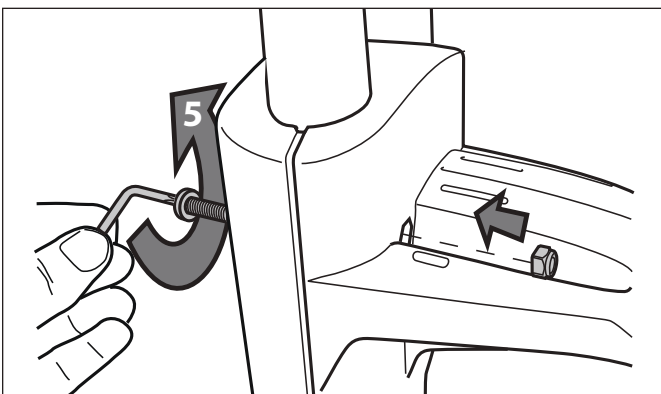


Figure 5. Secure the Cable Hook Plate

4. Position the power cable hook and control unit hook on the upper tubes as shown in Figure 6. Make sure the upper tubes (handles) are in the proper orientation.

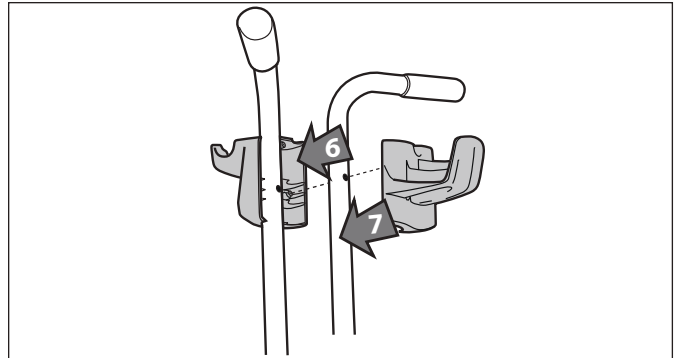


Figure 6. Position the Bottom Power Cable Hook

5. Secure the power cable hook and control unit hook around the tubes using a screw and hand tighten with the Torx wrench (supplied with unit). Refer to Figure 7.

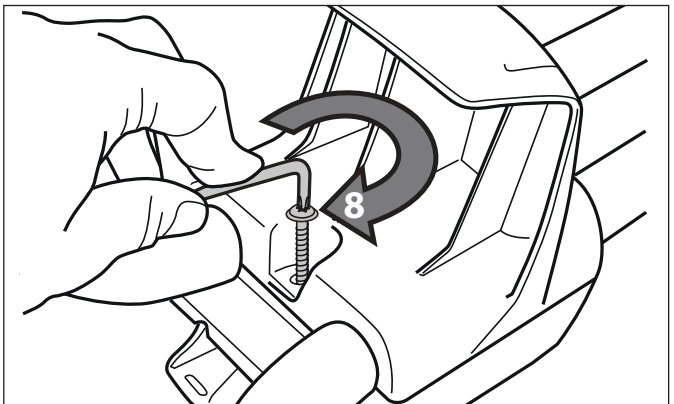


Figure 7. Install the Power Cable Hook and Control Unit Hook

6. Secure the control unit hook using two (2) bolts and two (2) nuts and tighten with Torx wrench. Refer to Figure 8.

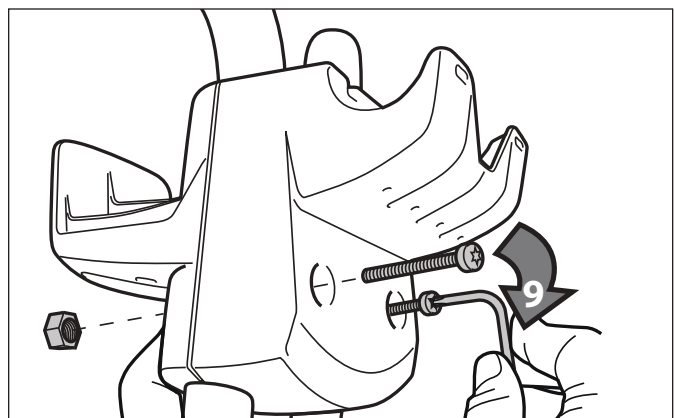


Figure 8. Secure the Hooks

7. Place two (2) caps on the wheels as shown in Figure 9.

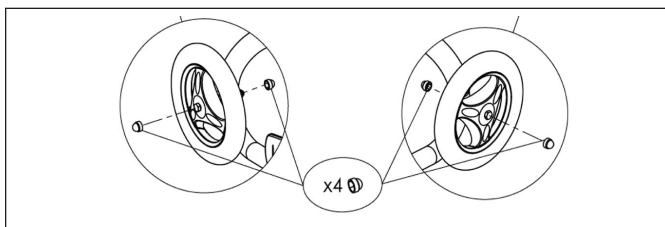


Figure 9. Attaching Wheel Caps

8. Attach the support blocks to the caddy using four (4) screws as shown in Figures 10 and 11. For the Polaris P93, see Figure 10 for orientation and positioning of the blocks, and for the Polaris P94, see Figure 11

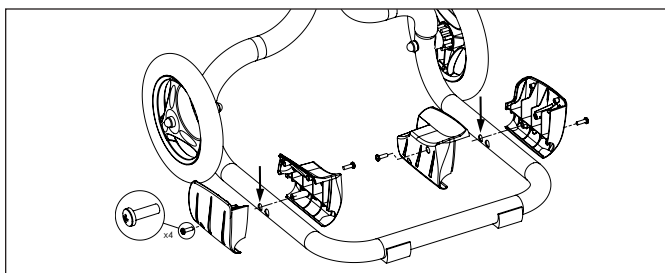


Figure 10. Attaching the Support Blocks (Polaris P93)

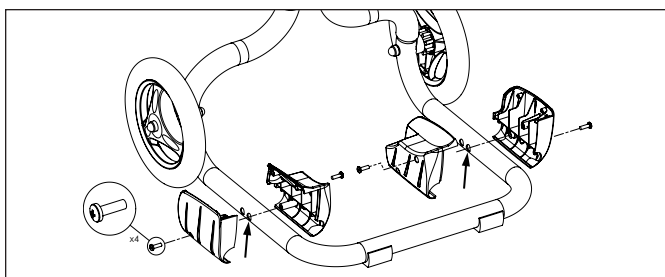


Figure 11. Attaching the Support Blocks (Polaris P94)

9. The transport caddy is now ready to use as shown in Figure 12.

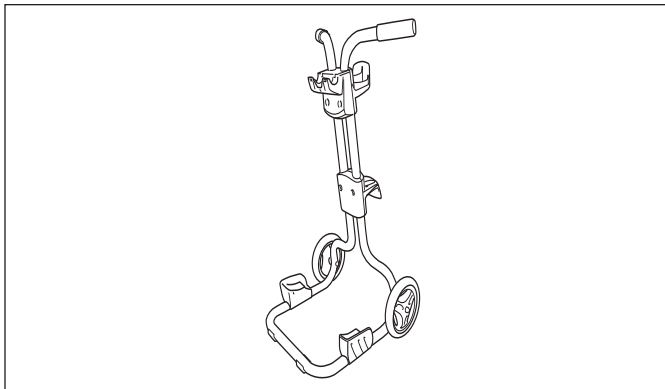


Figure 12. Transport and Storage Caddy Assembled

3.3 Connecting the Control Unit to the Caddy

1. Position the control unit over the control unit hook on the caddy.
2. Slide the locking plate clips into the control hook and line up the screw holes. Refer to Figure 13.

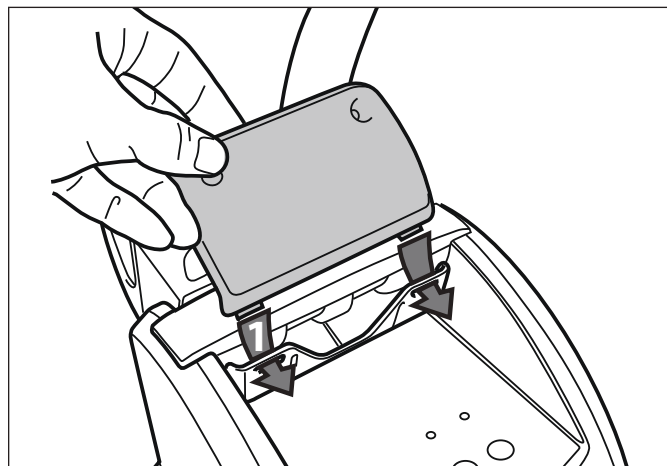


Figure 13. Position the Locking Plate Clips

3. Secure the locking plate using Phillips head screws. Do not overtighten. Refer to Figure 14.

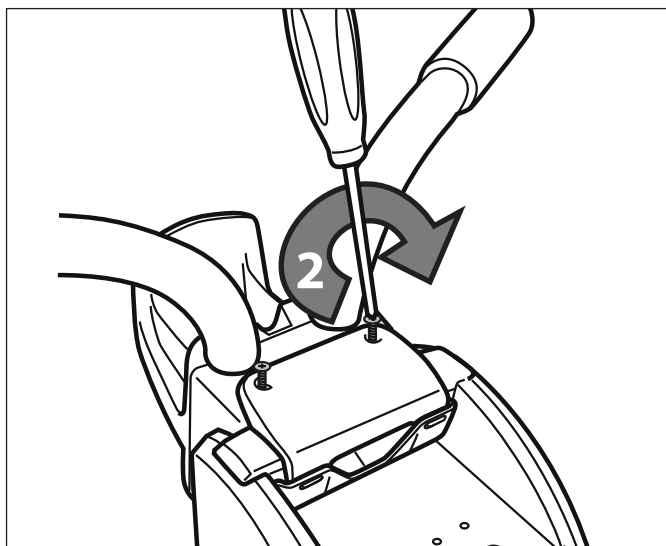


Figure 14. Secure the Locking Plate

3.4 Electrical Connection

⚠ WARNING

Failure to comply with the following warnings can result in permanent injury, electrocution or drowning.

PREVENT ELECTRICAL SHOCK

- **U.S.:** Per NEC® requirements, keep the control unit at least five (5) ft. (1.5 m) from the edge of the pool. **CANADA:** Per CEC® requirements, keep the control unit at least three (3) m (10 ft.) from the edge of the pool.
- Only connect the control unit to a receptacle protected by a ground fault circuit interrupter (GFCI). Contact a certified electrician if you cannot verify that the receptacle is protected by a GFCI.
- Do not use an extension cord to connect the control unit.
- Do not allow anyone to swim while the cleaner is in the pool.

For your safety and to obtain the best possible performance from your cleaner, connect the cleaner's floating cable to the control unit and thread connector until it is snug. Do not overtighten. Refer to Figure 15.

The control unit is equipped with an automatic shut off feature to prevent overheating if operated in direct sunlight for an extended period of time.

⚠ WARNING

The control unit is water-resistant, not waterproof. In order to prevent electrocution, which could result in serious injury or death, never submerge the control unit or leave exposed to inclement weather.

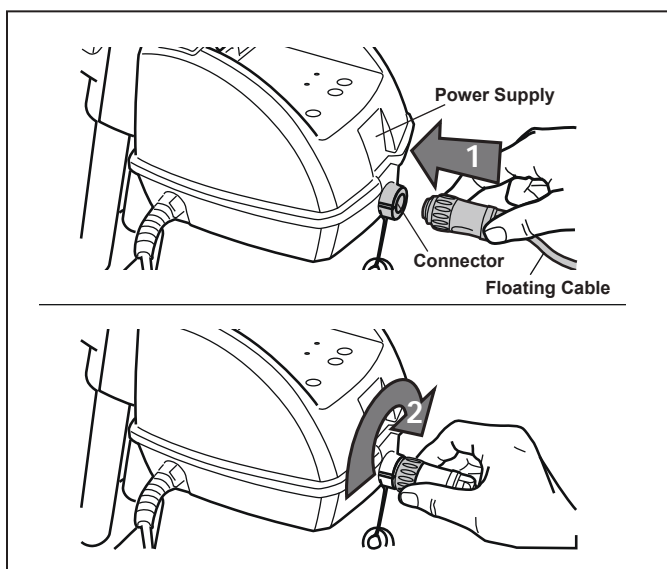


Figure 15. Electrical Connection

Section 4. Operation

4.1 Submerging the Cleaner

1. Submerge the cleaner in the pool and remove any air trapped inside by keeping the unit vertical. Refer to Figure 16.

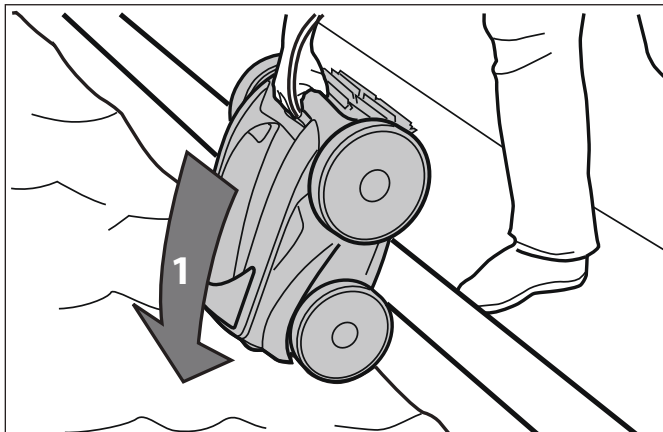


Figure 16. Submerge the Cleaner Vertically

2. Ensure the unit sinks to the bottom of the pool. Refer to Figure 17.

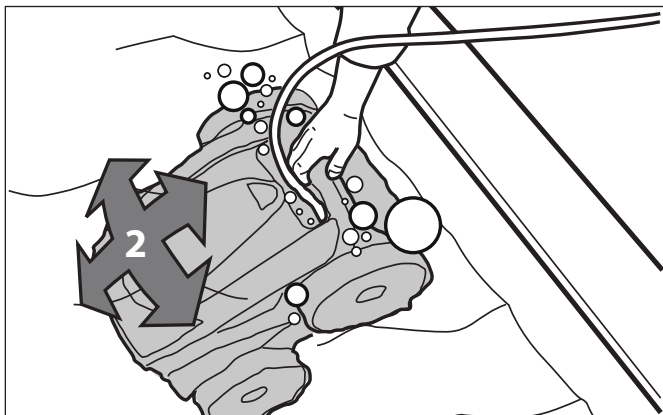


Figure 17. Cleaner Sinking to the Bottom of the Pool

3. Spread out the floating cable over the pool, ensuring there are no kinks or coils in the cable. Refer to Figure 18.

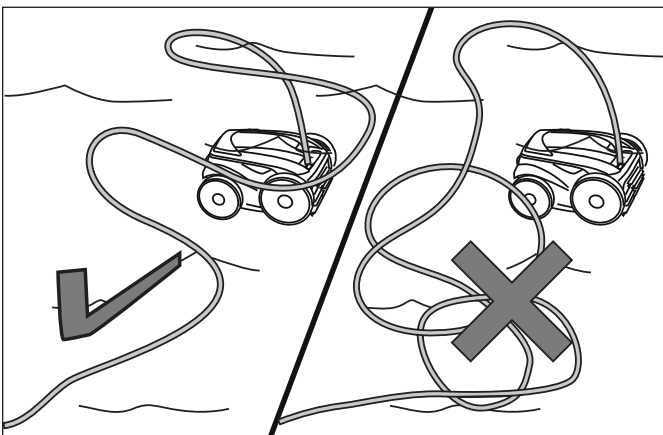


Figure 18. Spread Floating Cable Over the Pool

4.2 Operating the Cleaner

⚠ CAUTION

To prevent damage to the cleaner, be sure to adhere to the following guidelines:

- Do NOT remove the cleaner from the pool for 15 minutes after the cleaning cycle ends.
- Approximately 15 minutes after the cycle is completed, the light located on the control unit will flash slowly to indicate that the cleaner may be removed from the pool. The 15 minute period allows the motor to cool and will prevent damage to the cleaner.
- Remove the cleaner from the pool after the cleaning cycle is completed and store on the caddy out of direct sunlight or inclement weather.
- Never lift the cleaner out of the pool by the floating cable. Always use the handle to remove it from the pool (refer to Figures 21 and 22).
- Take additional care when lifting the cleaner out of the pool. It becomes heavier when filled with water.
- Remove the cleaner from pool when super chlorinating or adding acid.
- Do not handle cleaner while it is in operation.

NOTE Always make sure the cleaner head is fully submerged in the water before you begin the operation cycle.

When the cleaner is powered ON it will remain in standby until one of the cycle program selection buttons is pressed. Select either the Cycle I or Cycle II cleaning program on the control unit:

Cycle I Program	Cycle II Program
Completed in 1.5hours	Completed in 2.5 hours
Maximum coverage in minimal time	Intensive and complete cleaning
Thorough pool floor cleaning	Thorough pool floor and wall cleaning

1. To start your cleaner, press the desired cycle button (Figure 19). "Cycle I" is the most commonly selected cleaning program for inground pools.

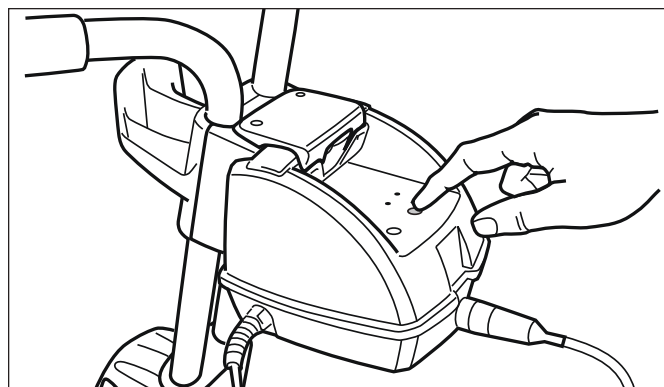


Figure 19. Start the Cleaner

2. When the cycle program button is selected the indicator light will illuminate. The cleaner will start in a few seconds.
3. To change the selected cleaning cycle, press the new cycle button and the new cycle will start in a few seconds.
4. If you wish to stop the cleaner during a cleaning cycle, press the OFF button. Refer to Figure 20.
5. At the end of the cycle, the cleaner will stop and after 15 minutes the light will flash slowly to indicate the cycle is completed.

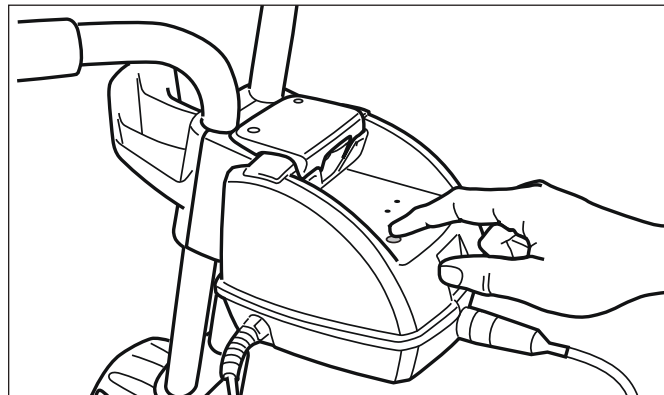


Figure 20. Turn Cleaner Off

6. The cleaner includes a safety feature that automatically stops the cleaner after about 20 seconds if it is powered on but not submerged in water. For pools equipped with a beach area, this safety feature allows the cleaner to reverse, and back into the pool when the impeller is out of the water.
7. Disconnect the control unit cable from the electrical outlet.
8. Disconnect the cable from the control unit.

NOTE The cleaner cable must always be disconnected before removing the cleaner from the pool.

9. Remove the cleaner from the pool using the handle (refer to Figures 21 and 22). Never lift the cleaner out of the pool by the floating cable.
10. Loosely coil the cable starting at the cleaner and go toward the connection point at control unit. Remove any twists along the way. Store the cable by wrapping it around the hooks located at the rear of the caddy.

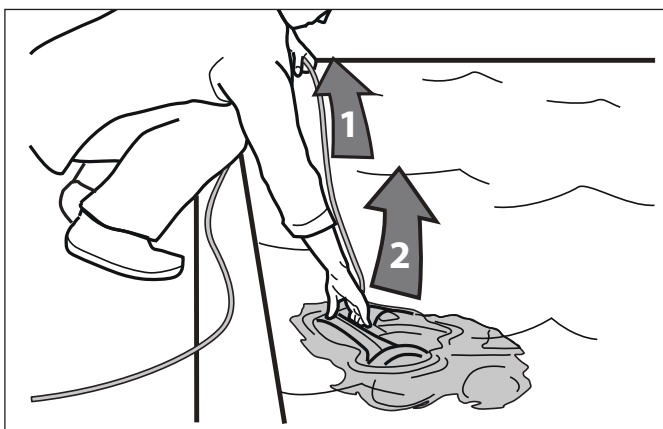


Figure 21. Remove Cleaner From Pool

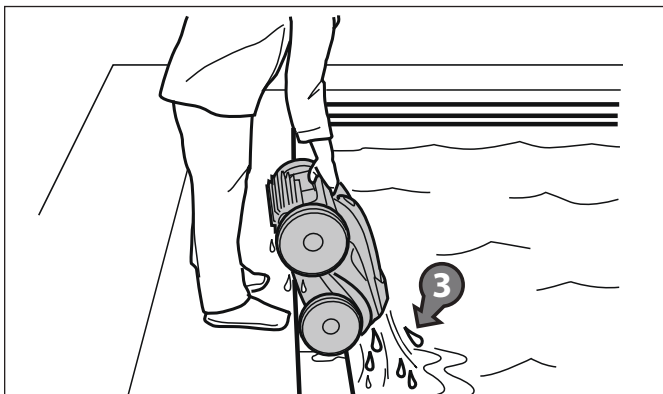


Figure 22. Keep Cleaner Vertical to Drain Water

IMPORTANT

- Use your cleaner as often as needed to keep your pool clean.
- Clean the filter canister after each cleaning cycle.
- Do not leave your cleaner in the pool on a permanent basis.
- At the end of each cycle, remove the cleaner from the pool. Start at the cleaner head and untangle any coils in the cable before storing the cleaner.

Section 5. Cleaning and Maintenance

⚠ WARNING

To avoid electric shock and other hazards which could result in permanent injury or death, disconnect (unplug) the cleaner from the power source before performing any cleaning and maintenance.

5.1 Cleaning the Filter Canister

The filter canister should be cleaned at the end of each cycle.

1. Ensure that the control unit cable has been disconnected from the electrical outlet or that the floating cable has been disconnected from the control unit.
2. Remove the cleaner from the water and let the remaining water drain by maintaining the cleaner in the vertical position.
3. Set the unit on its wheels.
4. To remove the filter from the cleaner, follow the steps 5 through 8 (Figures 23 through 26).
5. Push the cover lock (1) and lift the cover (2) until it is secured in the vertical position. Refer to Figure 23.

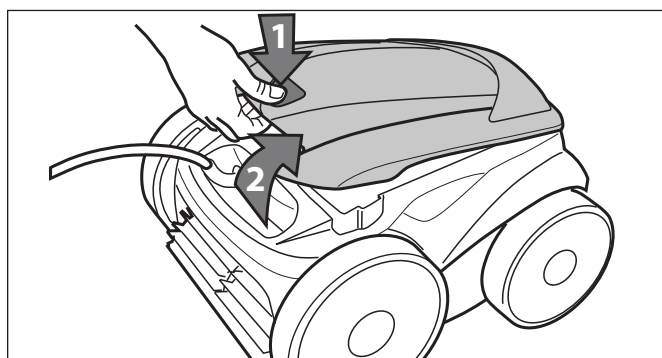


Figure 23. Lift Cleaner Cover

6. Remove the filter assembly from the body (3), as shown in Figure 24.

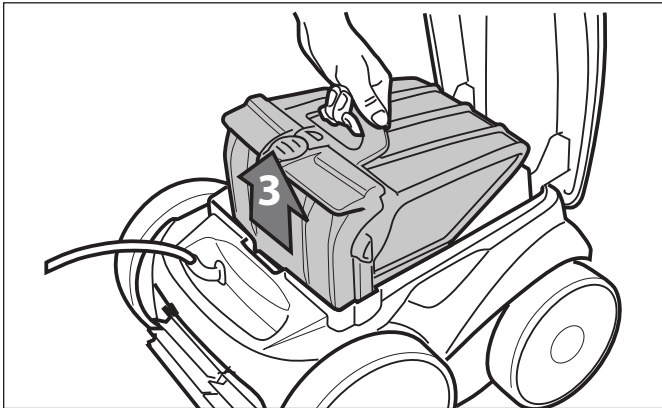


Figure 24. Remove Filter Assembly

7. Push the quick release button on the canister assembly (4) and pull open the filter assembly (5). Refer to Figure 25.

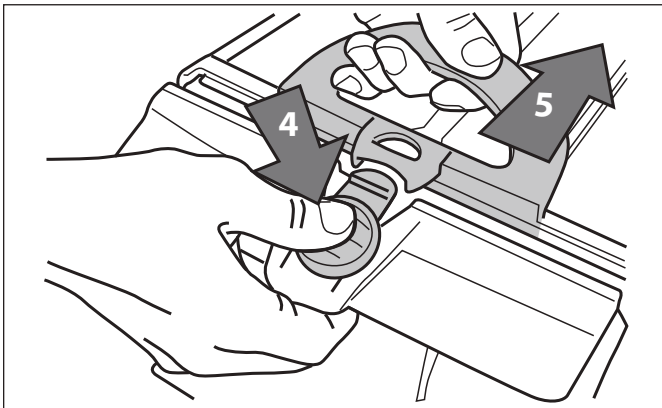


Figure 25. Open Filter Assembly

8. Separate the filter canister from the filter support (6), as shown in Figure 26.

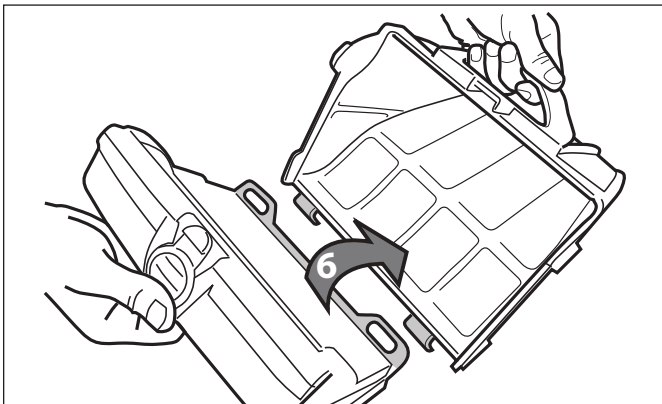


Figure 26. Remove Filter Canister

9. Empty all debris from the filter canister, then rinse the canister, the filter support, and the cleaner under water or using a hose. Refer to Figure 27.

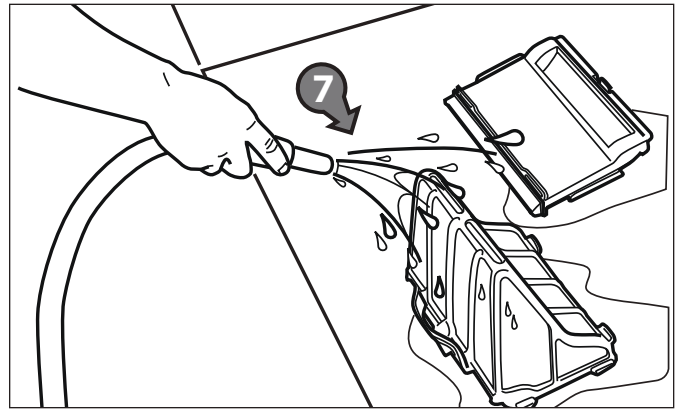


Figure 27. Wash Filter Canister

5.2 Cleaning and Storing the Cleaner

The cleaner must be cleaned regularly using slightly soapy clean water, do not use solvents such as trichloroethylene or its equivalent. Rinse the cleaner generously using clean water. Do not let your cleaner dry in direct sunlight near the pool. The cleaner must be stored on its own caddy, so that it dries quickly.

1. Place the rear wheels on the caddy side wedges as shown in Figure 28.



Figure 28. Position Cleaner on Caddy

2. Roll the unit into place onto the caddy. Refer to Figure 29.

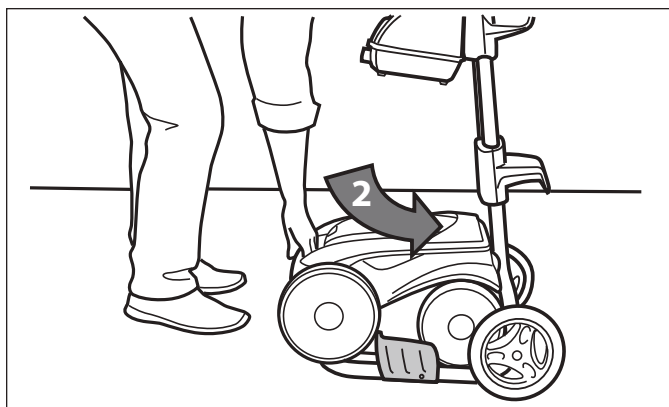


Figure 29. Roll Cleaner onto Place on the Caddy

5.3 Replacing the Brushes

The cleaner is fitted with PVC brushes. There are "wear" indicators on the brushes. To maintain cleaner performance at its best you need to replace the brushes as soon as one of the wear indicators has been reached (even if the blade wear is not even). It is recommended that you replace the brushes every two (2) years.

1. Lift the cleaner to a vertical position so that the handle is up. Refer to Figure 30.

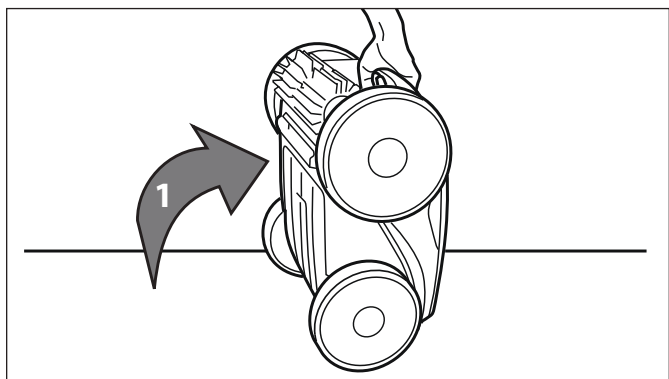


Figure 30. Cleaner in Upright Position

2. Separate the edges of the brush and undo the tabs as shown in Figure 31. Remove the worn brushes.

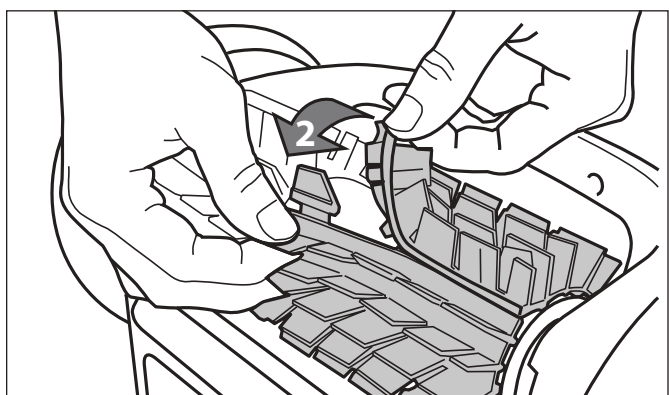


Figure 31. Undo the Tabs of the Brush

3. To install a new brush, position the new brush on the roller with the spikes facing downwards. Refer to Figure 32.

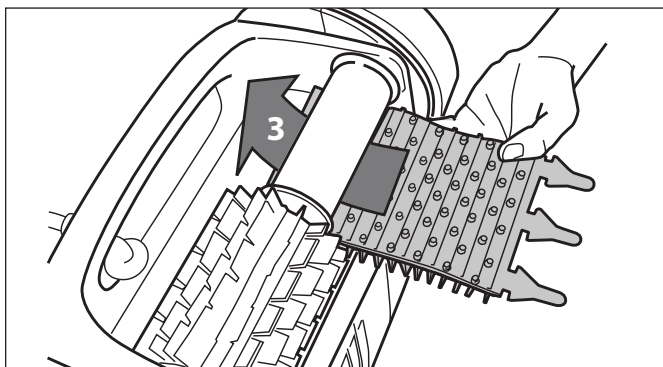


Figure 32. Install the New Brush

4. Thread each tab into the slot provided and gently feed it through until the heel comes out at the other side of the slot. Refer to Figure 33.

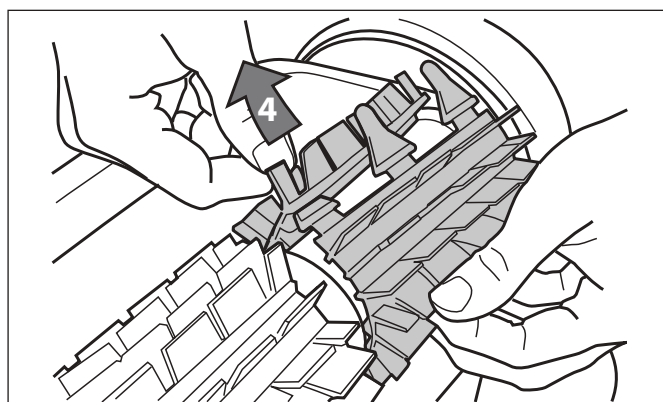


Figure 33. Pull Tabs Through Each Slot

5. Use a pair of scissors to cut the tabs 3/4 inch from the heel so that they are no higher than the spikes as shown in Figure 34.

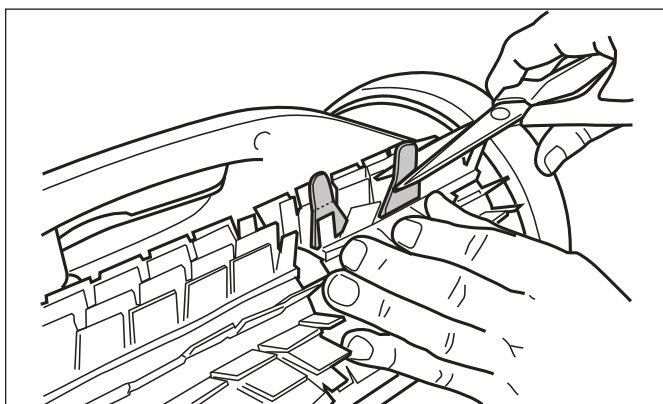


Figure 34. Cut Tabs

6. Repeat this procedure to install the second brush.

5.4 Replacing the Tires on the Cleaner

1. Pull on the inside of the old tire to remove the tire lip from the wheel. See Figure 35.

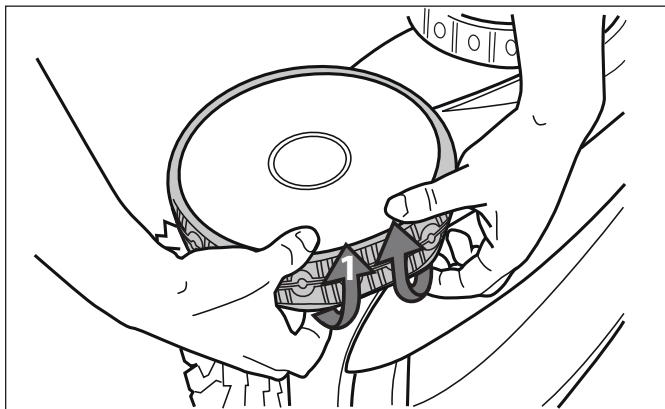


Figure 35. Pull the Old Tire Over the Wheel

2. Remove the old tire as shown in Figure 36.

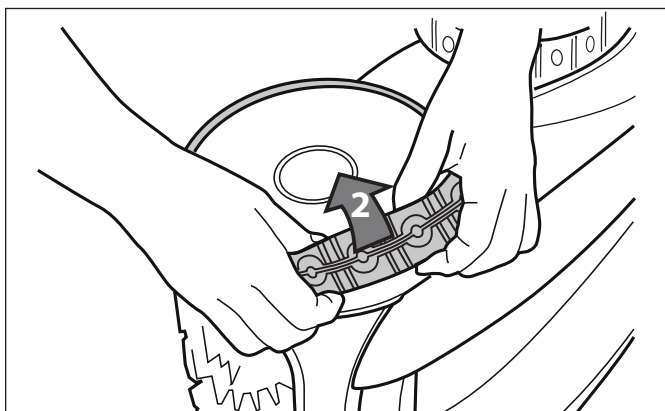


Figure 36. Remove the Old Tire

3. To replace the tire, position the tire on the wheel making sure to orient the tire so that the word **INSIDE** is toward the body of the cleaner. See Figure 37.

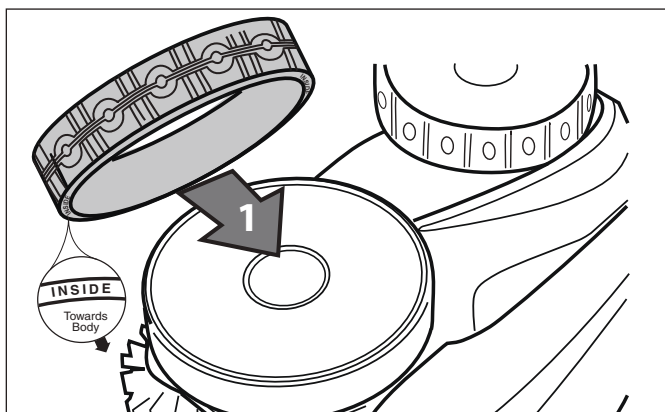


Figure 37. Tire Replacement Orientation

4. Push one side of the tire on to the wheel and fit the rib of the tire in the groove of the wheel as shown in Figure 38.

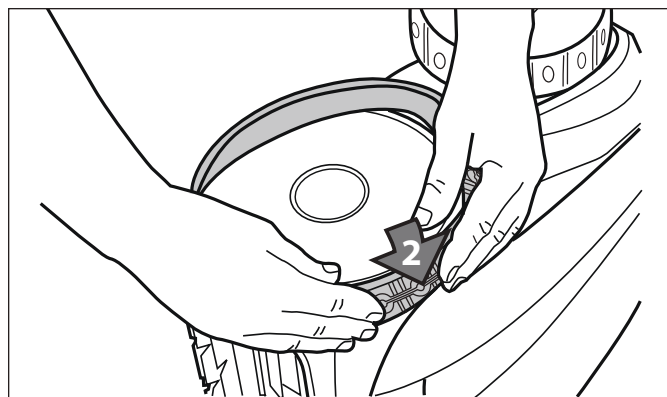


Figure 38. Start on One Side of the Tire

5. Work the tire onto the wheel and verify the rib of the tire is positioned properly within the groove of the wheel. Refer to Figure 39

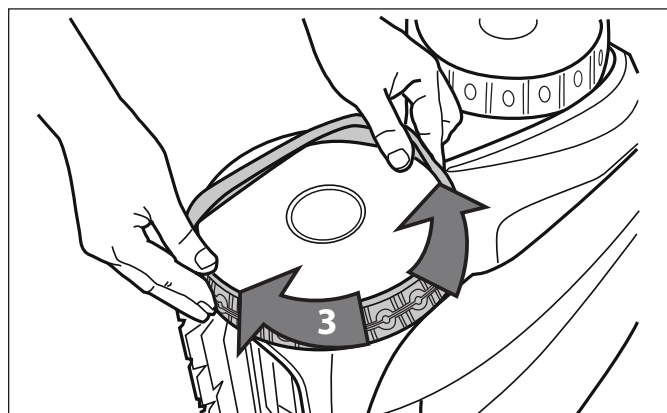


Figure 39. Work the Tire On Around the Wheel

6. Push and position the rib of the inner side of the tire in the groove of the wheel. Refer to Figure 40. If needed, turn the wheel gently to help with installation.

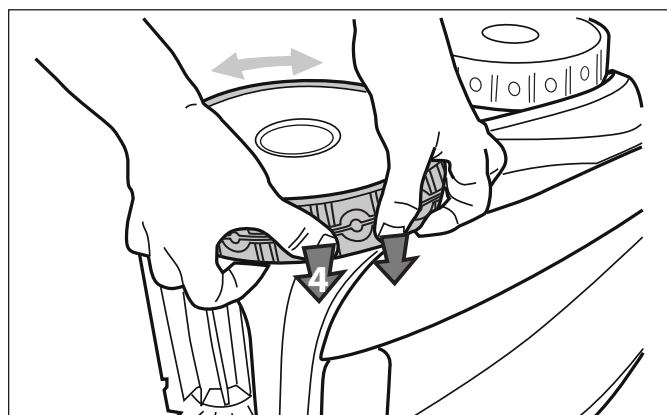


Figure 40. Push the Tire into Place on the Wheel

Section 6. Replacement Parts

The complete replacement parts list and exploded view is available on the Polaris website at www.polarispool.com.

Section 7. Troubleshooting

The following table lists some of the more common symptoms, causes and solutions encountered when using the cleaner. The unit employs flashing lights during Cycle I and II to indicate different issues on the control unit and on the cleaner. These indications are not necessarily major issues. To turn off the flashing light, press the power button. Then start a new cycle: If the flashing lights persist after completing troubleshooting, please contact your retailer. DO NOT open the control unit.

English

Symptom	Cause	Solution
The flashing indicator lights appear just after start (pressing the Power or Cycle button to start the cleaner) (< 20 seconds).	Ensure the floating cable is properly plugged into the control unit.	Unplug the floating cable from the control unit and plug it in again.
	Ensure the cleaner is well submerged and free of trapped air.	Submerge the cleaner following the procedure in Section 4.1, "Submerging the Cleaner".
	Cleaner needs to be reset and start new cycle.	Press the power button OFF and then Cycle I or II Program buttons to start new cycle.
	Propeller does not turn. The filter canister needs to be emptied.	Please contact your local service representative.
	Wheels do not turn.	Please contact your local service representative.
The flashing lights appear during the cycle.	Light flashes if the cleaner sucks air for 60 seconds or more. May be caused at beach entry if cleaner does not reverse correctly.	Resubmerge the cleaner following the procedure in Section 4.1, "Submerging the Cleaner".
The cleaner does not stay firmly on the pool bottom.	There is air in the appliance casing.	Submerge the cleaner following the procedure in Section 4.1, "Submerging the Cleaner".
The cleaner does not or no longer climbs the pool sides.	The filter canister is full or dirty.	Clean the filter canister following the procedure Section 5.1, "Cleaning the Filter Canister".
	Sides of pool are slippery or slimy. Although the water seems clear, microscopic algae, invisible to the human eye, are present in the pool. As a result the pool sides become slippery and prevent the cleaner from climbing. Check tires for wear and replace as necessary.	Do a shock chlorination treatment and slightly reduce the pH. DO NOT leave the cleaner in the pool during this treatment.
On startup the cleaner does not move.	Not supplied with electricity.	The outlet, the control unit is connected to, is not supplying electrical power. Check that the outlet to which the control unit is connected is receiving electricity.
	Unit is turned ON.	Check that you have started one (1) of the two (2) programs and check that the indicator for the selected program is lit. If the problem persists, contact your local service representative.
The Cycle I and II program indicators flash alternately.	Your cleaner has encountered a problem or an issue during its operation.	Disconnect the control unit and wait 20 seconds before reconnecting the control unit. Check that the floating cable is correctly connected to the control unit. Check that no debris impedes the rotation of the brushes and/or the propeller. Empty the filter canister and clean the filter. Start a new cleaning program. If the problem continues contact your local service representative.

The cleaner seems to be performing less efficiently.	The brushes have become smooth or the "wear" indicator shows.	Replace the brushes following the procedure in Section 5.3, "Replacing the Brushes".
	Filter canister is full or dirty.	Clean the filter canister following the procedure in Section 5.1, "Cleaning the Filter Canister".
	Floating cable is excessively coiled or kinked.	Make sure the floating cable is spread out over the pool. Ensure the cable is not too tightly wrapped or coiled when storing. If the problem persists, lay the cable straight in the sun to relax it and remove kinks.

NOTES

English

ATTENTION

Le défaut de se conformer aux avertissements suivants pourrait entraîner des dommages à l'équipement de la piscine ou causer des blessures.

- Ce produit est destiné pour une utilisation avec des piscines permanentes. Ne pas utiliser avec des piscines remisables. Une piscine installée en permanence est enfouie dans le sol ou en surface ou dans un bâtiment de telle sorte qu'elle ne peut pas être facilement démontée pour le rangement. Une piscine démontable est construite de sorte qu'elle est susceptible d'être facilement démontée pour le rangement et remontée dans son intégrité originale.
- Le nettoyeur Polaris doit être installé et utilisé tel que est spécifié.
- Mettre le nettoyeur Polaris hors tension avant de le retirer de l'eau et ne pas le faire fonctionner hors de l'eau.
- Ne pas retirer le nettoyeur Polaris de la piscine avant 15 minutes une fois le cycle de nettoyage terminé.
- Nettoyer le filtre cartouche du nettoyeur Polaris après chaque utilisation.
- Ne pas utiliser le nettoyeur dans la piscine si la température de l'eau est supérieure à 35 °C (95 °F) ou inférieure à 13 °C (55 °F).

ATTENTION

UTILISATION DU NETTOYEUR POLARIS DANS UNE PISCINE À SURFACE DE VINYLE

Certains motifs de toile de vinyle sont particulièrement sensibles à l'usure rapide de leur surface par des objets qui entrent en contact avec la surface de vinyle, y compris les brosses de nettoyage, les jouets de piscine, les flotteurs, les fontaines, les distributeurs de chlore et les nettoyeurs automatiques de piscine. Certains modèles de recouvrement en vinyle peuvent être sérieusement rayés ou éraflés lorsque leur surface est frottée avec une brosse de piscine. L'encre du modèle peut également s'effacer pendant le procédé d'installation ou quand elle entre en contact avec des objets dans la piscine.

Zodiac Pool Systems, inc. n'est pas responsable de l'élimination du dessin, des coupures, des éraflures ou des inscriptions sur les recouvrements en vinyle et cette garantie ne couvre pas ces situations.

CONSERVER CES DIRECTIVES