



MONTERINGSANVISNING FÖR HELINTEGRERADE DISKMASKINER

DISKMASKINER MED MAX INBYGGNADSHÖJD 850 MM - LÅG MODELL

F-SERIEN

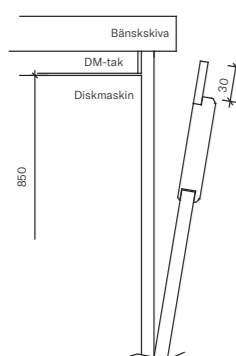


- Montera det medföljande DM-taket, inskjutet 10 mm jämfört med det intilliggande skåpets framkant.
- Montera den medföljande fuktavledande plåten under DM-taket enligt diskmaskinsleverantörens instruktioner.
- **Montera golvsydd under diskmaskinen.**
- Montera diskmaskinen enligt tillverkarens anvisningar.
- Obs! Montera först knapp/handtag. Montera därefter snickeriluckan på diskmaskinen.
- Montera sockeln på skåpen och låt den löpa förbi diskmaskinen. Vid behov kan sockeln behöva jackas ur för att snickeriluckan ska kunna öppnas.

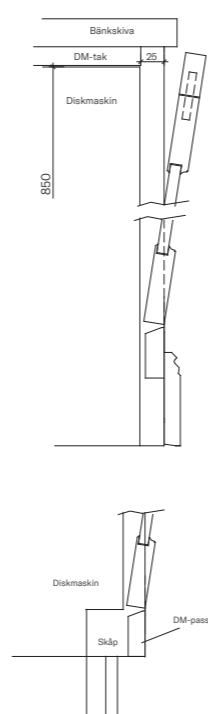

I-SERIEN

- Montera det medföljande DM-taket, inskjutet 25 mm jämfört med det intilliggande skåpets framkant.
- Montera den medföljande fuktavledande plåten under DM-taket enligt diskmaskinsleverantörens instruktioner.
- **Montera golvsydd under diskmaskinen.**
- Montera diskmaskinen enligt tillverkarens anvisningar.
- Demontera det nedre bistödet på luckan.
- Obs! Montera först knapp/handtag. Montera därefter snickeriluckan på diskmaskinen.
- Montera den fasade passbiten. Lämna ett glapp på cirka 3 mm.
- Montera den utanpåliggande sockeln på skåpen och låt den löpa förbi diskmaskinen.
- Vid indragen sockel monteras den lösa DM-passen i mötande skåp med monteringsvinklar. Vid behov kan sockeln behöva jackas ur för att snickeriluckan ska kunna öppnas.

H-SERIEN

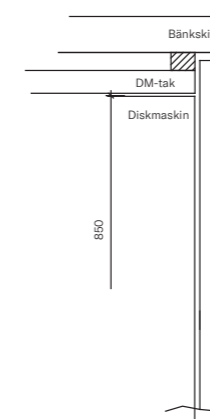


Gäller normalt endast 450 mm bred diskmaskin.


- Montera det medföljande DM-taket i liv med det intilliggande skåpets framkant. Bygg på en distans upp mot bänkskivan för att erhålla rätt bygghöjd. Detta görs för att snickeriluckan inte ska slå i diskmaskinen i nedfällt läge.
- Montera den medföljande fuktavledande plåten under DM-taket enligt diskmaskinsleverantörens instruktioner.
- **Montera golvsydd under diskmaskinen.**
- Montera diskmaskinen enligt tillverkarens anvisningar.
- Obs! Montera först knapp/handtag. Montera därefter snickeriluckan på diskmaskinen.
- Montera sockeln på skåpen och låt den löpa förbi diskmaskinen. Vid behov kan sockeln behöva jackas ur för att snickeriluckan ska kunna öppnas.

DISKMASKINER MED MAX INBYGGNADSHÖJD 870 MM - HÖG MODELL

F-SERIEN

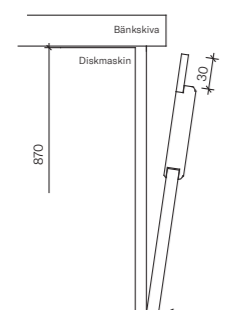


- Det bifogade DM-taket ska inte monteras vid denna höjd.
- Montera den medföljande fuktavledande plåten under DM-taket enligt diskmaskinsleverantörens instruktioner.
- **Montera golvsydd under diskmaskinen.**
- Montera diskmaskinen enligt tillverkarens anvisningar.
- Obs! Montera först knapp/handtag. Montera därefter snickeriluckan på diskmaskinen.
- Montera sockeln på skåpen och låt den löpa förbi diskmaskinen. Vid behov kan sockeln behöva jackas ur för att snickeriluckan ska kunna öppnas.

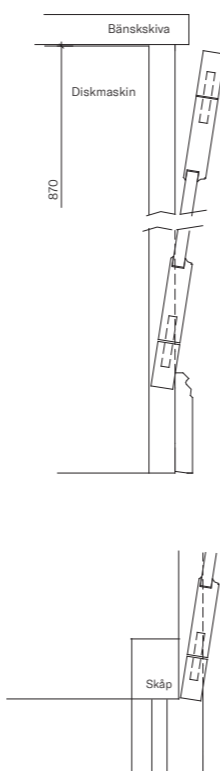

I-SERIEN

- Det bifogade DM-taket ska inte monteras vid denna höjd.
- Montera den medföljande fuktavledande plåten under DM-taket enligt diskmaskinsleverantörens instruktioner.
- **Montera golvsydd under diskmaskinen.**
- Montera diskmaskinen enligt tillverkarens anvisningar.
- Obs! Montera först knapp/handtag. Montera därefter snickeriluckan på diskmaskinen.
- Montera den utanpåliggande sockeln på skåpen och låt den löpa förbi diskmaskinen. Vid indragen sockel kan sockeln vid behov behöva jackas ur för att snickeriluckan ska kunna öppnas.

H-SERIEN

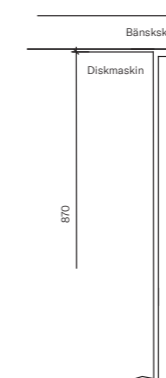


- Det bifogade DM-taket ska inte monteras vid denna höjd.
- Montera den medföljande fuktavledande plåten under DM-taket enligt diskmaskinsleverantörens instruktioner.
- **Montera golvsydd under diskmaskinen.**
- Montera diskmaskinen enligt tillverkarens anvisningar.
- Obs! Montera först knapp/handtag. Montera därefter snickeriluckan på diskmaskinen.
- Montera sockeln på skåpen och låt den löpa förbi diskmaskinen. Vid behov kan sockeln behöva jackas ur för att snickeriluckan ska kunna öppnas.


ASSEMBLY INSTRUCTIONS FOR FULLY INTEGRATED DISHWASHERS

DISHWASHERS WITH MAX INSTALLATION HEIGHT 850 MM – LOW MODEL

F-SERIES

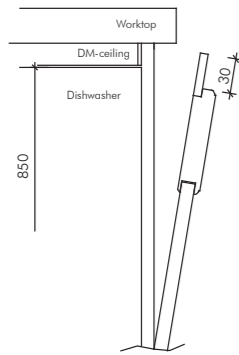


- Install the supplied DW top panel, set back 10 mm from the front edge of the adjacent unit.
- Install the supplied moisture deflector plate under the DW top panel according to the dishwasher supplier's instructions.
- **Install floor protection under the dishwasher.**
- Install the dishwasher according to the manufacturer's instructions.
- Note: First install the knob/handle. Then mount the door front onto the dishwasher.
- Install the plinth on the units and let it run past the dishwasher. If necessary, the plinth may need to be notched to allow the cabinet door front to open.

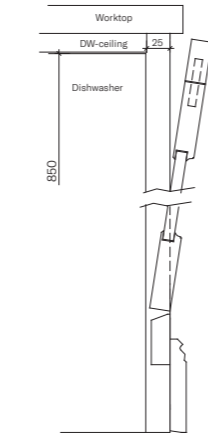


I-SERIES

- Install the supplied DW top panel, set back 25 mm from the front edge of the adjacent unit.
- Install the supplied moisture deflector plate under the DW top panel according to the dishwasher supplier's instructions.
- **Install floor protection under the dishwasher.**
- Install the dishwasher according to the manufacturer's instructions.
- Remove the lower support bracket from the door.
- Note: First install the knob/handle. Then mount the door front onto the dishwasher.
- Install the bevelled filler piece. Leave a gap of approximately 3 mm.
- Install the external plinth (toe kick) on the units and let it run past the dishwasher.
- For a recessed plinth, install the loose DW filler piece in the adjacent unit using mounting brackets. If necessary, the plinth may need to be notched to allow the cabinet door front to open.

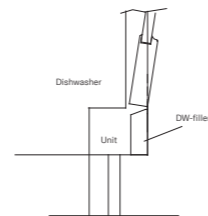

H-SERIES


Normally applies only to 450 mm wide dishwashers.

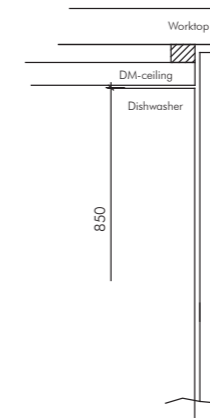


- Install the supplied DW top panel flush with the front edge of the adjacent unit. Build up a spacer towards the worktop to achieve the correct installation height. This is done to prevent the cabinet door front from hitting the dishwasher when opened downward.
- Install the supplied moisture deflector plate under the DW top panel according to the dishwasher supplier's instructions.
- **Install floor protection under the dishwasher.**
- Install the dishwasher according to the manufacturer's instructions.
- Note: First install the knob/handle. Then mount the door front onto the dishwasher.
- Install the external plinth on the units and let it run past the dishwasher. For a recessed plinth, the plinth may need to be notched if necessary to allow the cabinet door front to open.

DISHWASHERS WITH MAX INSTALLATION HEIGHT 870 MM – TALL MODEL

F-SERIES

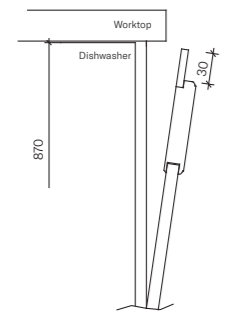


- The supplied DW top panel must not be installed at this height.
- Install the supplied moisture deflector plate under the DW top panel according to the dishwasher supplier's instructions.
- **Install floor protection under the dishwasher.**
- Install the dishwasher according to the manufacturer's instructions.
- Note: First install the knob/handle. Then mount the door front onto the dish-washer.
- Install the plinth on the units and let it run past the dishwasher. If necessary, the plinth may need to be notched to allow the cabinet door front to open.

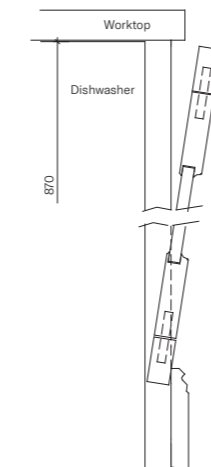


I-SERIES

- The supplied DW top panel must not be installed at this height.
- Install the supplied moisture deflector plate under the DW top panel according to the dishwasher supplier's instructions.
- **Install floor protection under the dishwasher.**
- Install the dishwasher according to the manufacturer's instructions.
- Note: First install the knob/handle. Then mount the door front onto the dishwasher.
- Install the external plinth on the units and let it run past the dishwasher. For a recessed plinth, the plinth may need to be notched if necessary to allow the cabinet door front to open.

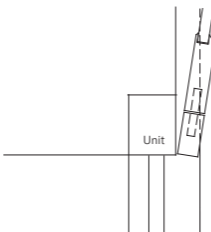

H-SERIES

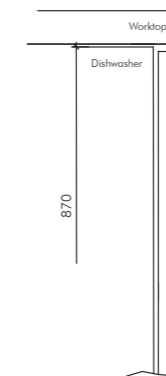

- The supplied DW top panel must not be installed at this height.
- Install the supplied moisture deflector plate under the DW top panel according to the dishwasher supplier's instructions.
- **Install floor protection under the dishwasher.**
- Install the dishwasher according to the manufacturer's instructions.
- Note: First install the knob/handle. Then mount the door front onto the dishwasher.
- Install the external plinth on the units and let it run past the dishwasher. For a recessed plinth, the plinth may need to be notched if necessary to allow the cabinet door front to open.