


Assembly & Installation Instructions

SYSTEM 1224

12.6 Cutting Guide for 1224 uprights (not extending)

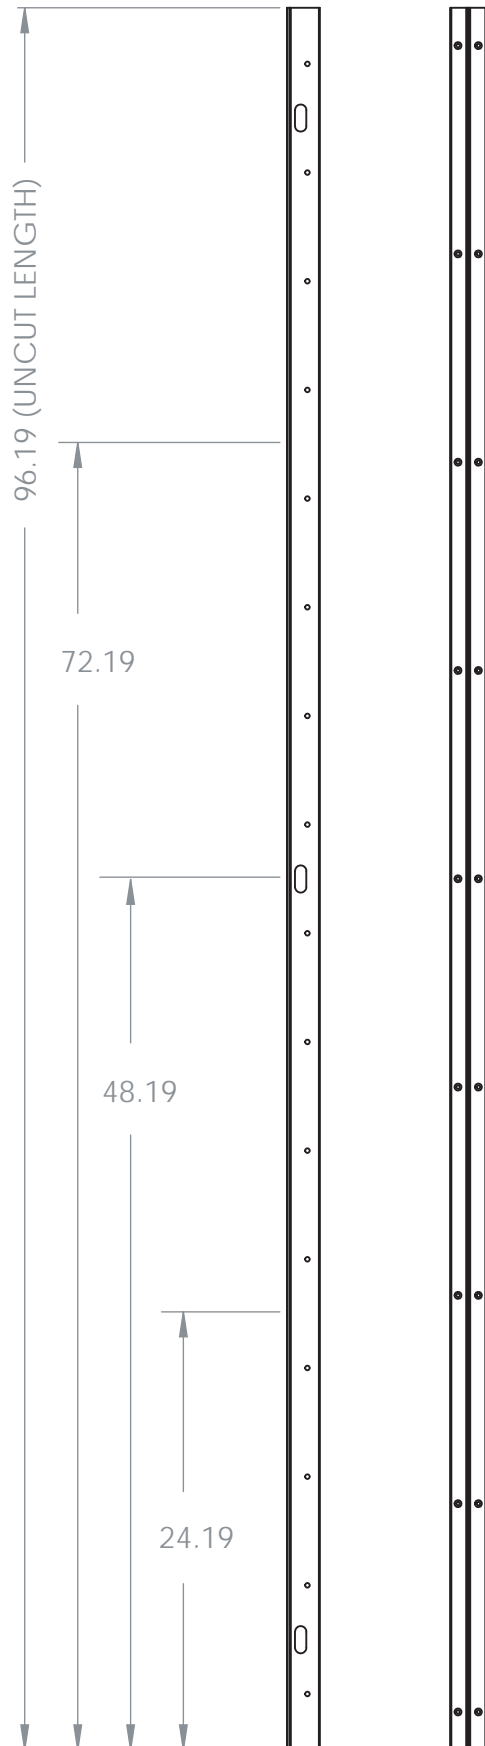

Measure in increments of 12" + .19 from end of upright. (see illustration to left for example in 2' increments). Make cut.