

Running Board Installation Instructions 81050 & 81051(1" Drop)

Chevy Colorado 2015-Current
GMC Canyon 2015-Current

Read all instructions before beginning installation.

INSTALLATION PACKAGE

Running Board	2
Brackets (Driver Front/ Passenger Rear)	4
Brackets (Passenger Front/ Driver Rear)	4
Bolt Pack (Boards & Brackets)	2

Necessary Tools

Combination wrench or sockets with 1/2"
Safety glasses


Bolt Pack Brackets

5/16" x 3/4" Bolts	16
1/4" USS Flat Washers	16
5/16" U-Nuts	16

Bolt Pack Running Boards

5/16" x 3/4" Hex Bolt	16
5/16" Serrated Flange Nut	16

Step 1: Reference picture of bracket positions for later steps (Fig 1&2)

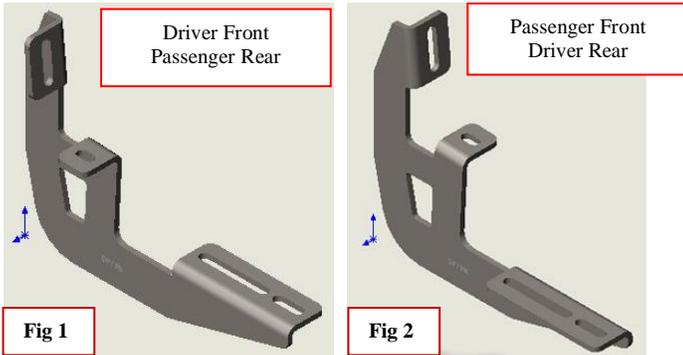


Step 2: There are 4 locations each side of the vehicle as shown (Fig 3). Please remove all black plugs at each location. We will start on the driver side.



Step 3: Install U-Nuts into the hole as shown. (Fig 4 & 5)



Step 4: Please use (Fig 1 & 2) for reference. Starting on the driver side front location use bracket shown (Driver Front/Passenger Rear). This bracket will be used on the first 3 bracket locations on the driver side. The very rear bracket towards the bed will use the bracket shown (Passenger Front/Driver Rear). Install using 5/16" bolts with washers. (Fig 6)

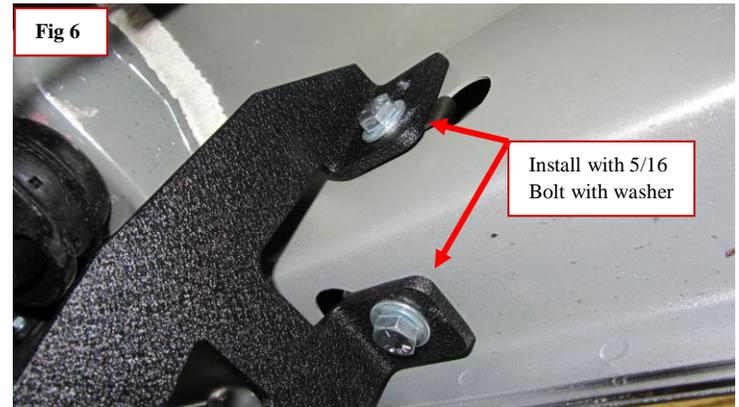

Step 5: Now with everything installed. Take a look at the board on your vehicle. There is a lot of adjustment in the kit to get the board where you like them. Adjust boards in and out and side to side with the slots on the bracket where board mounts. Adjust the front and rear brackets first and finish with the middle. Once the boards are in place to your liking, tighten all fasteners on the boards and brackets. This will complete your installation. Enjoy!

