



4" OVAL BAR

Components:



Driver Side
Step Bar
Qty 1



Passenger Side
Step Bar
Qty 1



Driver Side
Bracket
Qty 3



Passenger Side
Bracket
Qty 3



Rubber
Gasket
Qty 6

Hardware:



M10 x 30mm Button
Head Bolt
Qty 12



M10 Flat Washers
Qty 12



M10 Lock Washers
Qty 12



Plastic Washers
Qty 18



M8 Hex Head Nut
Qty 18





M8 Flat Washers
Qty 18



M8 Lock Washers
Qty 18

1. Remove all contents from the package and check stainless steel tubes for any damage. Also, verify that all components and hardware listed above are included before you begin installation.

Begin on driver side of vehicle.

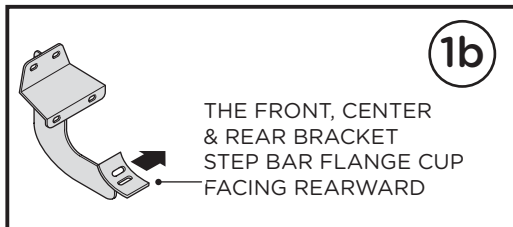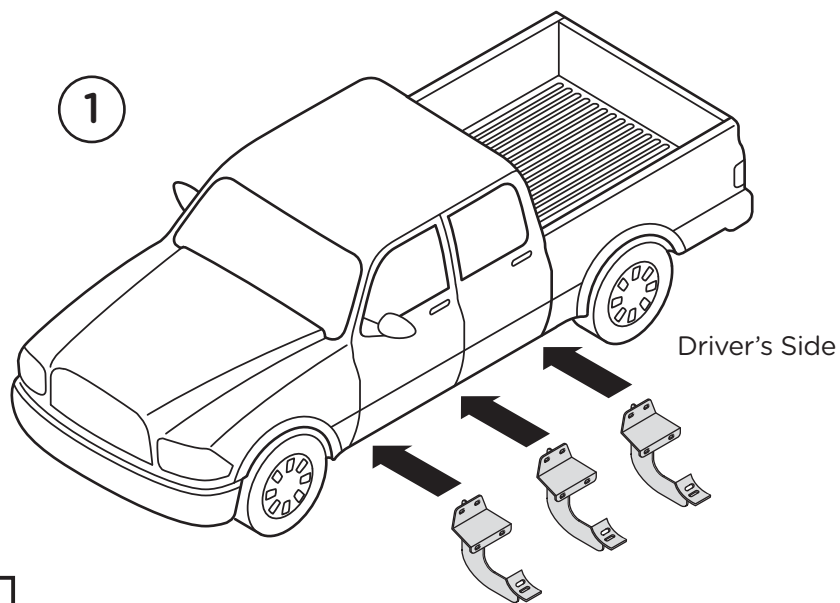


3

PLASTIC
WASHER

2. Existing mounting studs are located on the interior wall of the rocker panel. These mounting studs will be used for the following instruction.

3. ***IMPORTANT*** Place plastic washers over each mounting stud to prevent corrosion caused by aluminum to steel contact.

4. On the driver side of the vehicle, align the Front, Center and Rear brackets as shown.

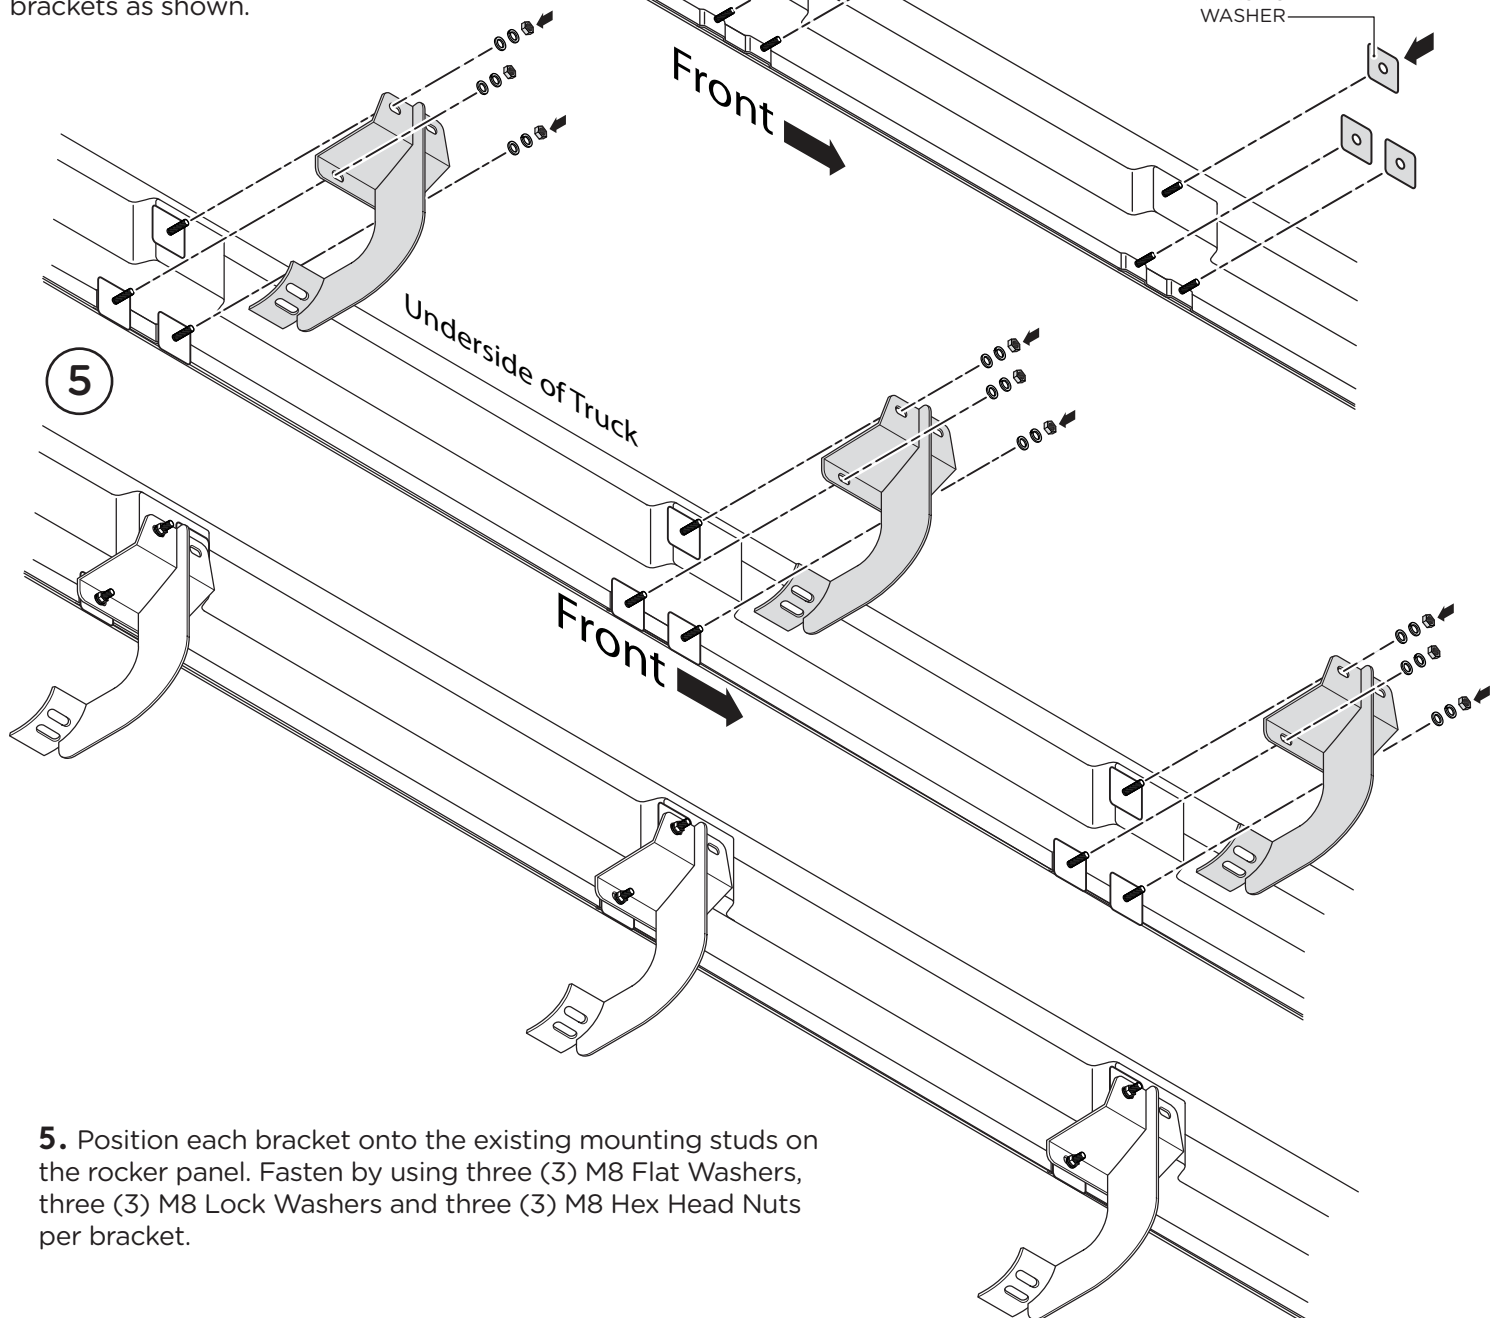


5. Position each bracket onto the existing mounting studs on the rocker panel. Fasten by using three (3) M8 Flat Washers, three (3) M8 Lock Washers and three (3) M8 Hex Head Nuts per bracket.

6. Place the Step Bar and Rubber Gaskets onto the Brackets. Each Step Bar is marked Driver and Passenger.

7. Install the Step Bar onto each Bracket using two (2) M10 X 30MM Button Head Bolts, two (2) M10 Lock Washers and two (2) M10 Flat Washers.

Tighten until the split lock washer is flat against bracket and snug. DO NOT over tighten and strip the threaded insert in the tube.

Repeat these steps for passenger side installation. When all hardware is in place, everything must be tightened. See Page 1 for Torque Specifications.

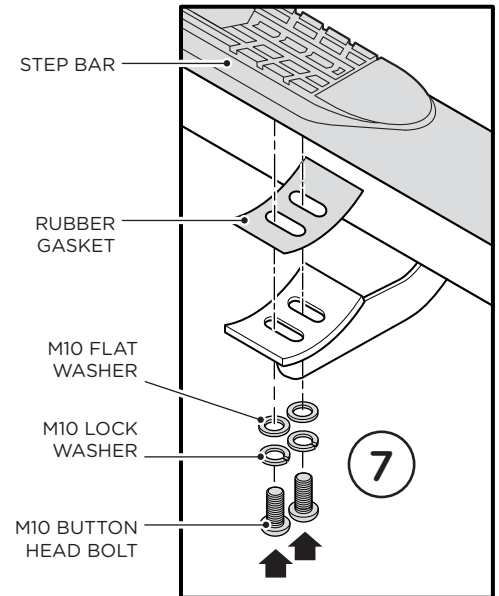

6

