


step 1

Follow these instructions to build and attach your cabinet.





1000mm **tall blind corner pantry**

Things you need to know








- All cabinets will need to be attached to the wall using a minimum of 8 gauge 65mm screws if you have a stud wall. If your wall is concrete, brick or another surface ask your hardware specialist for advice on the right fixing method.
- Make sure you leave plumbing and electrical work to qualified trades people. Never try this yourself.
- For extra strength use exterior woodworking glue when assembling cabinets.
- To help identify panels, counter sunk holes always face outwards.
- All holes that aren't already pre-drilled should be drilled prior to screwing using a No 12 countersinking drill bit.
- Make sure you always use safety gear like a mask, ear muffs and glasses when using tools.
- If you have any questions, contact us on:
Australia: **1800 666 078** Monday to Friday between 8:00am and 6:00pm AEST, New Zealand: **0800 522 663** Monday to Friday between 8:00am and 5:00pm NZST or email: **info@kaboodlegroup.com.au**.

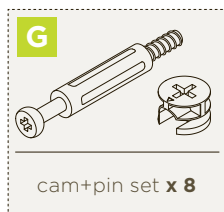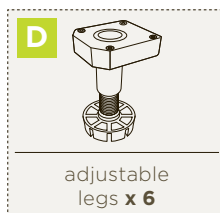



Hardware included



Tools you will need

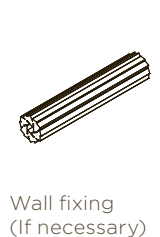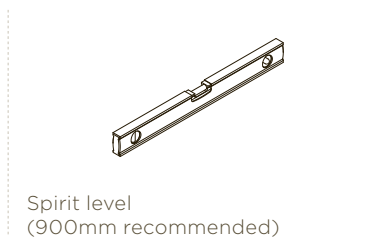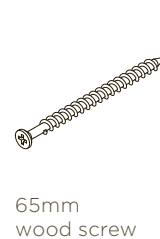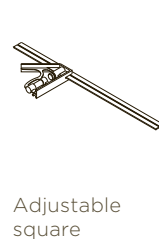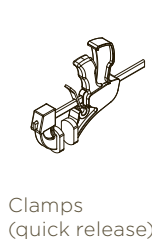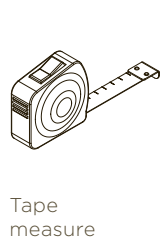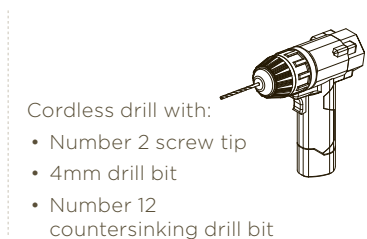To put your kaboodle kitchen cabinets together you will need the following tools.




A 	B 	C 	D 
50mm wood screws	28mm wood screws	shelf support	adjustable legs


1000mm tall blind corner pantry

assembling cabinet


1.

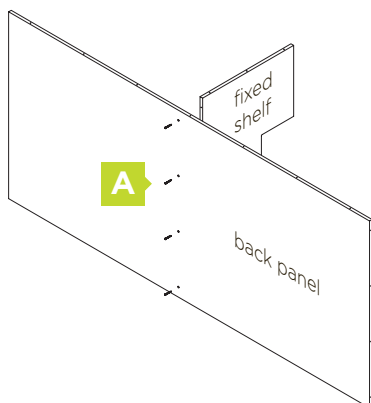


2.

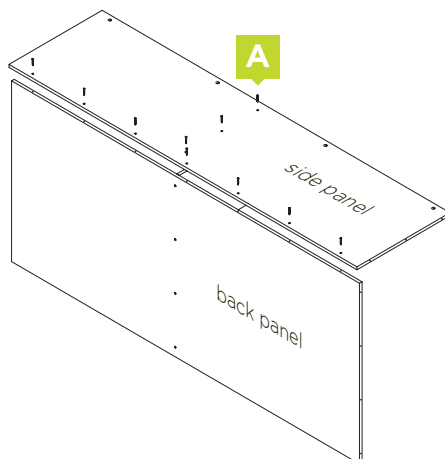


3.

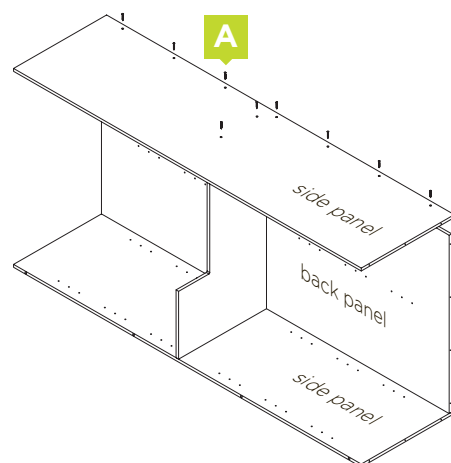

4.

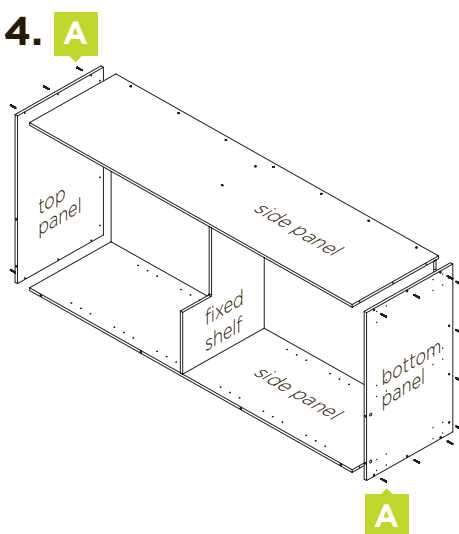


5.

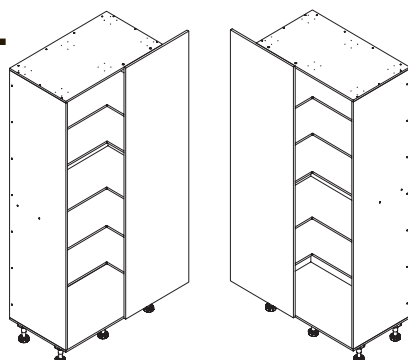


You can change the orientation of the Pantry for either left or right opening via the placement of the adjustable feet. Consider the layout of your kitchen before installing the pantry.

6.

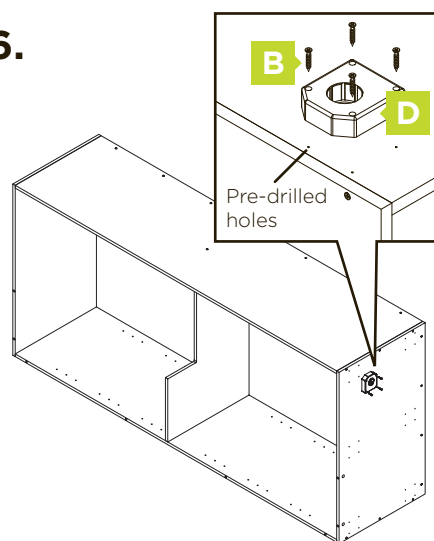


7.

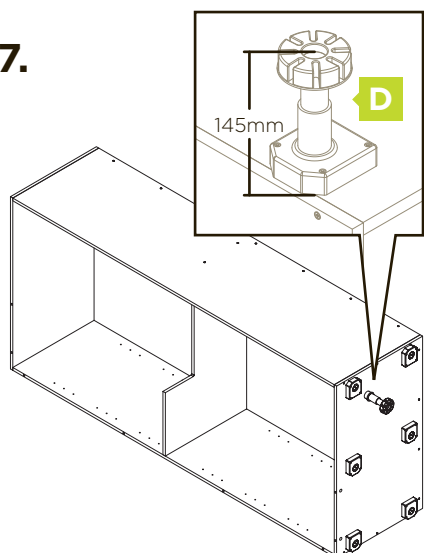


Set height of the adjustable legs to 145mm.

Installing adjustable shelves

1.

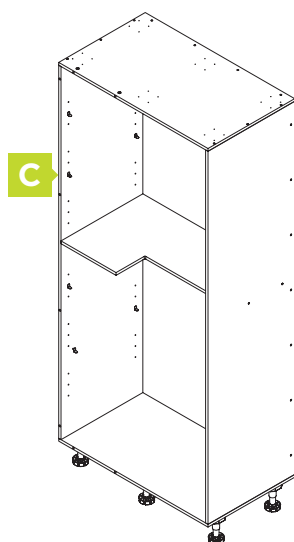

2.

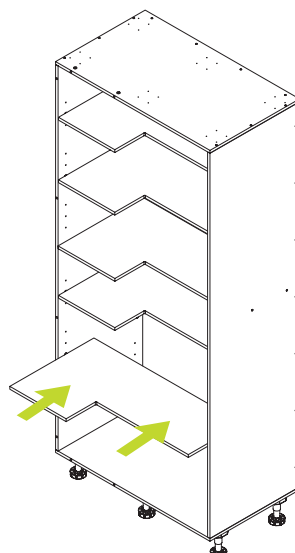




1000mm **tall blind corner pantry**


joining cabinets

1.

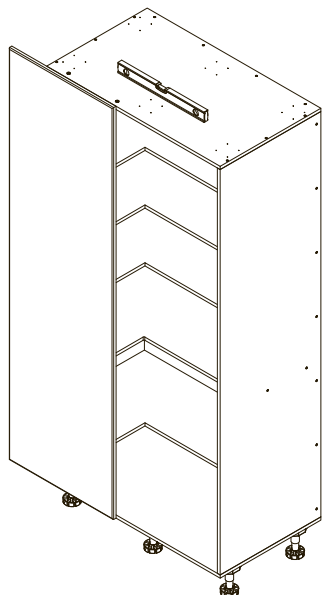


Instructions to install the blind corner pantry panel are provided with the panel.

2.

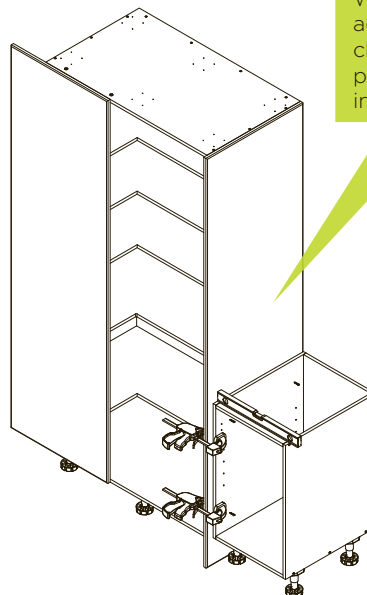

Check that all cabinets are level.

3.

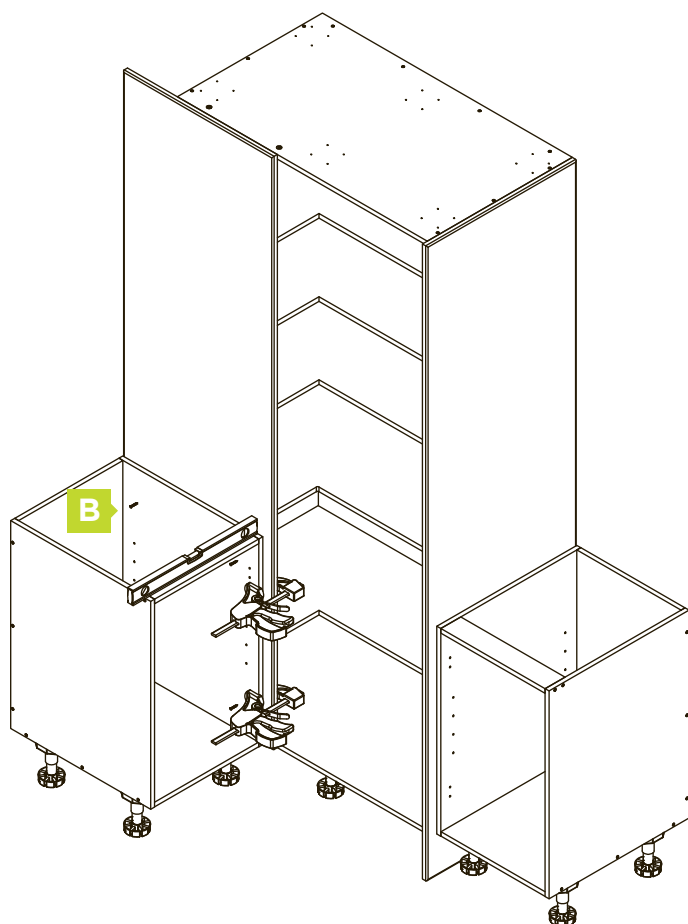

Clamp cabinets, pre-drill and screw cabinets together.




28mm
wood screws

1000mm **tall blind corner pantry**

fixing cabinets to wall

1.

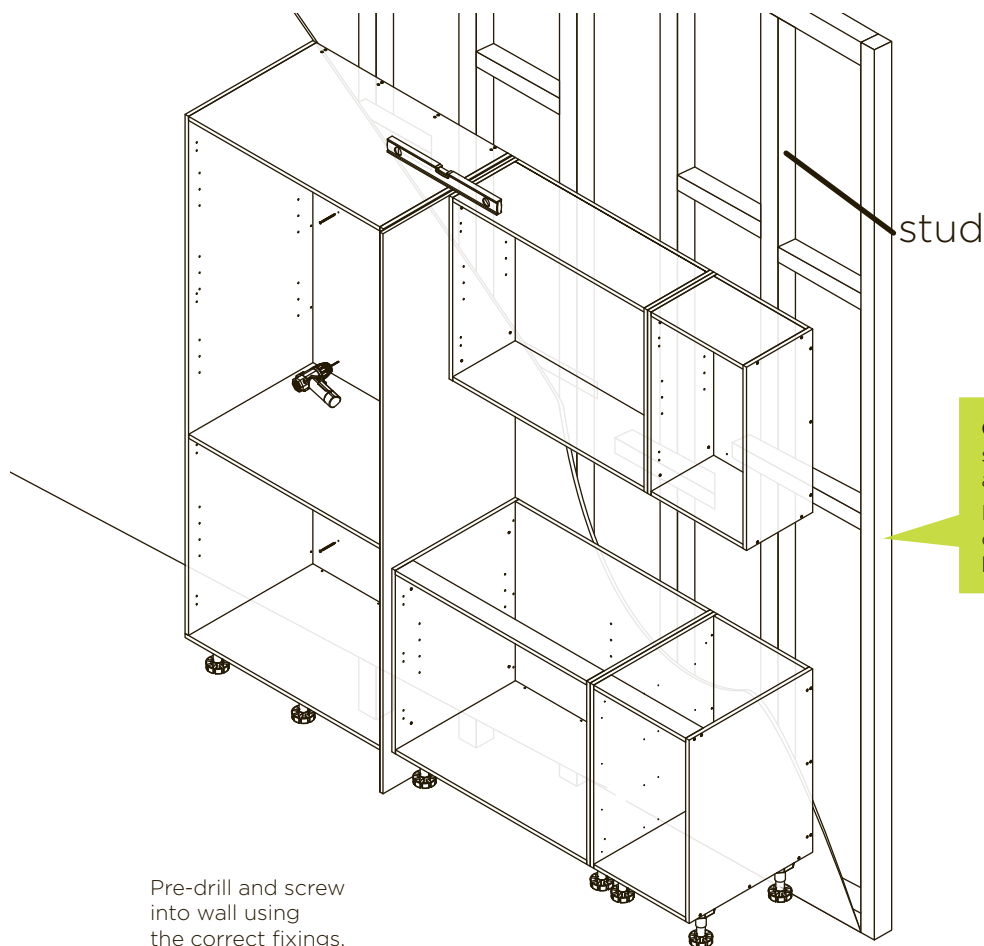

Pre-drill and screw
into wall using
the correct fixings.

Caution: Please ensure all cabinets are screwed into your timber stud wall using a minimum of 65mm timber screws. If attaching to concrete, brick, steel or any other substrates seek advice from your hardware specialist.

Caring for your kaboodle cabinets

Looking after your cabinets is really easy and with the right care and maintenance they will last you for many years. Just follow these simple steps and if you need any more information you can contact us: Australia: **1800 666 078** Monday to Friday between 8:00am and 6:00pm AEST. New Zealand: **0800 522 663** Monday to Friday between 8:00am and 5:00pm NZST or email: info@kaboodlegroup.com.au.

Clean your cabinets with an all purpose, non-abrasive cleaner with a damp sponge or cloth and make sure you never use saturated cloth, harsh chemicals or thinner based cleaners as these will damage the surface of the melamine. Likewise, never use products that will scratch the surface like steel wool or wire brushes and avoid sharp objects that will scratch, cut or gouge the melamine surface. If this happens the internal board will be exposed and may swell. Kaboodle cabinets are water resistant but not water proof so any spills should be attended to immediately.

Handy hint: if the melamine surface of your cabinet is damaged you can try and cover it with a furniture repair crayon but just remember that this won't seal the board back to its original finish.

We offer a dedicated customer service line for advice or any questions you may have on kaboodle products.

Call customer service on:
Australia: **1800 666 078** Monday to Friday
between 8:00am and 6:00pm AEST

New Zealand: **0800 522 663** Monday to Friday
between 8:00am and 5:00pm NZST or email:
info@kaboodlegroup.com.au

step 1



Your Kaboodle
cabinet is now
complete.

step 4

Finish off your
Kaboodle Kitchen
by installing your
benchtop.



step 2

Next grab your
parts and
accessories
instructions.

step 3

Then follow the
instructions to fit
your doors and
panels.