


step 3

Follow these instructions to build and attach your cabinet.



blind corner base panel

Things you need to know

- Make sure not to drill screws too far into the panels as they can protrude out the other side.
- Make sure you leave plumbing and electrical work to qualified trades people. Never try this yourself.
- Always drill screws from inside the cabinet into your panels and use stick-on screw caps to hide unsightly screw holes.
- Thermoformed panels have a rounded edge, make sure this always faces the outside of a cabinet.
- **Gloss vinyl doors & panels are protected with a top clear wrap that needs to be removed. Depending on application of the panel, this may need to be removed prior to installation.**
- Whenever cutting or drilling panels, always protect the area being cut with masking tape and cut with the good side facing down.
- All holes that aren't already pre-drilled should be drilled prior to screwing using a No 12 countersinking drill bit.
- Make sure you always use safety gear like a mask, ear muffs and glasses when using tools.
- If you have any questions, contact us on:
Australia: **1800 666 078** Monday to Friday between 8:00am and 6:00pm AEST, New Zealand: **0800 522 663** Monday to Friday between 8:00am and 5:00pm NZST or email: info@kaboodlegroup.com.au.

Hardware needed





Tools you will need

To put your kaboodle kitchen cabinets together you will need the following tools.

Cordless drill with:


- Number 2 screw tip
- 4mm drill bit
- Number 12 countersinking drill bit

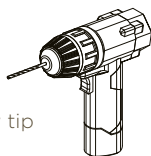

Tape measure




Pencil




Clamps (quick release)





Safety gear



Adjustable square

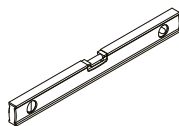


Spirit level (900mm recommended)

A 	B 
14mm screws	90° angle bracket


blind corner base panel

cabinet configurations

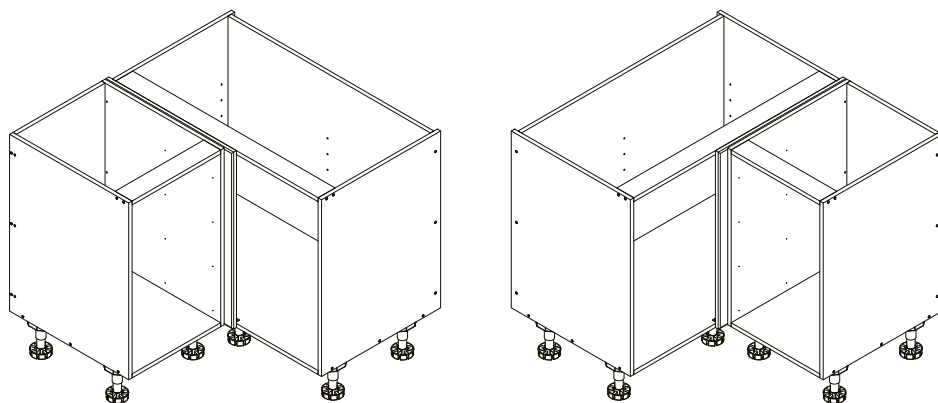



You can change the orientation of the cabinet for either Left or Right opening via the placement of the blind corner panel on to the cabinet. Consider the layout of your kitchen before installing the panel.

attaching panel

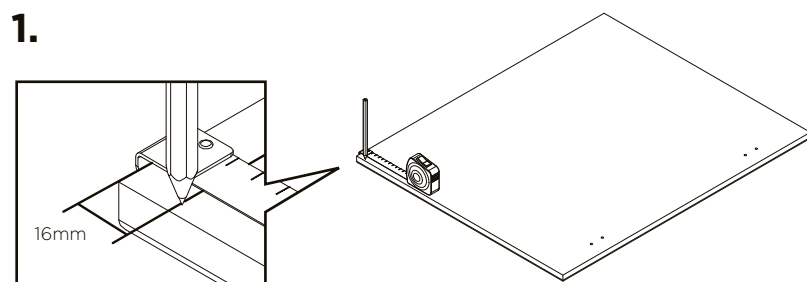

Mark a line 16mm all the way down the panel in from the side of the panel on the opposite end to the lugs.

Note: This measurement is to suit a 400mm door. It can be adapted to suit a larger door if necessary.

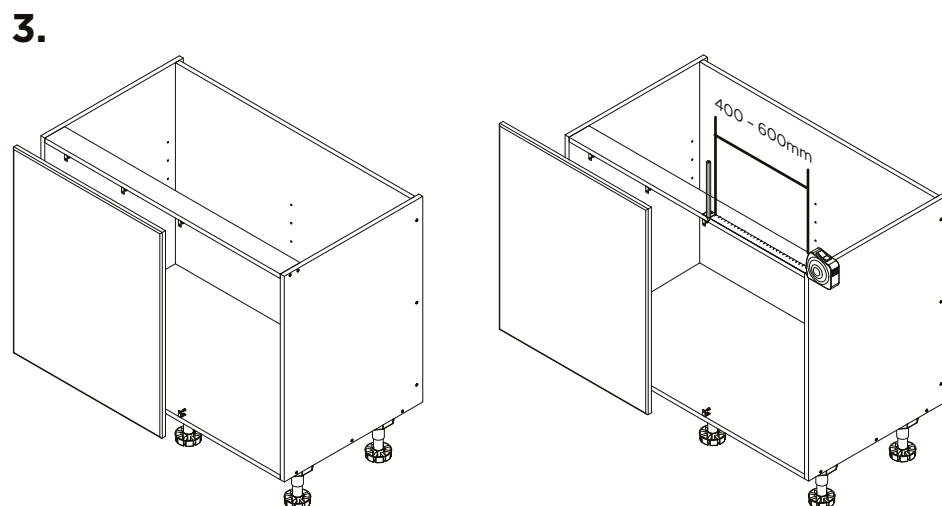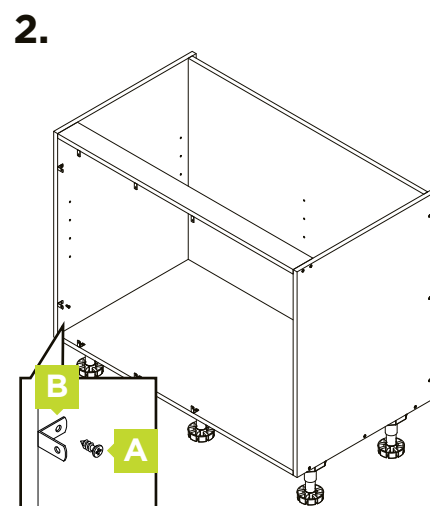


Attach the panel to cabinet making sure the marked line is even with the side of the cabinet.

Note: To fit a larger door simply install the blind corner base panel further along the cabinet allowing the appropriate space to suit.

If you intend to install any pullout wireware products, please ensure you choose the correct door size and fit the blind corner base panel to match.

important information

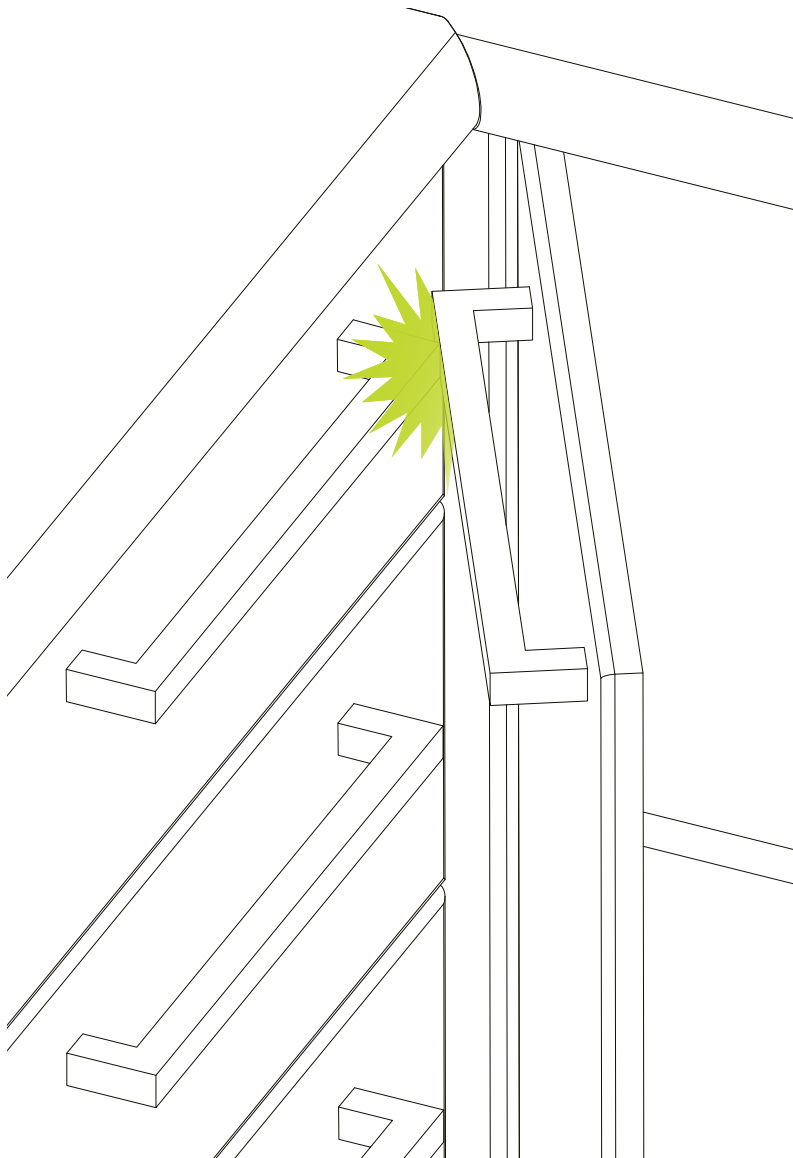

NOTE: Some handles in certain configurations can collide with each other when doors are open, potentially causing the blind corner cabinet doors to not open wide enough to access the pantry.

Test your chosen handles before installing and if you find that this is the case you will need to either adjust the positions of the handles, choose different handles, or use push to open mechanisms without any handles.

Alternately you can move your entire blind corner cabinet away from the wall 50mm* so that the blind corner panel sits out from the adjoining cabinet by 90mm rather than 40, leaving room for the handles to open. When the benchtop is installed you will not be able to see the gap between the cabinet and wall.

Caring for your kaboodle doors and panels

Looking after your doors and panels is really easy and with the right care and maintenance they will last you for many years. Just follow these simple steps and if you need any more information you can contact us: Australia: **1800 666 078** Monday to Friday between 8:00am and 6:00pm AEST. New Zealand: **0800 522 663** Monday to Friday between 8:00am and 5:00pm NZST or email: info@kaboodlegroup.com.au.

All doors should be cleaned with warm soapy water or an all purpose, non-abrasive cleaner with a damp cloth and make sure you never use a saturated cloth, harsh chemicals or thinner based cleaners. Try to avoid using sponges on your doors and these can leave residue streaks on the surface. Never use steel wool, scourers, dry cloths or rough products on any doors as this will scratch the surface.

Handy hint: Most stains will wipe off if attended to straight away, but for more stubborn stains you can use an undiluted, commercial non-abrasive cleaner and soak for a few seconds and then clean with warm soapy water. Just make sure you test the cleaning product on an unexposed section of the surface first to ensure it won't damage the finish. If a door or panel is gouged, chipped or scratched, you can try and use a matching coloured texta to rub into the area...or just buy a new door!

We offer a dedicated customer service line for advice or any questions you may have on kaboodle products.

Call customer service on:
Australia: **1800 666 078** Monday to Friday between 8.00am and 6.00pm AEST

New Zealand: **0800 522 663** Monday to Friday between 8.00am and 5.00pm NZST or email: info@kaboodlegroup.com.au

step 4 Finish off your Kaboodle Kitchen by installing your benchtop.	step 1 ✓ Your Kaboodle cabinet is now complete.	step 2 ✓ You've finished adding your parts and accessories.
step 3 ✓ You've added your doors and panels.	