

## step 1

Follow these instructions to build and attach your cabinet.



**kaboodle**  
KITCHEN

## cut to measure **cabinets**

### Things you need to know



- All cabinets will need to be attached to the wall using a minimum of 8 gauge 65mm screws if you have a stud wall. If your wall is concrete, brick or another surface ask your hardware specialist for advice on the right fixing method.
- Make sure you leave plumbing and electrical work to qualified trades people. Never try this yourself.
- For extra strength use exterior woodworking glue when assembling cabinets.
- To identify panels, counter sunk holes always face outwards.
- All holes that aren't already pre-drilled should be drilled prior to screwing using a No 12 countersinking drill bit.
- Make sure you always use safety gear like a mask, ear muffs and glasses when using tools.
- If you have any questions, contact us on:  
Australia: **1800 666 078** Monday to Friday between 8:00am and 6:00pm AEST, New Zealand: **0800 522 663** Monday to Friday between 8:00am and 5:00pm NZST or email: **info@kaboodlegroup.com.au**.

### Tools you will need

To put your kaboodle kitchen cabinets together you will need the following tools.

Cordless drill with:


- Number 2 screw tip
- 4mm drill bit
- Number 12 countersinking drill bit

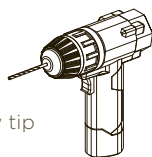

Tape measure




Pencil

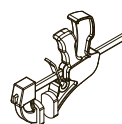


Clamps (quick release)




Safety gear




Adjustable square



65mm wood screw

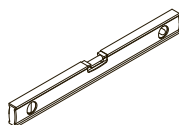

Spirit level (900mm recommended)



Wall fixing (If necessary)




Cabinet stand

### base cabinets

### Hardware included

**A**




50mm wood screws **x 30**

**B**



28mm wood screws **x 19**

**C**



adjustable legs **x 4**

**D**



metal shelf support **x 5**

**E**



90° angle bracket **x 2**

**F**



stick on end caps **x 7**

**G**



door buffer **x 4**

**H**



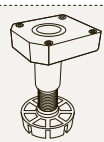



14mm screws **x 4**



9 320090 649714


## hardware key
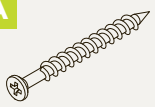
<b>A</b>	<b>B</b>	<b>C</b>	<b>D</b>
			
50mm wood screws	28mm wood screws	adjustable legs	metal support shelf


## base cabinets

### assembling cabinet


1.

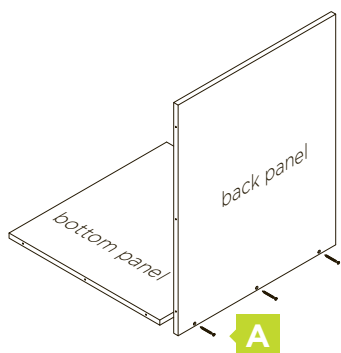


2.

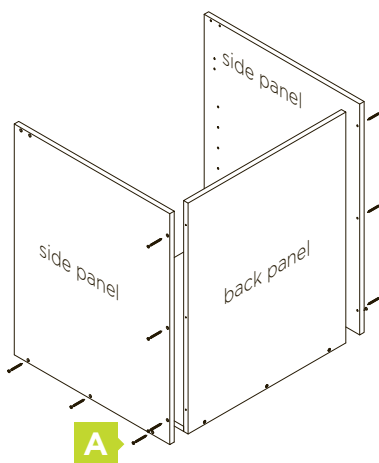


3.

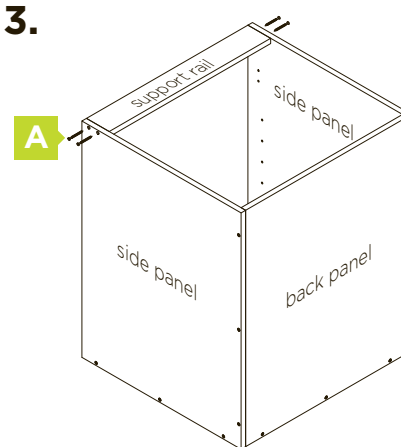

4.

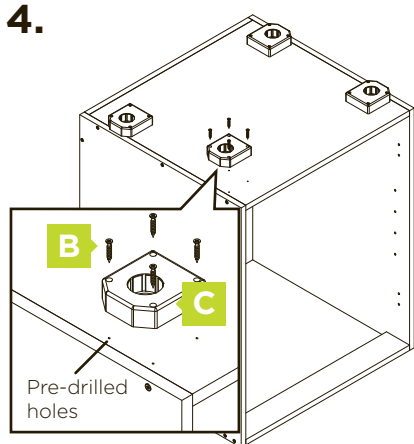


5.

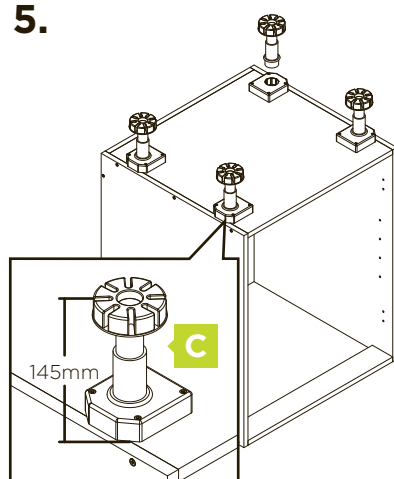

Set height of the adjustable feet to 145mm.


6.

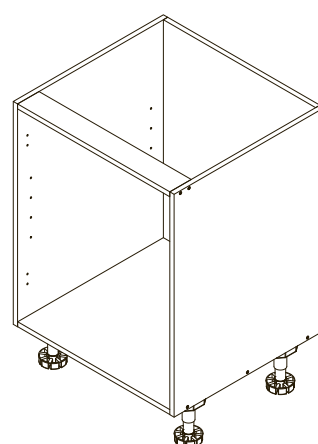


Cabinet frame now complete ☒

### Installing adjustable shelf


1.

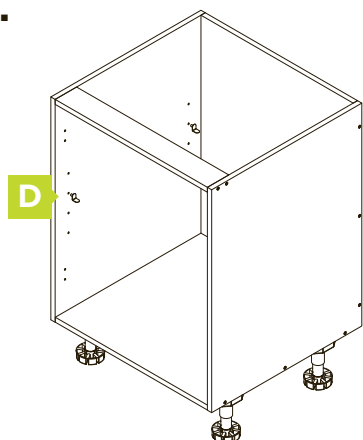

2.

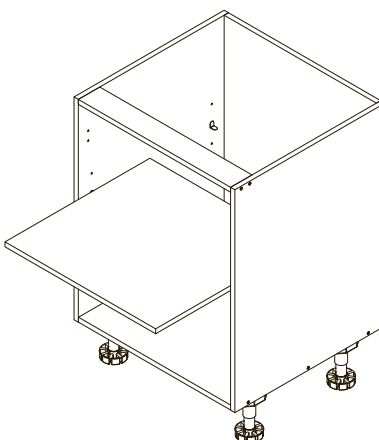

3.

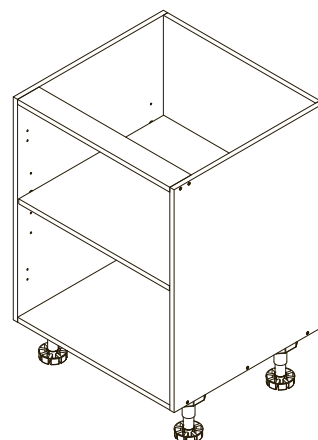

Cabinet complete ☒


# step 1

## hardware key




**kaboodle**  
KITCHEN


## base cabinets

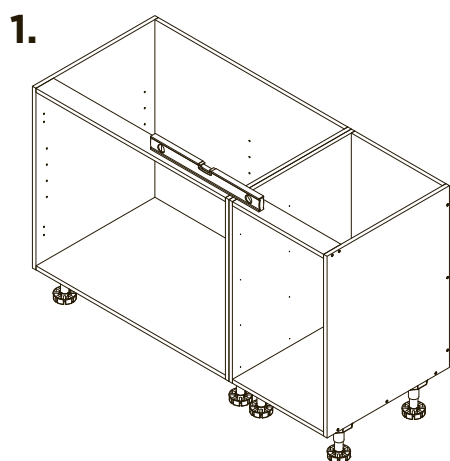

Check that all cabinets are level.

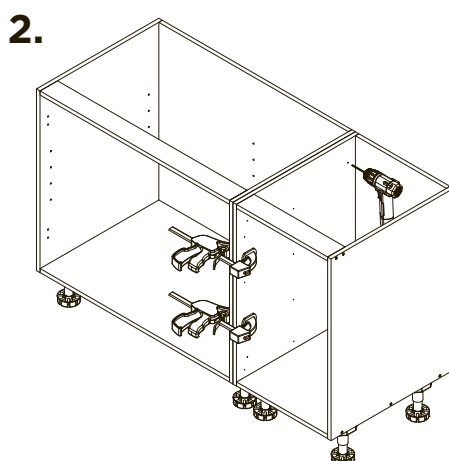


Clamp cabinets and pre-drill screw holes.

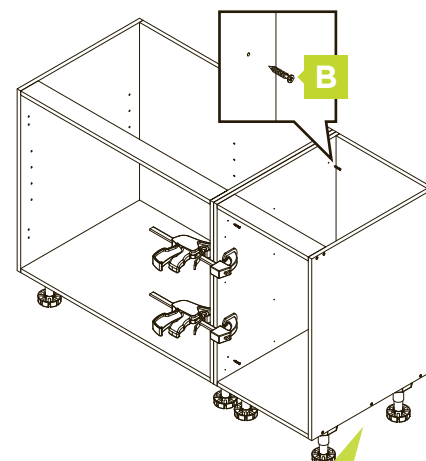

When you need to add an end panel check out the end panel instructions for installation tips.

## fixing cabinets to wall

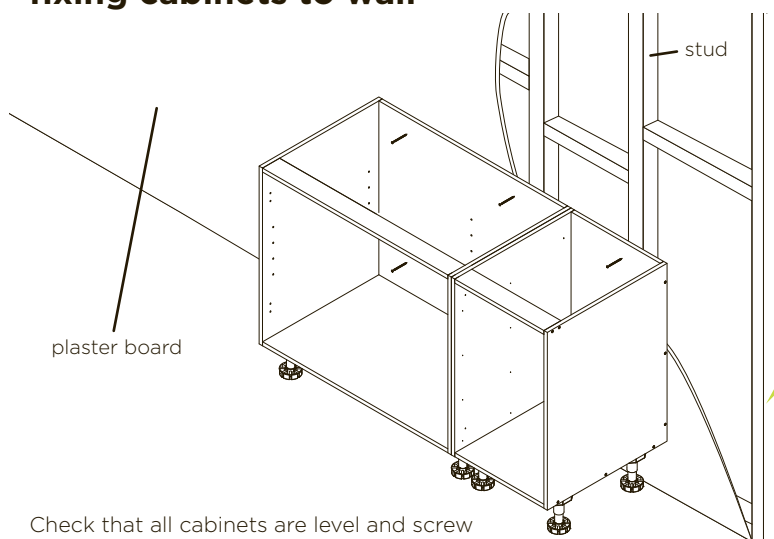


Check that all cabinets are level and screw into wall using the correct fixings.

**Caution:** Please ensure all cabinets are screwed into your timber stud wall using a minimum of 65mm timber screws. If attaching to concrete, brick, steel or any other substrates seek advice from your hardware specialist.

## step 1

Follow these instructions to build and attach your cabinet.



**kaboodle**  
KITCHEN

cut to measure **cabinets**


### Hardware included




### wall and medium wall cabinets

#### assembling cabinet


1.

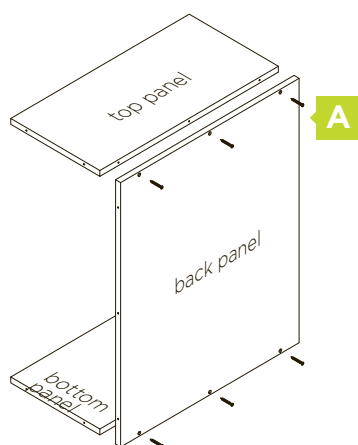

2.

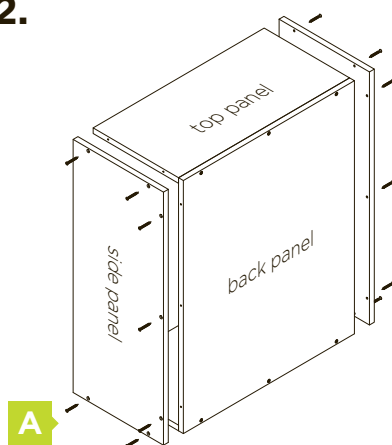


3.

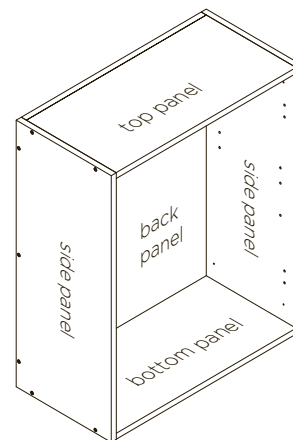


Cabinet frame now complete ☒

#### Installing adjustable shelf


1.

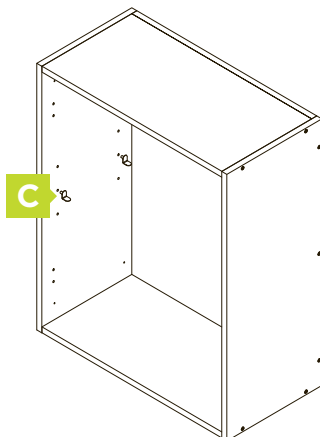

2.

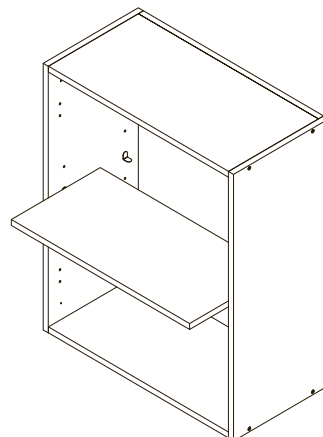

3.

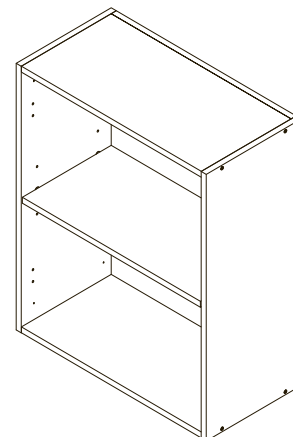

Cabinet complete ☒

# step 1


## hardware key



**kaboodle**  
KITCHEN

### joining cabinets

1.

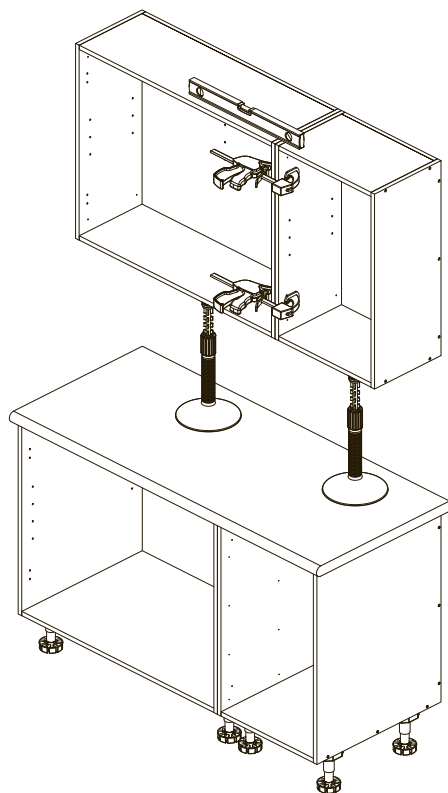


With the aid of cabinet supports align cabinets and hold together using clamps.

**Tip:** If a pantry has been installed, align wall cabinets to the height of the pantry.

**Note:** AS/NZ standards states that the distance between the benchtop and wall cabinet needs to be a minimum of 450mm.


2.

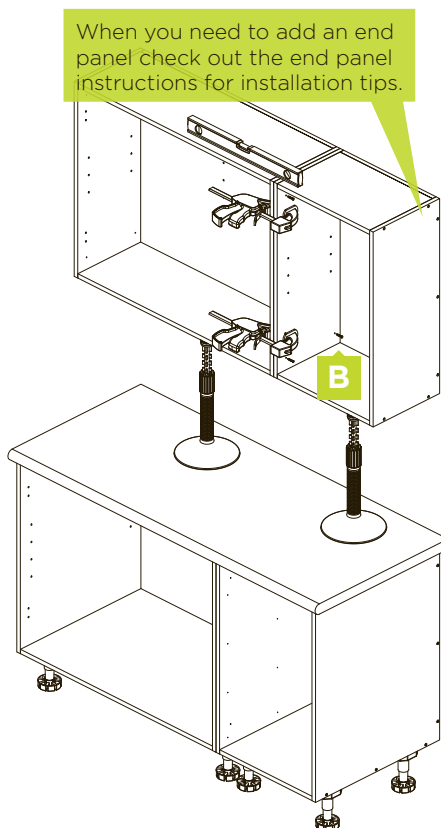

Check all cabinets are level then pre-drill and screw cabinets together.

### fixing cabinets to wall


1.

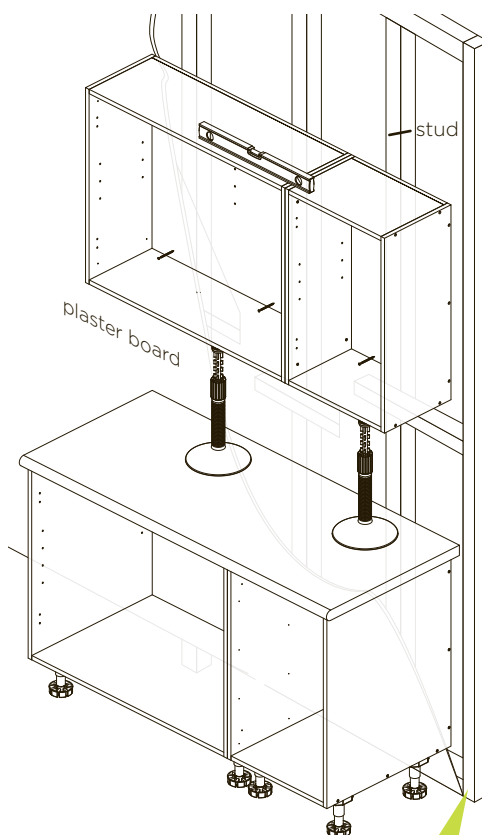

**Caution:** Please ensure all cabinets are screwed into your timber stud wall using a minimum of 65mm timber screws. If attaching to concrete, brick, steel or any other substrates seek advice from your hardware specialist.

## step 1

Follow these instructions to build and attach your cabinet.

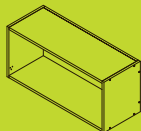

**kaboodle**  
KITCHEN




cut to measure **cabinets**

## slimline cabinets

### Hardware included




### assembling cabinet

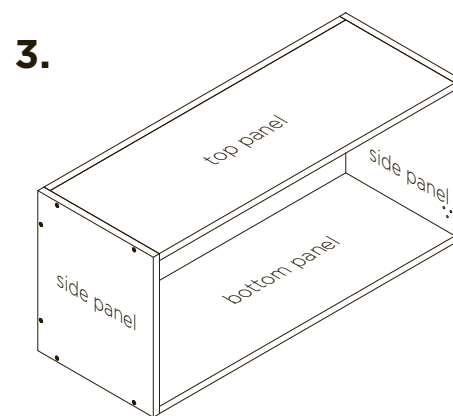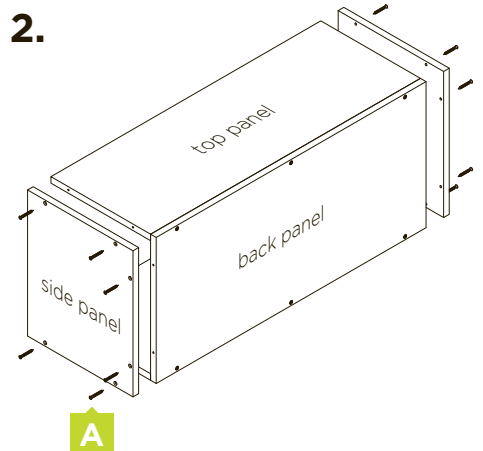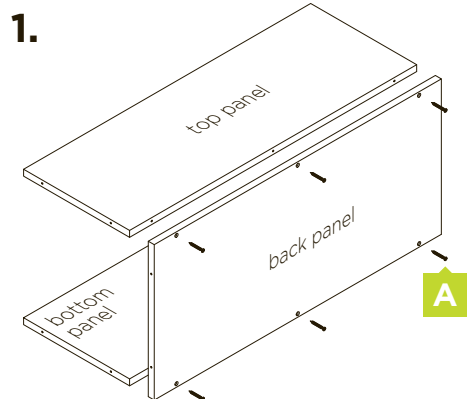


Cabinet complete ☒

### joining cabinets

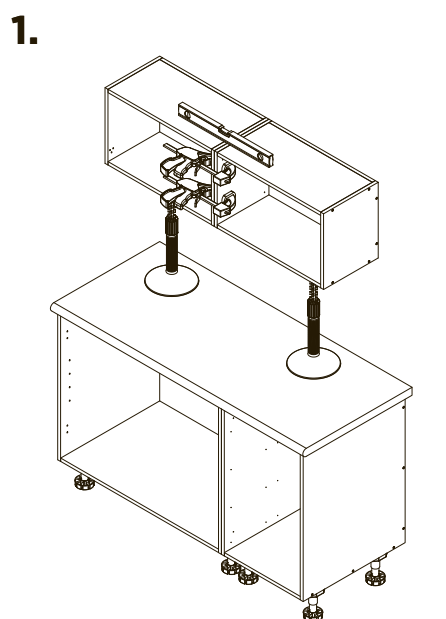


With the aid of cabinet supports align cabinets and hold together using clamps.

**Note:** AS/NZ standards states that the distance between the benchtop and wall cabinet needs to be a minimum of 450mm.

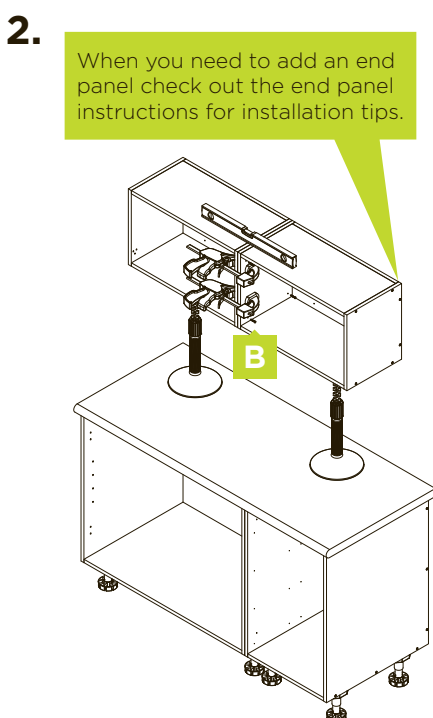

Check all cabinets are level then pre-drill and screw cabinets together.

### fixing cabinets to wall

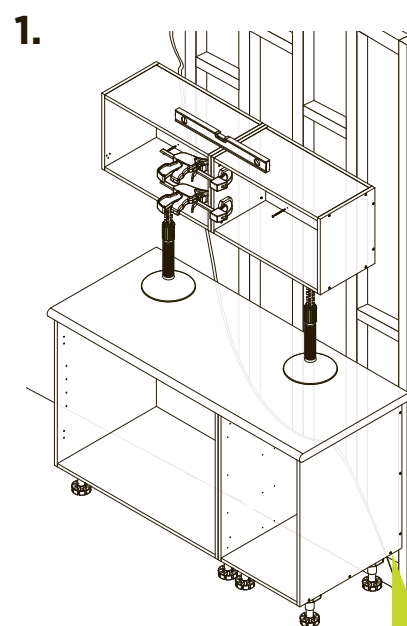

**Caution:** Please ensure all cabinets are screwed into your timber stud wall using a minimum of 65mm timber screws. If attaching to concrete, brick, steel or any other substrates seek advice from your hardware specialist.


# step 1

## hardware key



### fixing cabinet to wall

1.

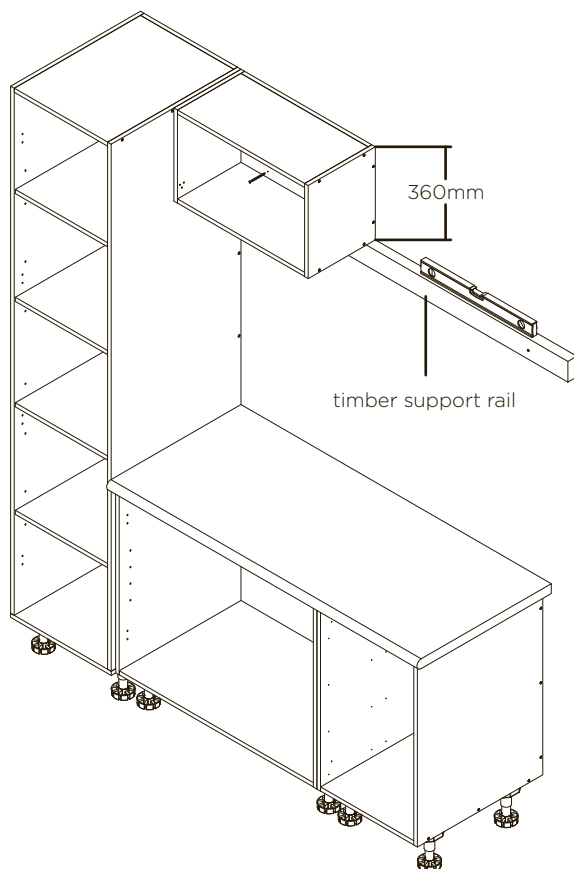

To install your cabinet to sit flush with the top of a pantry attach a timber rail first to help support the cabinets. The rail should be installed so the top of the rail is 360mm from the top of the pantry.


Make sure the rail is level when fixed to the wall. Sit the cabinet on the rail, pre-drill and screw into the wall with the appropriate fixings.

**Note:** use the assistance of another person to help hold the cabinet while fixing it to the wall.

### slimline cabinets

#### overhead fridge cabinet

1.

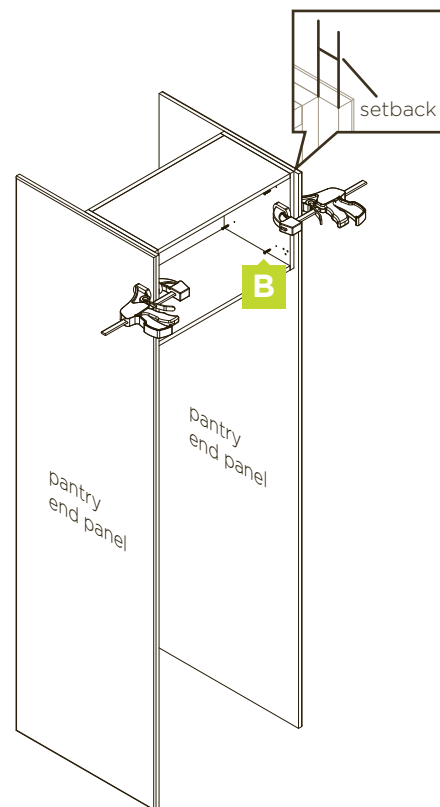

Use the slimline cabinet to create an overhead fridge cabinet.

Pre-drill and attach the slimline cabinet between 2 x pantry end panels.

Ensure the cabinet is flush with the top of the end panels.

**Note:** Set the slimline cabinet back from the front of the end panels 18mm for the melamine doors and 20mm for the thermoformed doors.

### Caring for your kaboodle cabinets

Looking after your cabinets is really easy and with the right care and maintenance they will last you for many years. Just follow these simple steps and if you need any more information you can contact us: Australia: **1800 666 078** Monday to Friday between 8:00am and 6:00pm AEST. New Zealand: **0800 522 663** Monday to Friday between 8:00am and 5:00pm NZST or email: [info@kaboodlegroup.com.au](mailto:info@kaboodlegroup.com.au).

Clean your cabinets with an all purpose, non-abrasive cleaner with a damp sponge or cloth and make sure you never use saturated cloth, harsh chemicals or thinner based cleaners as these will damage the surface of the melamine. Likewise, never use products that will scratch the surface like steel wool or wire brushes and avoid sharp objects that will scratch, cut or gouge the melamine surface. If this happens the internal board will be exposed and may swell. Kaboodle cabinets are water resistant but not water proof so any spills should be attended to immediately.

**Handy hint:** if the melamine surface of your cabinet is damaged you can try and cover it with a furniture repair crayon but just remember that this won't seal the board back to its original finish.

We offer a dedicated customer service line for advice or any questions you may have on kaboodle products.

Call customer service on:  
Australia: **1800 666 078** Monday to Friday  
between 8:00am and 6:00pm AEST

New Zealand: **0800 522 663** Monday to Friday  
between 8:00am and 5:00pm NZST or email:  
[info@kaboodlegroup.com.au](mailto:info@kaboodlegroup.com.au)

