


step 3

Now follow the instructions to fit your doors and panels.

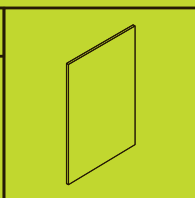

kaboodle
KITCHEN

attaching end panels

Things you need to know

- Make sure not to drill screws too far into the panels as they can protrude out the other side.
- Make sure you leave plumbing and electrical work to qualified trades people. Never try this yourself.
- Always drill screws from inside the cabinet into your panels and use stick-on screw caps to hide unsightly screw holes.
- Thermoformed panels have a rounded edge, make sure this always faces the outside of a cabinet.
- **Gloss vinyl doors & panels are protected with a top clear wrap that needs to be removed. Depending on application of the panel, this may need to be removed prior to installation.**
- Whenever cutting or drilling panels, always protect the area being cut with masking tape and cut with the good side facing down.
- All holes that aren't already pre-drilled should be drilled prior to screwing using a No 12 countersinking drill bit.
- Make sure you always use safety gear like a mask, ear muffs and glasses when using tools.
- If you have any questions contact us on **1800 666 078** Monday to Friday between 8:00am and 6:00pm AEST or email: **info@kaboodlegroup.com.au**.


Hardware needed



Note: Fixing hardware required is provided with the cabinets.

Tools you will need

To install your kaboodle kitchen panels you will need the following tools.


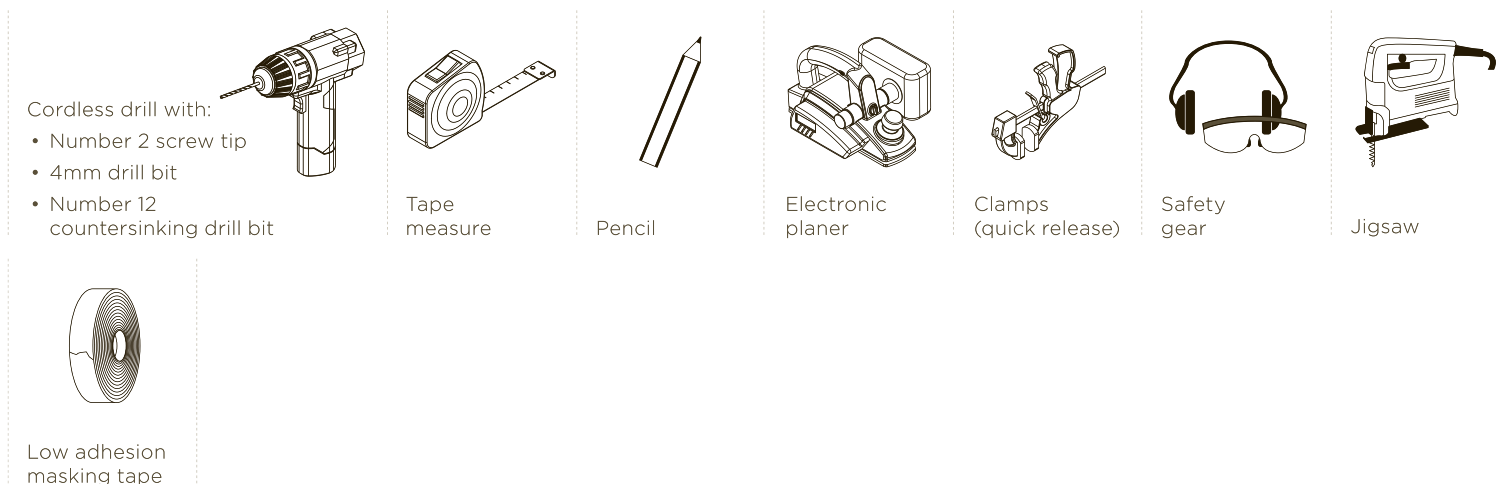




attaching end panels

attaching base end panels

1.

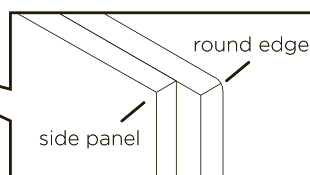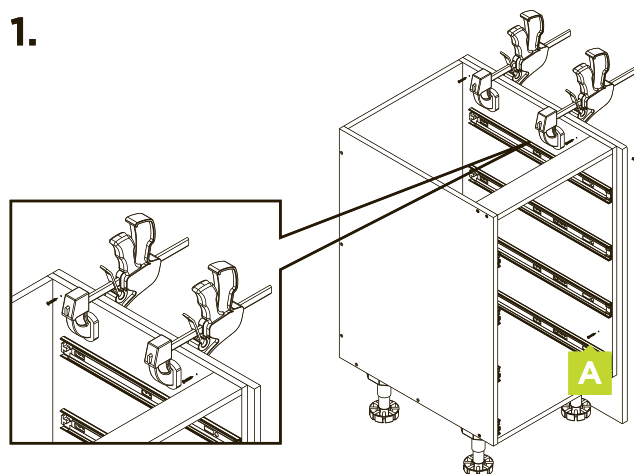


The end panel will sit directly onto the floor. Trimming may be necessary on an uneven floor.

Note: Make sure the round edge is facing outward with thermoformed end panels.


Pre-drill and attach using 28mm screws.

attaching wall & slimline end panels



1.

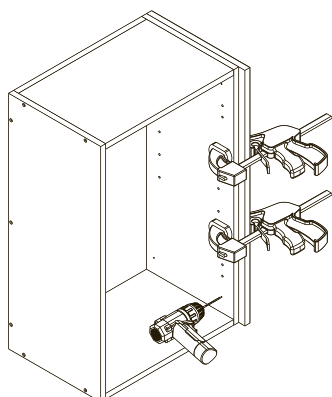

End panels must protrude 18mm for melamine panels and 20mm for thermoformed panels from the front of the cabinet.

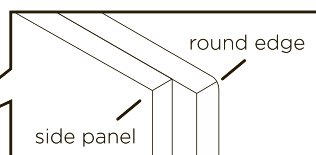

Note: Make sure the round edge is facing outward with thermoformed end panels.

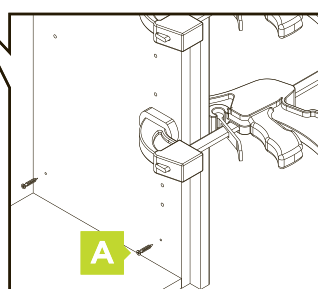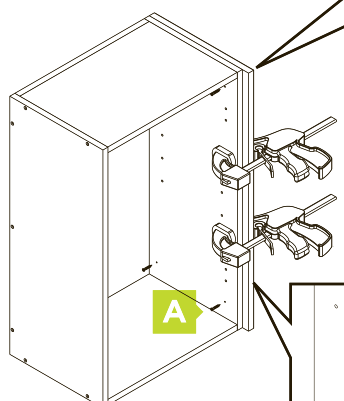

attaching pantry end panels

1.




Note: Make sure the round edge is facing outward with thermoformed end panels.

Pre-drill screw holes.

The end panel will sit directly onto the floor. Trimming may be necessary on an uneven floor.

End panel must protrude 20mm from front of cabinet.

Note: When installing a corner pantry, end panel should protrude 14mm from the front of the cabinet.

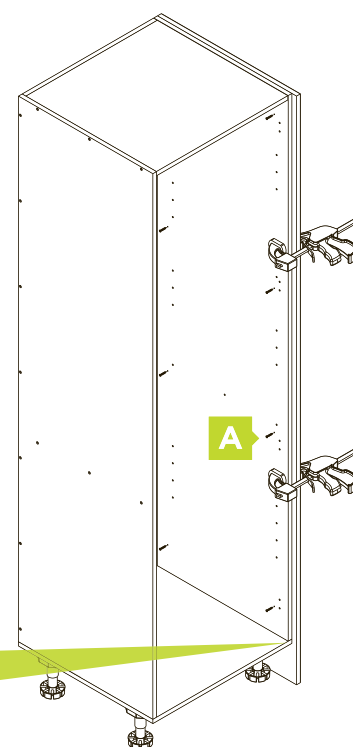




attaching end panels

attaching island back end panels


1.

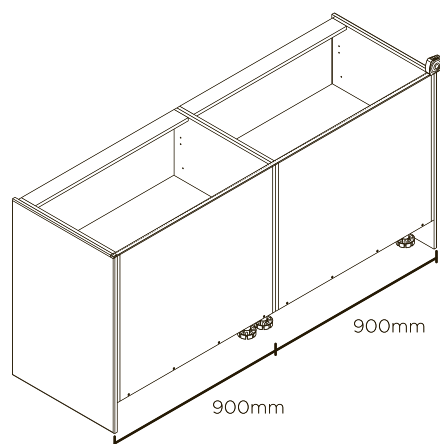


Measure the back of the cabinets where the Island back panels will be used.

If cutting is necessary, each panel should be cut at equal lengths.

Note: Fitted back panel must sit flush with end panel.

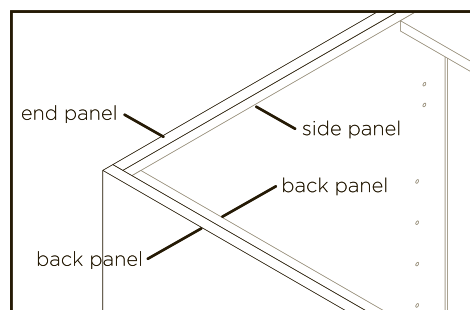


2.

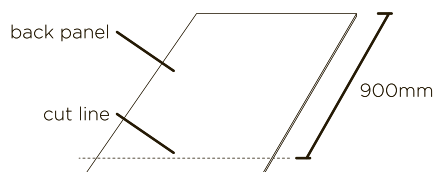

Convert previous measurement onto the back panel and cut using a fine tooth circular saw or jigsaw.


Note: Place masking tape along the area to be cut to reduce damage to the panel.

4.

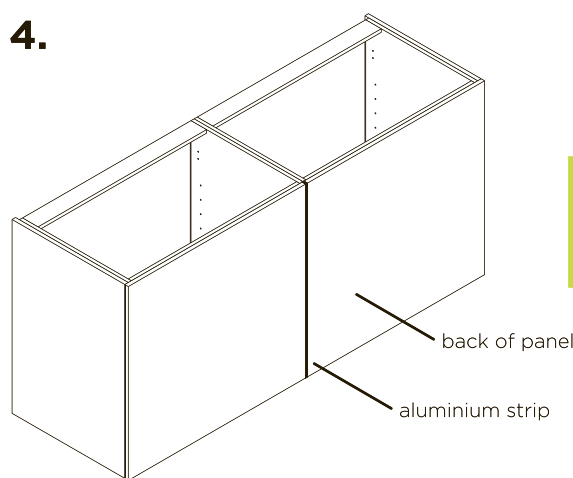

Tip: When multiple panels exist on your cabinets, you can separate them with a strip of aluminium (sold separately) to add some detail.

3.

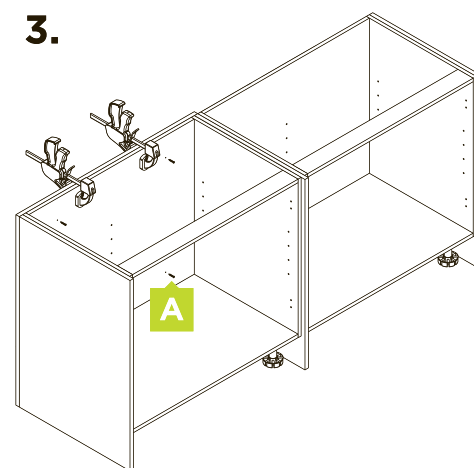

The back of the panel sits directly on the floor. Trimming may be necessary on a uneven floor.

Pre-drill and attach using 28mm screws.

Always install your back panels with the cut side facing inwards.

Caring for your kaboodle doors and panels

Looking after your doors and panels is really easy and with the right care and maintenance they will last you for many years. Just follow these simple steps and if you need any more information you can contact us on **1800 666 078** Monday to Friday between 8:00am and 6:00pm AEST or email: info@kaboodlegroup.com.au.

All doors should be cleaned with warm soapy water or an all purpose, non-abrasive cleaner with a damp cloth and make sure you never use a saturated cloth, harsh chemicals or thinner based cleaners. Try to avoid using sponges on your doors and these can leave residue streaks on the surface. Never use steel wool, scourers, dry cloths or rough products on any doors as this is a crime and will scratch the surface.

Handy hint: Most stains will wipe off if attended to straight away, but for more stubborn stains you can use an undiluted, commercial non-abrasive cleaner and soak for a few seconds and then clean with warm soapy water. Just make sure you test the cleaning product on an unexposed section of the surface first to ensure it won't damage the finish. If a door or panel is gouged, chipped or scratched, you can try and use a matching coloured texta to rub into the area...or just buy a new door!

We offer a dedicated customer service line for advice or any questions you may have on kaboodle products.

Call customer service on **1800 666 078** Monday to Friday between 8:00am and 6:00pm AEST or email: info@kaboodlegroup.com.au.

step 1



Your Kaboodle cabinet is now complete.

step 4

Finish off your Kaboodle Kitchen by installing your benchtop.

step 2



You've finished adding your parts and accessories.

step 3



You've added your doors and panels.