



300mm pullout baskets 3 tier soft close

installation guide

Things you need to know

- Always read the full instructions prior to installation.
- Consider possible obstructions to your parts & accessories, like hinges inside the cabinet or adjacent cabinet doors and handles, prior to installation.
- · Make sure you leave plumbing and electrical work to qualified trades people. Never try this yourself.
- Make sure you always use safety gear like a mask, ear muffs and glasses when using tools.
- Tip: After marking out the pre-drill holes as per the instructions, take the part that is to be installed and align the appropriate holes with the markings to ensure they match up prior to pre-drilling the holes.
- If you have any questions, contact us on: Australia: 1800 666 078 Monday to Friday between 8:00am and 6:00pm AEST, New Zealand: 0800 522 663 Monday to Friday between 8:00am and 5:00pm NZST or email: info@kaboodlegroup.com.au.

Hardware included



Tools you will need

To put your kaboodle kitchen waste bins together you will need the following tools.





Tape measure



Pencil



Screw driver



Safety gear



Adjustable sauare



Clamps (optional)








300mm pullout baskets 3 tier soft close

pre-drilling for runners


1.

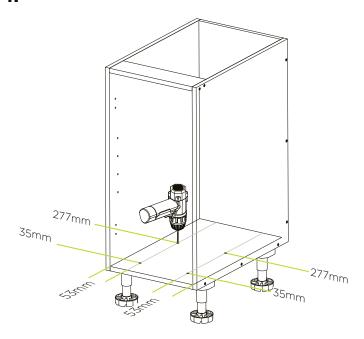

Mark out and pre-drill four holes on the cabinet base panel as pictured above. Use a 2mm drill bit to pre-drill holes to a depth of roughly 2.5mm.

attaching runners


2.

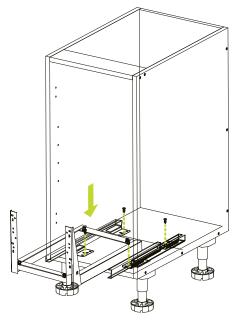

Align the runners with the pre-drilled holes and using 4 x 16mm wood screws (A), fix the runners to the cabinet. **NOTE:** Start with the second holes from the front of the runners to align with the pre-drilled holes.

securing runners


3.

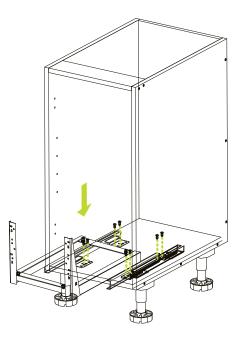

Secure the runners to the cabinet using a further 8×16 mm wood screws, ensuring the screws are spaced evenly on both runners and are mirrored from the left to right side.

pre-drill door panel

4.

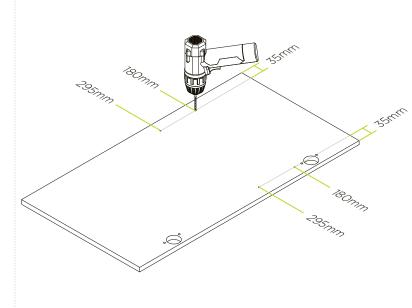

On the inside of your cabinet door, mark out and pre-drill four holes, measuring from the bottom of the door, as pictured above. Use a 2mm drill bit to pre-drill holes to a depth of roughly 2.5mm.





300mm pullout baskets 3 tier soft close

installing baskets

6.

attaching door panel 5.

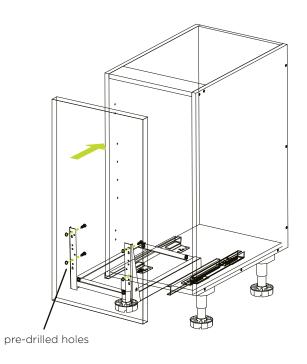

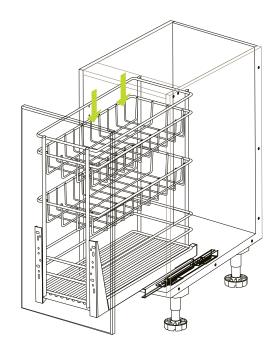

Align the pre-drilled holes on the door with the horizontal elongated holes of the door mount piece and fix into place using 4×16 mm wood screws.

Adjust the door panels across if needed, ensuring it is centred correctly before tightening the screws. Use any remaining screws for added stability, always spaced evenly and mirrored from the left to right side. NOTE: The maximum weight capacity for this product includes the weight of the door if installed.

Push the baskets down onto the runner base ensuring the basket clips snap onto the bottom of the basket frame. **NOTE:** Support the runner from underneath when installing baskets to prevent damage and added safety.

Caring for your kaboodle cabinets

Looking after your cabinets is really easy and with the right care and maintenance they will last you for many years. Just follow these simple steps and if you need any more information you can contact us: Australia: 1800 666 078 Monday to Friday between 8:00am and 6:00pm AEST. New Zealand: 0800 522 663 Monday to Friday between 8:00am and 5:00pm NZST or email: info@kaboodlegroup.com.au.

Caring for your kaboodle parts and accessories: Looking after your parts and accessories is really easy and with the right care and maintenance they will last you for many years. Just follow these simple steps. Hinges, runners and other parts and accessories should be kept dry at all times. To keep the mechanisms performing at their best, regularly wipe them with a dry cloth removing any dust and grime that may build up. In case of spills, clean immediately with a dry cloth. Do not use harsh abrasives.

We offer a dedicated customer service line for advice or any questions you may have on kaboodle products. Call customer service on:

Australia: **1800 666 078** Monday to Friday between 8.00am and 6.00pm AEST

New Zealand: **0800 522 663** Monday to Friday between 8.00am and 5.00pm NZST or email: **info@kaboodlegroup.com.au**

step 4
Finish off your Kaboodle Kitchen by installing your benchtop.

Step 3

Next, follow the instructions to fit your doors and panels.

W-50550 Ver. 9 | p. 3

step 1

Your Kaboodle