


attaching slimline door to a cabinet


hardware key

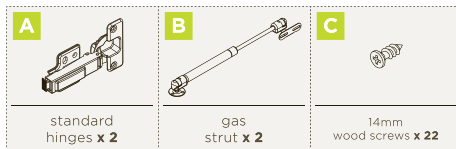

removing hinge plate

1.

remove the hinge from the hinge plate by pushing on the release tab.

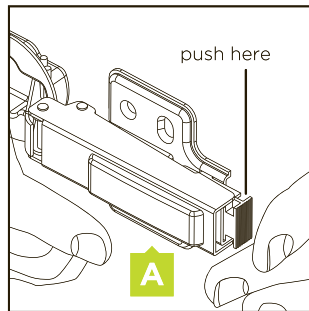


attaching hinge plate to cabinet

2.

attach with screws through the elongated holes.

Note: if there are no plastic lugs in the pre-drilled holes, then fix into place carefully using a hammer first.

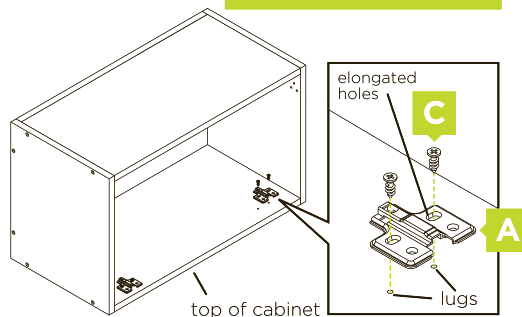


attaching slimline door to a cabinet

attaching hinge to door

3.

attach with screws.

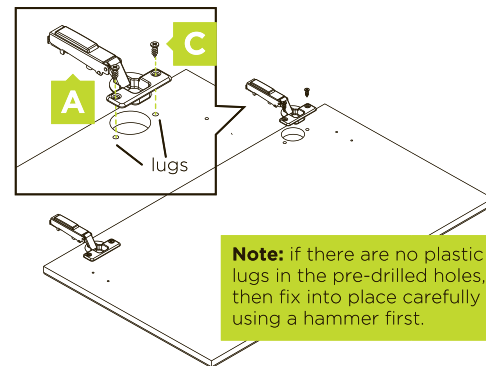




Note: if there are no plastic lugs in the pre-drilled holes, then fix into place carefully using a hammer first.

Note: install 2 more screws per carcase hinge plate (i.e.: a total of 4 screws) in round holes once the hinge has been adjusted!

step 2

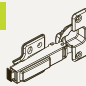hardware key

A	B	C
		
standard hinges x 2	gas strut x 2	14mm wood screws x 22

Caring for your Kaboodle parts and accessories

Looking after your parts and accessories is really easy and with the right care and maintenance they will last you for many years. Just follow these simple steps. Hinges, runners and other parts and accessories should be kept dry at all times. To keep the mechanisms performing at their best, regularly wipe them with a dry cloth removing any dust and grime that may build up. In case of spills, clean immediately with a dry cloth. Do not use harsh abrasives.


If you need any more information you can contact us:
Australia: **1800 666 078** Monday to Friday between 8:00am and 6:00pm AEST. New Zealand: **0800 522 663** Monday to Friday between 8:00am and 5:00pm NZST
or email: **info@kaboodlegroup.com.au**.

step 1	✓step 2	✓step 3	step 4
Your cabinets are now assembled.	You've installed your parts and accessories.	Then follow the instructions to fit your doors and panels.	Finish off your Kaboodle Kitchen by installing your benchtop.

kaboodle
KITCHEN

attaching door to cabinet


4.

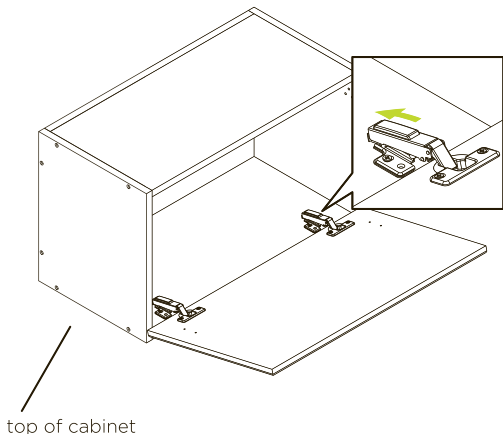

attaching gas strut


5.

Note: if there are no plastic lugs in the pre-drilled holes, then fix into place carefully using a hammer first.

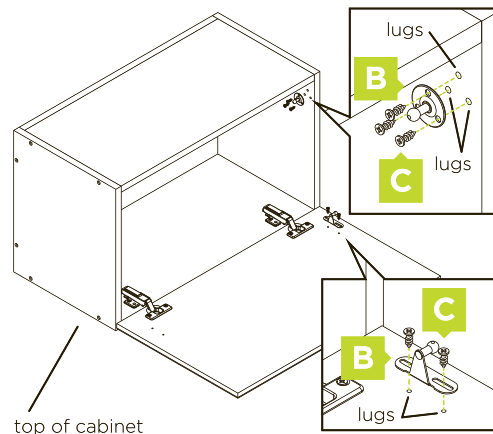

attaching gas strut

6.

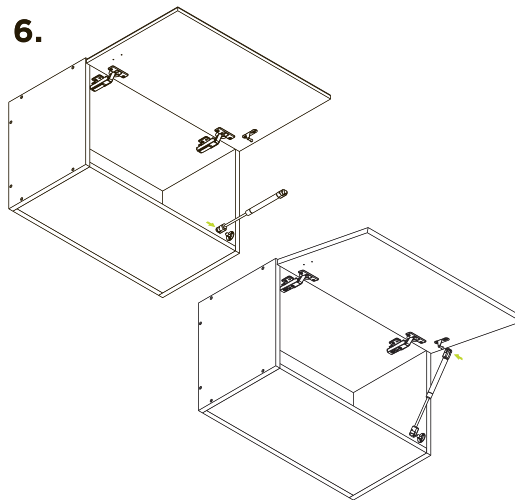


attaching slimline door to a cabinet

removing the gas strut

7.

to remove the gas strut from the bracket use a flat head screw driver to lift the metal strap on either end of the strut.

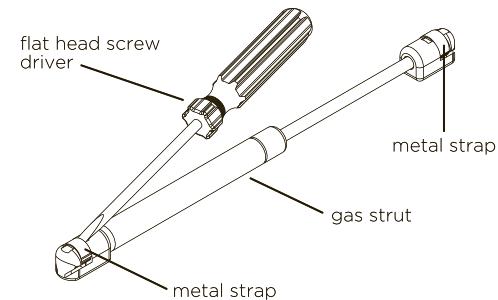

note: the gas strut can be adjusted by moving the bracket on the door forwards or backwards.