


step 2

Follow these instructions to install your parts and accessories.

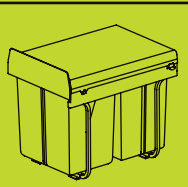



20L+2x10L **base mount pullout bin**

installation guide

Things you need to know

- Always read the full instructions prior to installation.
- Consider possible obstructions to your parts & accessories, like hinges inside the cabinet or adjacent cabinet doors and handles, prior to installation.
- Make sure you leave plumbing and electrical work to qualified trades people. Never try this yourself.
- Make sure you always use safety gear like a mask, ear muffs and glasses when using tools.
- **Tip:** After marking out the pre-drill holes as per the instructions, take the part that is to be installed and align the appropriate holes with the markings to ensure they match up prior to pre-drilling the holes.
- If you have any questions, contact us on:
Australia: **1800 666 078** Monday to Friday between 8:00am and 6:00pm AEST, New Zealand: **0800 522 663** Monday to Friday between 8:00am and 5:00pm NZST or email: **info@kaboodlegroup.com.au**.

Hardware included

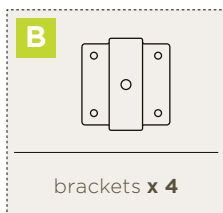
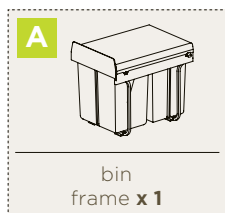


Tools you will need

To put your kaboodle kitchen waste bins together you will need the following tools.

Cordless drill with:


- Number 2 screw tip
- 2mm drill bit

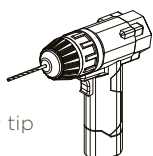

Tape measure




Pencil




Screw driver







Safety gear



Adjustable square

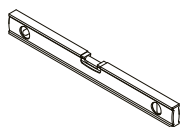


Spirit level (optional)

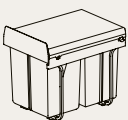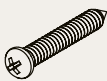A	B	C	D
			
bin frame	brackets	25mm wood screw	16mm wood screw

measuring up for brackets


1.

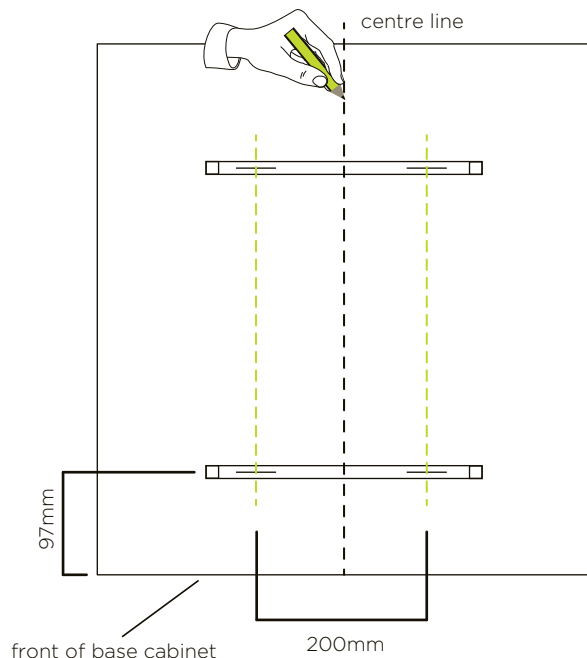

On the base of the cabinet mark out a parallel line in the middle of the cabinet. Then mark out 100mm from the centre line both sides. Lastly, mark out a line 97mm from the front edge of the cabinet as pictured above.

attaching frame and brackets


3.

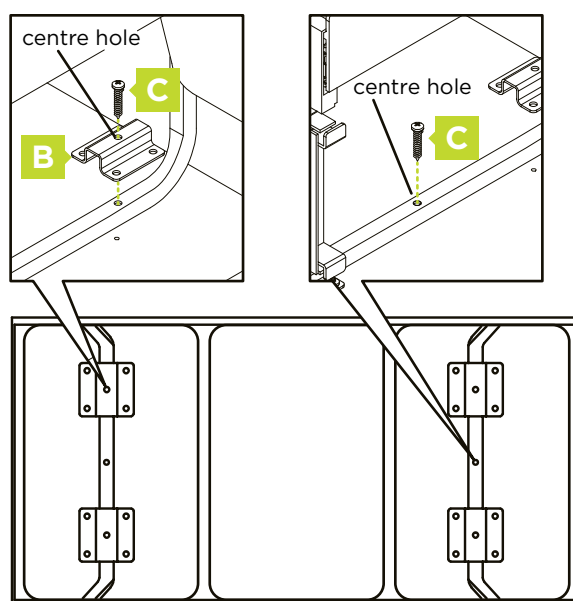

Align the bin frame (A) and the brackets (B) with the pre-drilled holes as pictured above and fix through the centre hole to the cabinet using 6x25mm wood screws (C).

20L+2x10L base mount pullout bin pre-drilling for brackets


2.

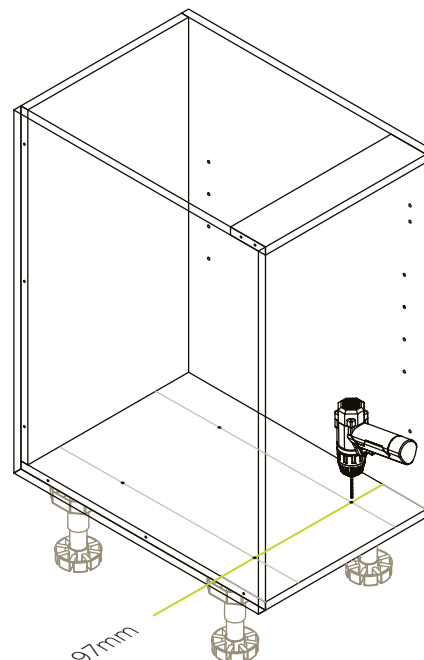

Pre-drill front holes using a 2mm drill bit to a depth of roughly 2.5mm where the lines cross. Align front frame with predrilled front holes and mark out position of rear fixing holes. Pre-drill rear holes

securing frame and brackets

4.

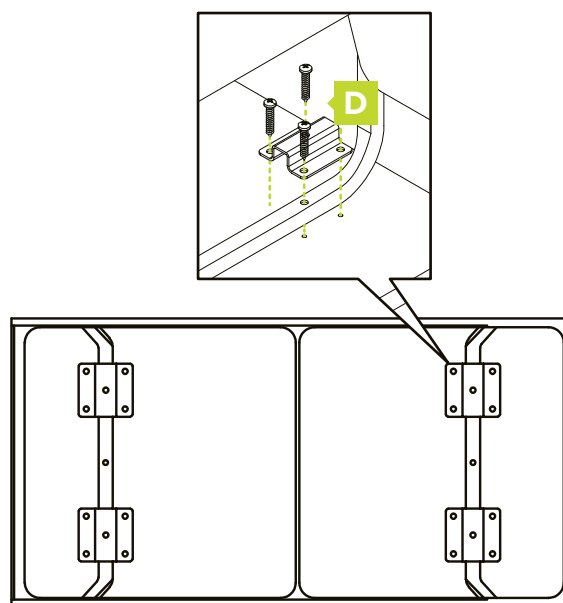


Further secure the bin frame and the brackets to the cabinet using 16x16mm wood screws (D) as pictured above.

20L+2x10L **base mount pullout bin**

inserting bins

5.

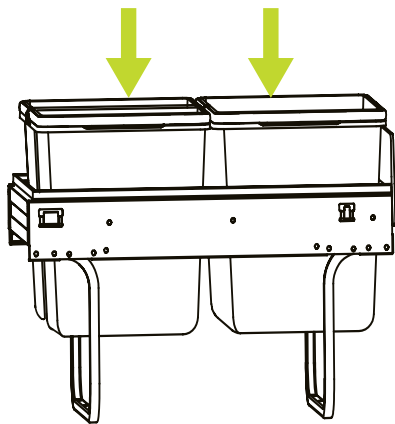


Place the bins into the frame to complete installation.

Note: Max weight capacity is 25kg.

inserting bin lid

6.

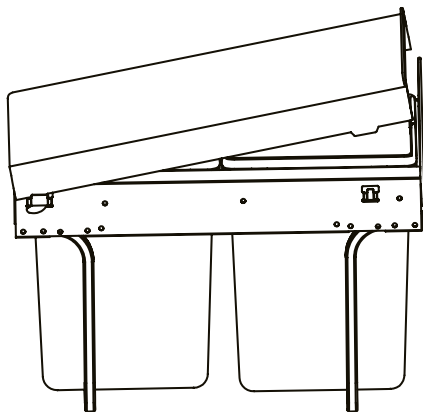

Slide the two back catches of the bin lid into the supports at the back of the frame. The two small front catches should now fit into the front supports.

Caring for your kaboodle parts and accessories

Looking after your cabinets is really easy and with the right care and maintenance they will last you for many years. Just follow these simple steps and if you need any more information you can contact us: Australia: **1800 666 078** Monday to Friday between 8:00am and 6:00pm AEST. New Zealand: **0800 522 663** Monday to Friday between 8:00am and 5:00pm NZST or email: **info@kaboodlegroup.com.au**


Hinges, runners and other parts and accessories should be kept dry at all times.

To keep the mechanisms performing at their best, regularly wipe them with a dry cloth removing any dust and grime that may build up.

We offer a dedicated customer service line for advice or any questions you may have on kaboodle products.

Call customer service on:
Australia: **1800 666 078** Monday to Friday between 8.00am and 6.00pm AEST

New Zealand: **0800 522 663** Monday to Friday between 8.00am and 5.00pm NZST or email: **info@kaboodlegroup.com.au**

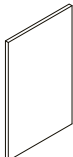step 1 ✓			
Your Kaboodle cabinet is now complete.			
step 4			step 2 ✓
Finish off your Kaboodle Kitchen by installing your benchtop.			You've finished adding your parts and accessories.
step 3			
Next, follow the instructions to fit your doors and panels.			