


## step 1

Follow these instructions to build and attach your cabinet.



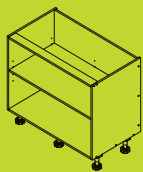


# 1000mm blind corner base cabinet

## Things you need to know






- Base cabinets come with different positions for attaching your back panel. If you are choosing the rebated back option make sure you pack out the back of your cabinet before screwing into the wall.
- All cabinets will need to be attached to the wall using a minimum of 8 gauge 65mm screws if you have a stud wall. If your wall is concrete, brick or another surface ask your hardware specialist for advice on the right fixing method.
- Make sure you leave plumbing and electrical work to qualified trades people. Never try this yourself.
- For extra strength use exterior woodworking glue when assembling cabinets.
- To help identify panels, counter sunk holes always face outwards.
- All holes that aren't already pre-drilled should be drilled prior to screwing using a No 12 countersinking drill bit.
- Make sure you always use safety gear like a mask, ear muffs and glasses when using tools.
- If you have any questions, contact us on:  
Australia: **1800 666 078** Monday to Friday between 8:00am and 6:00pm AEST, New Zealand: **0800 522 663** Monday to Friday between 8:00am and 5:00pm NZST or email: [info@kaboodlegroup.com.au](mailto:info@kaboodlegroup.com.au).

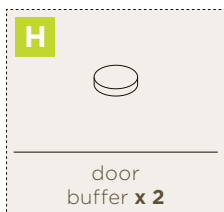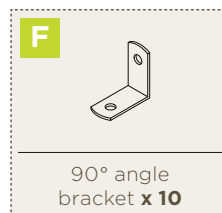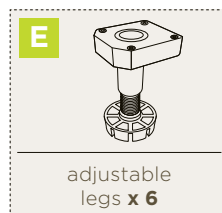



## Hardware included



## Tools you will need

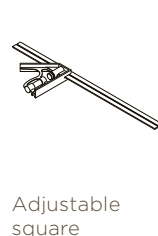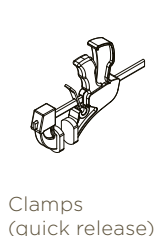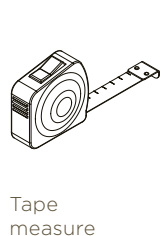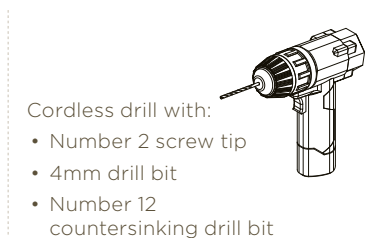To put your kaboodle kitchen cabinets together you will need the following tools.




<b>A</b>		<b>B</b>		<b>C</b>		<b>E</b>	
	50mm wood screws		28mm wood screws		shelf support		adjustable legs


## 1000mm blind corner base cabinet

### assembling cabinet


1.

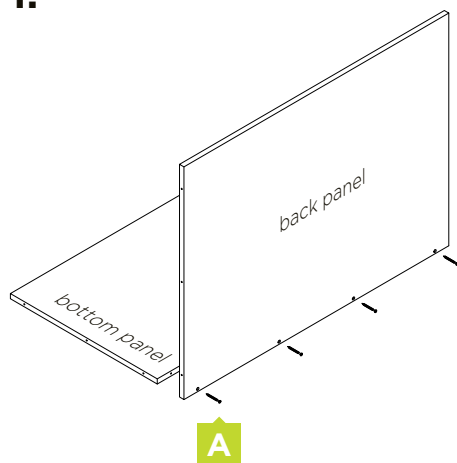


2.

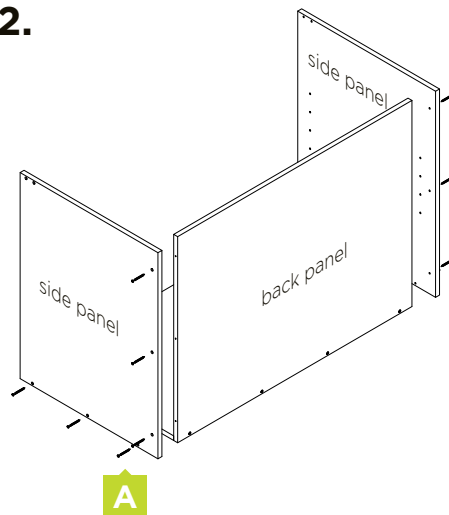


3.

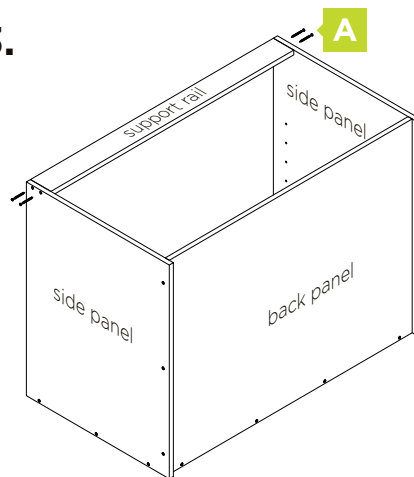

4.

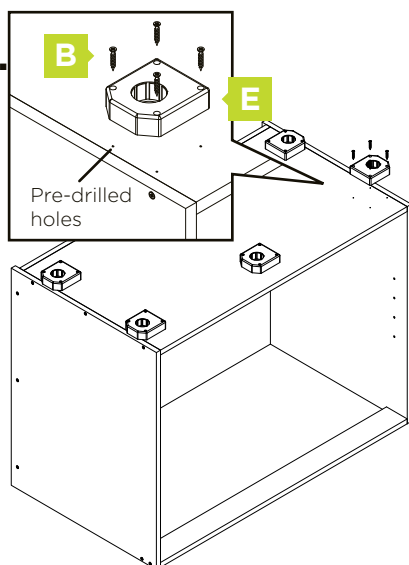


5.

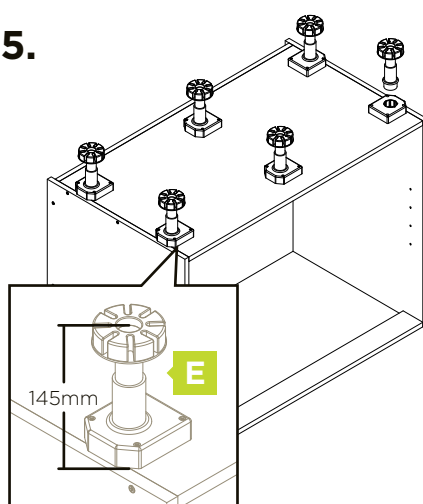


Set height of the adjustable legs to 145mm.


6.

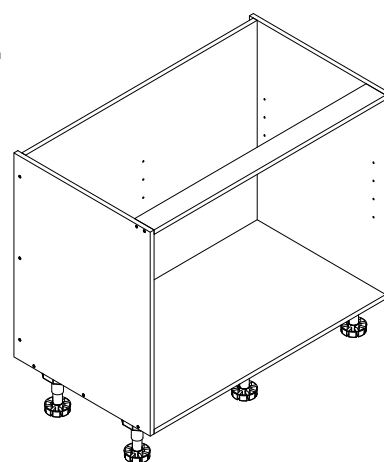


7.

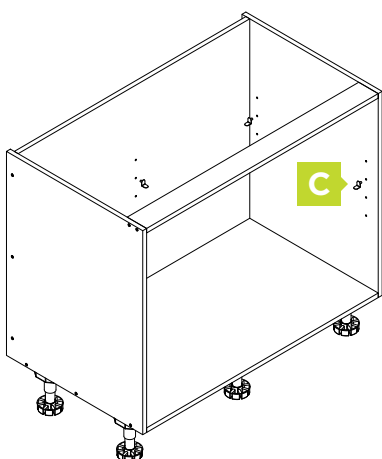

8.

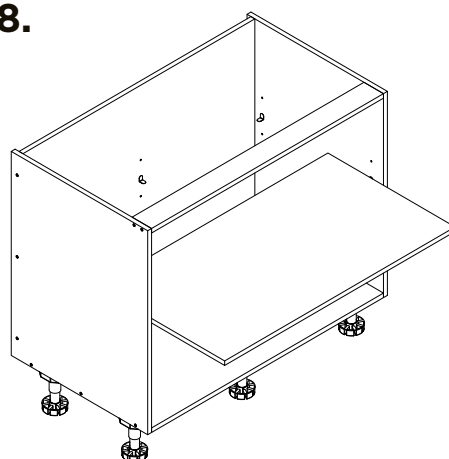

9.

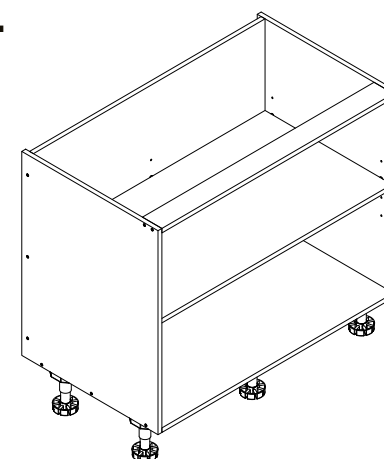


Cabinet frame now complete ☒




## 1000mm **blind corner base cabinet**

### joining cabinets

1.

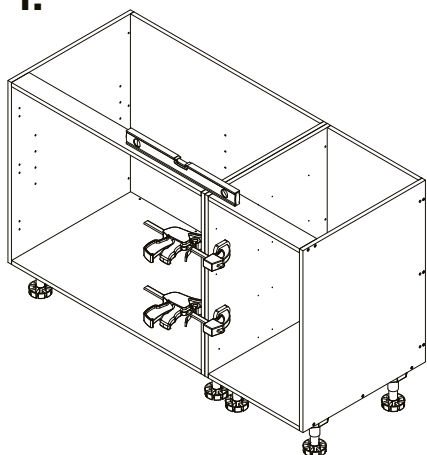

2.

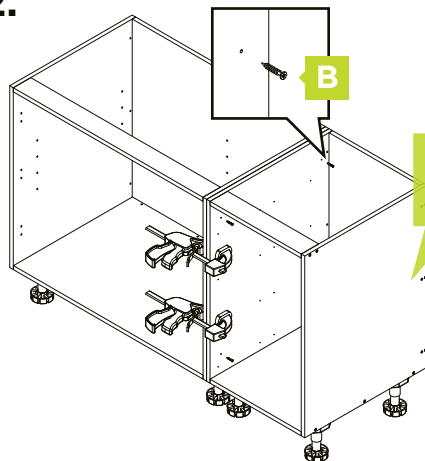


When you need to add an end panel check out the end panel instructions for installation tips.

Check that all cabinets are level.

### rebated backs

1.

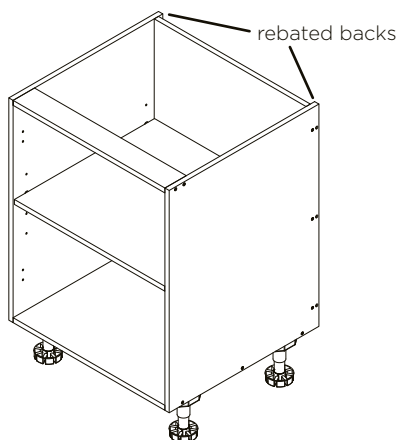


Base cabinets have been designed with the ability to assemble your back panel to create a 16mm rebate. The rebated panels can be trimmed down to accommodate uneven walls.

**Note:** The gap behind your cabinets needs to be packed out before screwing to the wall.

### fixing cabinets to wall

1.

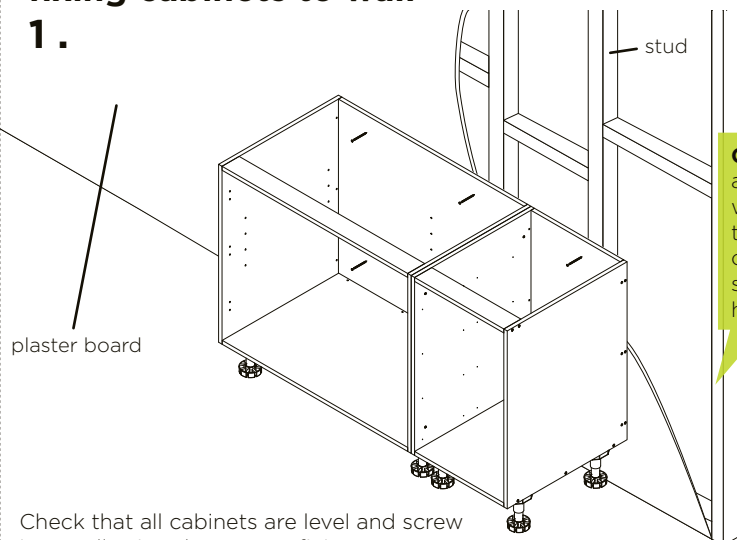


**Caution:** Please ensure all cabinets are screwed into your timber stud wall using a minimum of 65mm timber screws. If attaching to concrete, brick, steel or any other substrates seek advice from your hardware specialist.

**Please note:** For use with a 400mm door, but can be adapted to use a larger door if necessary.

Check that all cabinets are level and screw into wall using the correct fixings.

## 1000mm **blind corner base cabinet**

### important information

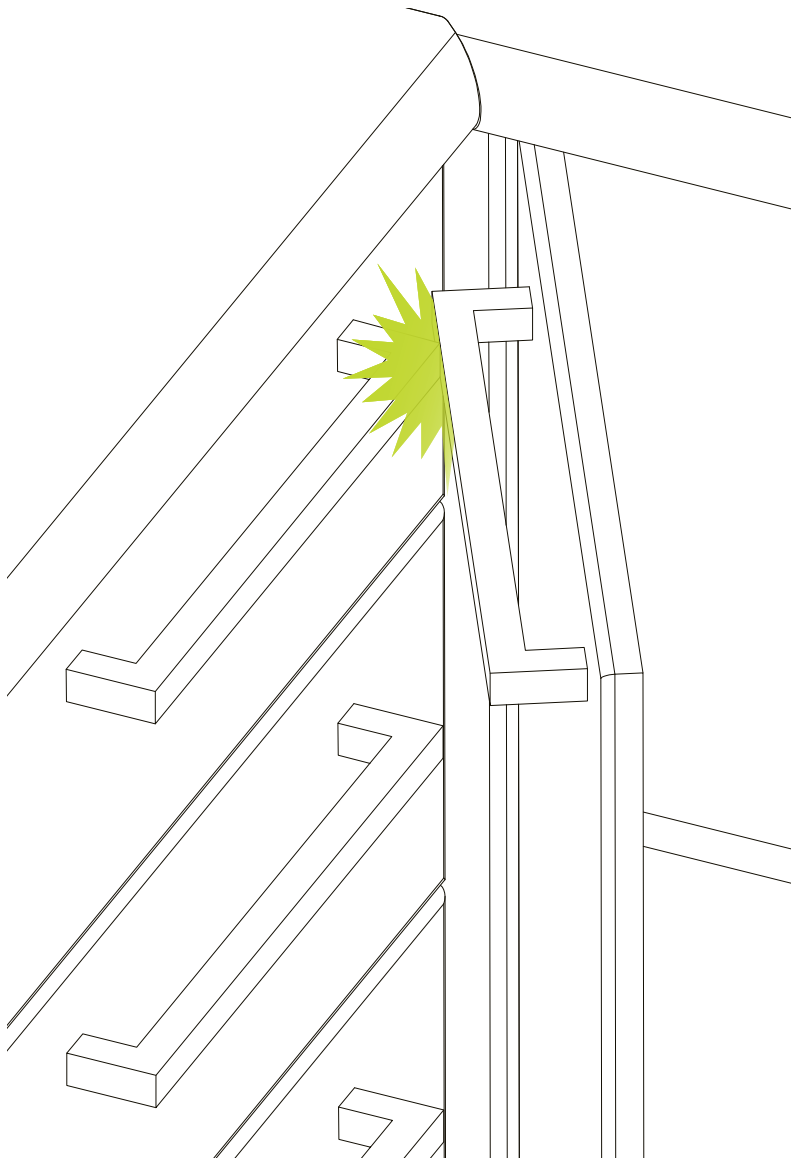

**NOTE:** Some handles in certain configurations can collide with each other when doors are open, potentially causing the blind corner cabinet doors to not open wide enough to access the pantry.

Test your chosen handles before installing and if you find that this is the case you will need to either adjust the positions of the handles, choose different handles, or use push to open mechanisms without any handles.

Alternately you can move your entire blind corner cabinet away from the wall 50mm\* so that the blind corner panel sits out from the adjoining cabinet by 90mm rather than 40, leaving room for the handles to open. When the benchtop is installed you will not be able to see the gap between the cabinet and wall.

### Caring for your kaboodle cabinets

Looking after your cabinets is really easy and with the right care and maintenance they will last you for many years. Just follow these simple steps and if you need any more information you can contact us: Australia: **1800 666 078** Monday to Friday between 8:00am and 6:00pm AEST. New Zealand: **0800 522 663** Monday to Friday between 8:00am and 5:00pm NZST or email: [info@kaboodlegroup.com.au](mailto:info@kaboodlegroup.com.au).


Clean your cabinets with an all purpose, non-abrasive cleaner with a damp sponge or cloth and make sure you never use saturated cloth, harsh chemicals or thinner based cleaners as these will damage the surface of the melamine. Likewise, never use products that will scratch the surface like steel wool or wire brushes and avoid sharp objects that will scratch, cut or gouge the melamine surface. If this happens the internal board will be exposed and may swell. Kaboodle cabinets are water resistant but not water proof so any spills should be attended to immediately.

**Handy hint:** if the melamine surface of your cabinet is damaged you can try and cover it with a furniture repair crayon but just remember that this won't seal the board back to its original finish.

We offer a dedicated customer service line for advice or any questions you may have on kaboodle products.

Call customer service on:  
Australia: **1800 666 078** Monday to Friday between 8.00am and 6.00pm AEST

New Zealand: **0800 522 663** Monday to Friday between 8.00am and 5.00pm NZST or email: [info@kaboodlegroup.com.au](mailto:info@kaboodlegroup.com.au)

<b>step 1</b> ✓			
Your Kaboodle cabinet is now complete.			
<b>step 4</b>			<b>step 2</b>
Finish off your Kaboodle Kitchen by installing your benchtop.			Next grab your parts and accessories instructions.
<b>step 3</b>			
Then follow the instructions to fit your doors and panels.			