
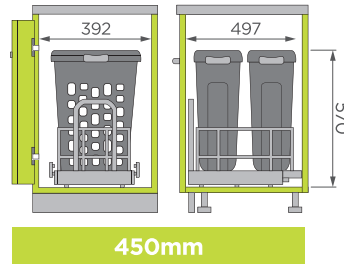


300 / 450mm pullout bins and laundry hamper


kaboodle
KITCHEN

suitable for min cabinet widths / depths

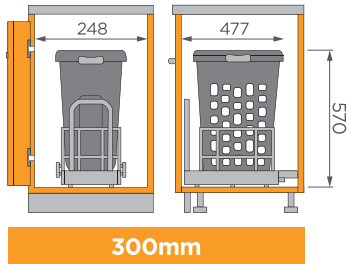

hardware included

A nut and bolt x 6



B 6mm screws x 4




C countersunk screws x 8



remove runners from basket assembly


1.

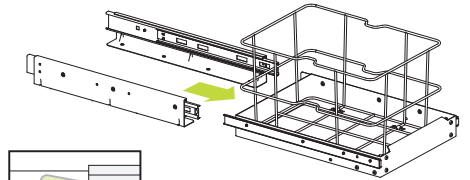

Separate runners from basket assembly using runner clips.

attach handle


2.

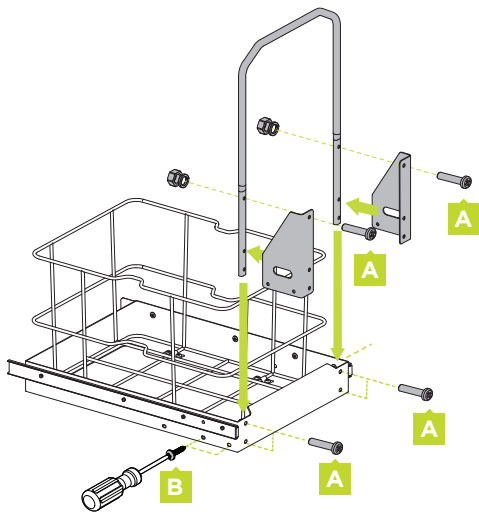

Attach handle to basket assembly using handle arms, nuts and bolts and screws.

mark fixing positions using template


3.

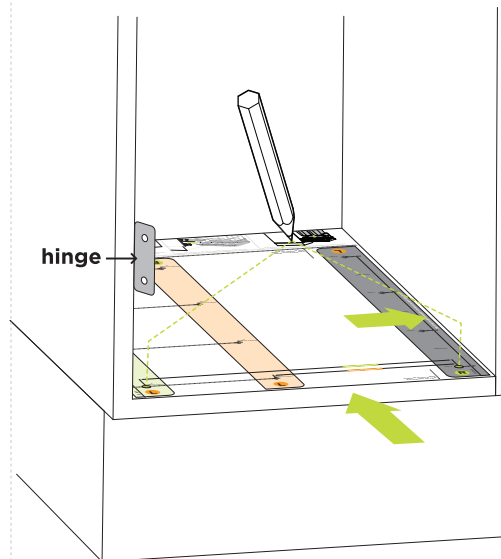

Place template in base of cabinet with dark grey bracket sitting opposite side to cabinet hinges. Mark drilling positions as per corresponding cabinet width.

drill fixing holes


4.

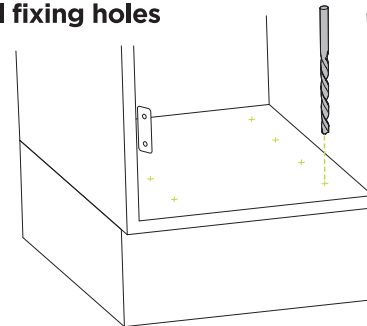

Pre-drill fixing holes as per marked positions using 2.5mm drill bit.

attach basket assembly to runners


6.

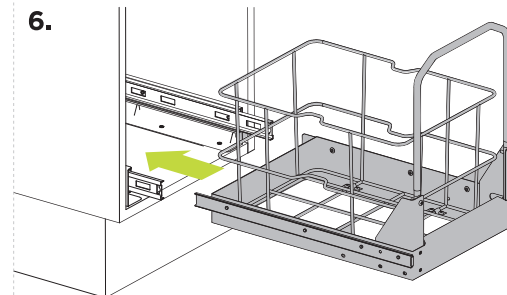

Slide the Lower Tray into runners. Makes click sound.

fix drawer runner brackets to cabinet base


5.

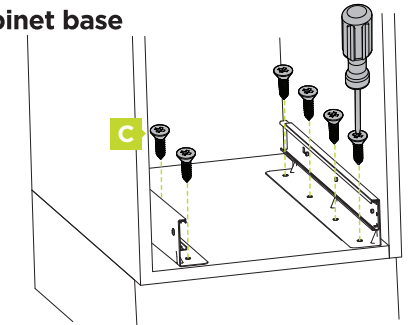

Fix brackets to cabinet base using 8 x countersunk screws.

install bins

7.

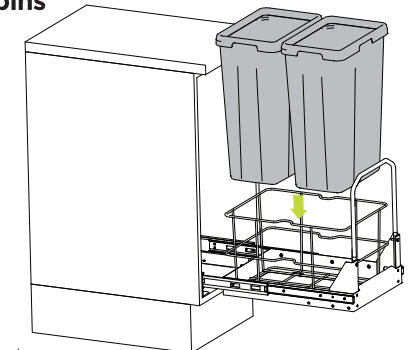

Install bin/s