


step 1

Follow these instructions to build and attach your cabinet.



oven tower cabinets





Things you need to know

- All cabinets will need to be attached to the wall using a minimum of 8 gauge 65mm screws if you have a stud wall. If your wall is concrete, brick or another surface ask your hardware specialist for advice on the right fixing method.
- Make sure you leave plumbing and electrical work to qualified trades people. Never try this yourself.
- For extra strength use exterior woodworking glue when assembling cabinets.
- To help identify panels, counter sunk holes always face outwards.
- All holes that aren't already pre-drilled should be drilled prior to screwing using a No 12 countersinking drill bit.

- Make sure you always use safety gear like a mask, ear muffs and glasses when using tools.
- If you have any questions, contact us on:
Australia: **1800 666 078** Monday to Friday between 8:00am and 6:00pm AEST, New Zealand: **0800 522 663** Monday to Friday between 8:00am and 5:00pm NZST or email: **info@kaboodlegroup.com.au**.

Regulations require that a qualified electrician/gas fitter must be employed for the installation of oven units. Please refer to your oven installation guide to see if the base of the oven cabinet needs to be cut out for ventilation before installing your oven.

Hardware included

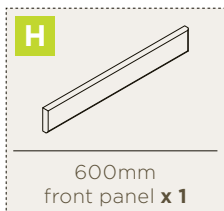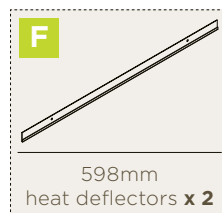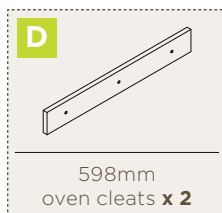
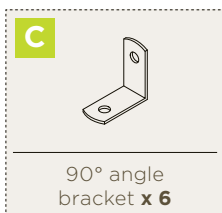


Tools you will need

To put your kaboodle kitchen cabinets together you will need the following tools.

Cordless drill with:


- Number 2 screw tip
- 4mm drill bit
- Number 12 countersinking drill bit

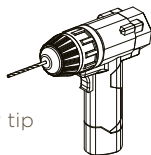

Tape measure




Pencil

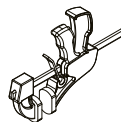


Clamps (quick release)




Safety gear




Adjustable square



65mm wood screw

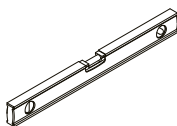

Spirit level (900mm recommended)




Wall fixing (if necessary)




oven tower cabinets

oven tower for 600mm high oven

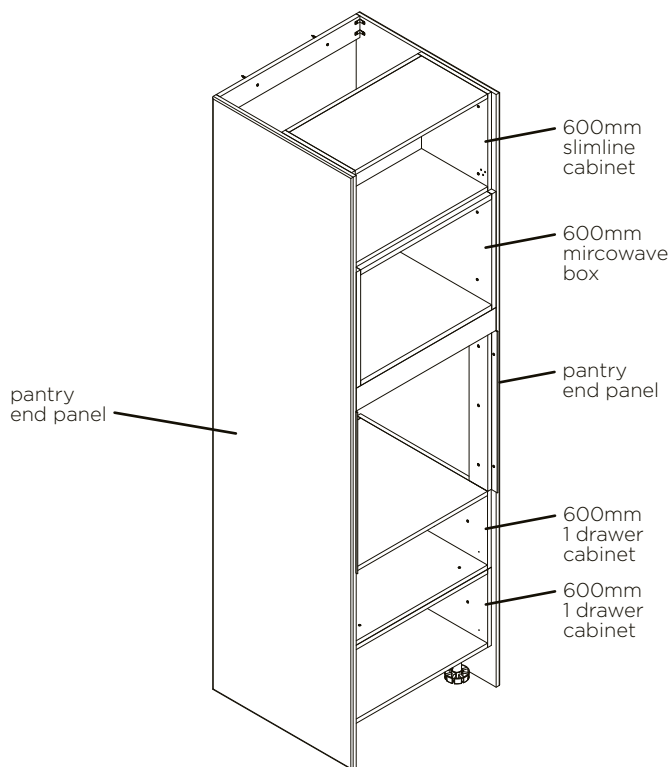


assembling 600mm oven cabinet

1.

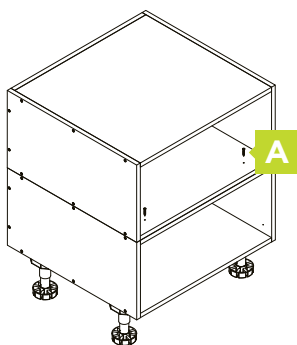

Pre-drill and screw together two 600mm 1 drawer cabinets.


2.

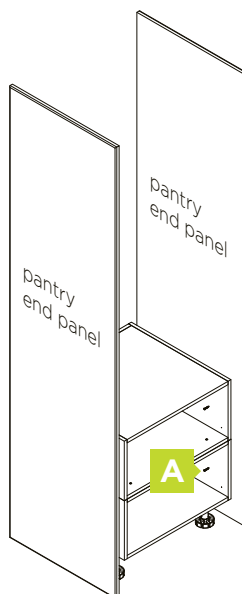

Set the drawer cabinet back from the front of the end panels 18mm for melamine doors and 20mm for thermoformed doors.





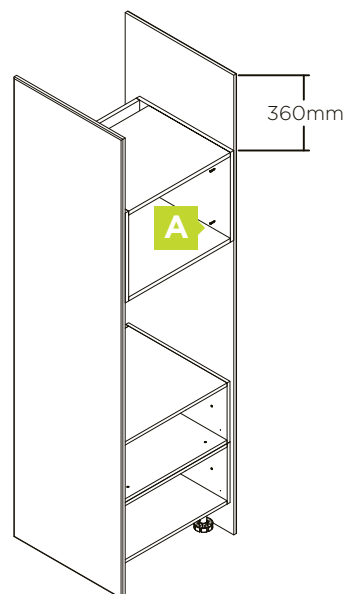


Note: make sure the feet have been adjusted to the correct height and that the cabinet is level.

3.




Attach the 600mm microwave box 360mm from the top of the end panels.


Note: Ensure microwave box is flush with the front of the end panels.

A	B	C	D	F	H	I
						
28mm wood screws	14mm wood screws	90° angle bracket	598mm oven cleats	598mm heat defectors	600mm front panel	600mm melamine support rail

oven tower cabinets

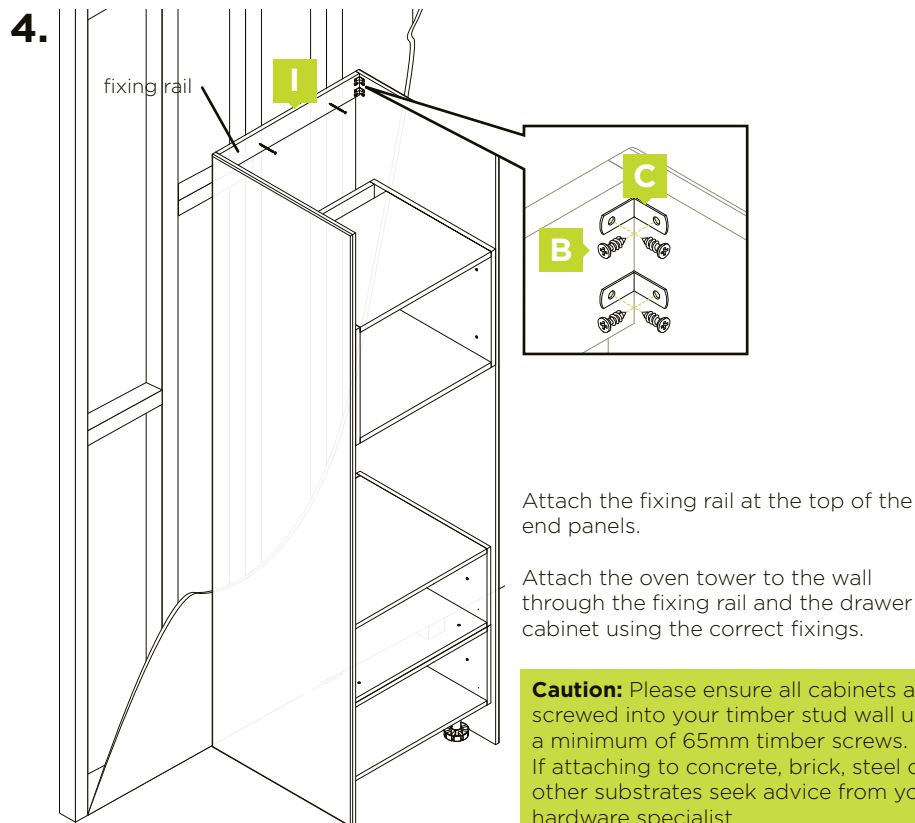

Caution: Please ensure all cabinets are screwed into your timber stud wall using a minimum of 65mm timber screws. If attaching to concrete, brick, steel or any other substrates seek advice from your hardware specialist.

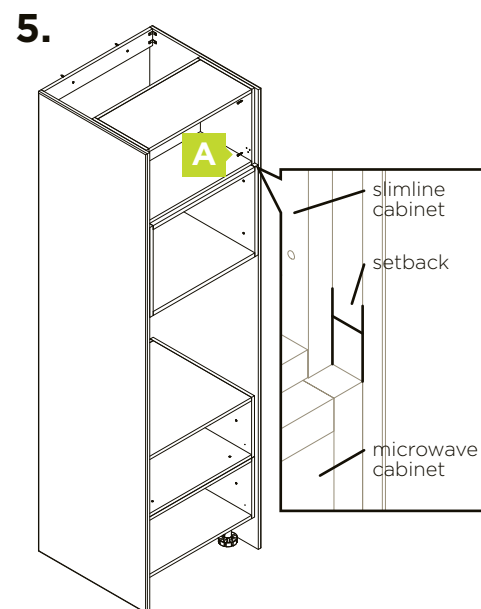


Attach the slimline cabinet on top of the microwave box.

Note: Set the slimline cabinet back from the front of the end panels 18mm for the melamine doors and 20mm for thermoformed doors.

attaching 600mm oven cleats


1.

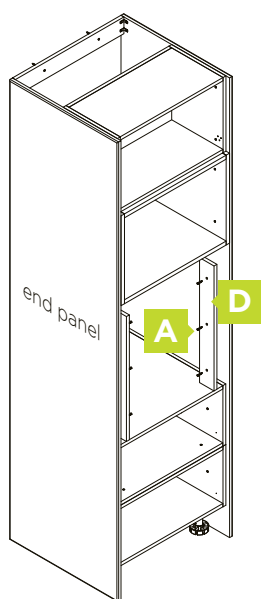

Attach the oven cleats 20mm back from the front of the end panels.

Note: The cleats should sit on the top of the drawer cabinet.

2.

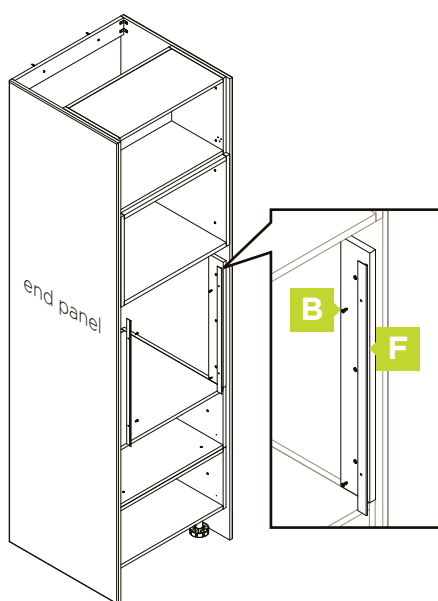


Attach the heat defectors onto the sides of the end panels in front of the cleats.

Note: the lip of the heat defectors should sit on the sides of the end panels.

attaching front panel


1.

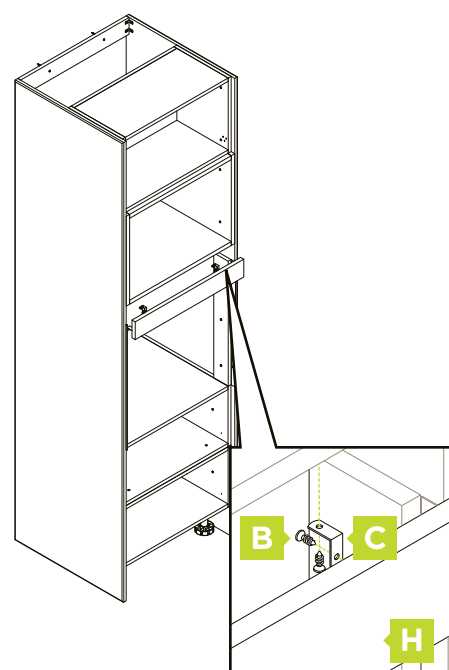




28mm
wood screws

oven tower for 890mm high oven

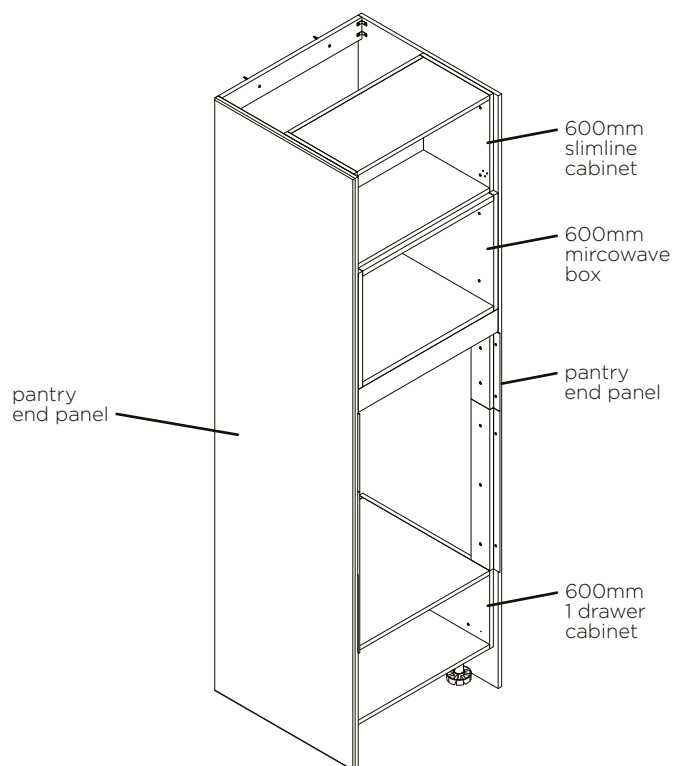

assembling 890mm oven cabinets


1.

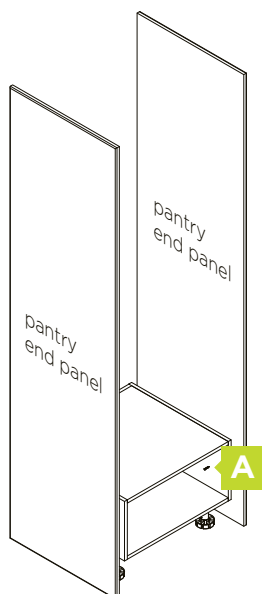

Set the drawer cabinet back from the front of the end panels 18mm for melamine doors and 20mm for thermoformed doors.

Note: make sure the feet have been adjusted to the correct height and that the cabinet is level.

2.

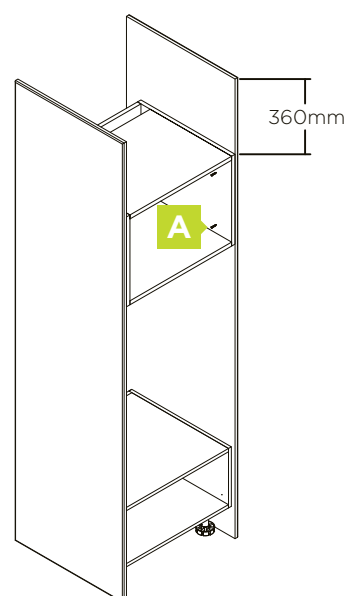


Attach the 600mm microwave box 360mm from the top of the end panels.

Note: Ensure microwave box is flush with the front of the end panels.

A	B	C	D	E	F	G	I
28mm wood screws	14mm wood screws	90° angle bracket	598mm oven cleats	298mm oven cleats	598mm heat deflectors	298mm heat deflectors	600mm melamine support rail

oven tower cabinets

4.

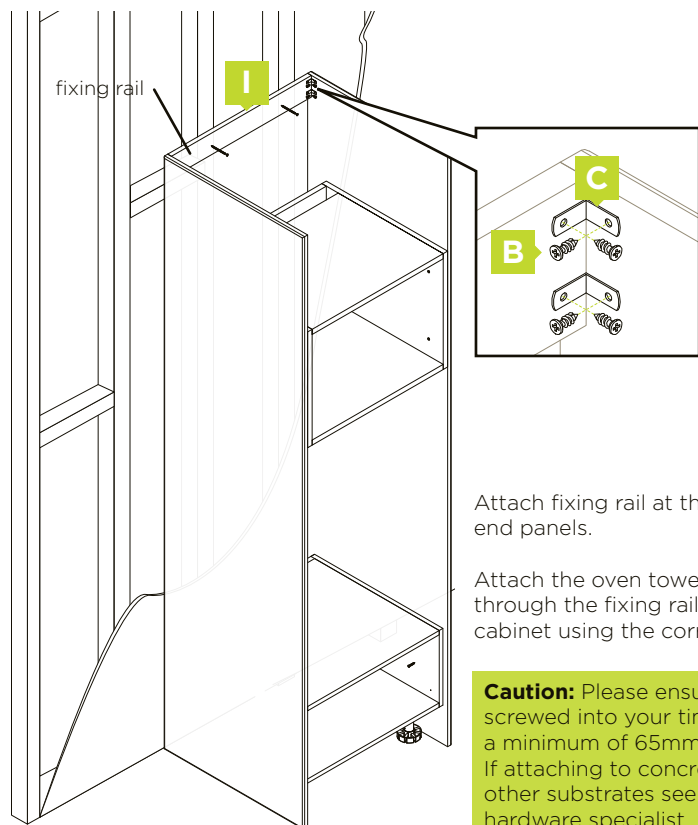


Attach fixing rail at the top of the end panels.

Attach the oven tower to the wall through the fixing rail and the drawer cabinet using the correct fixings.

Caution: Please ensure all cabinets are screwed into your timber stud wall using a minimum of 65mm timber screws. If attaching to concrete, brick, steel or any other substrates seek advice from your hardware specialist.

5.

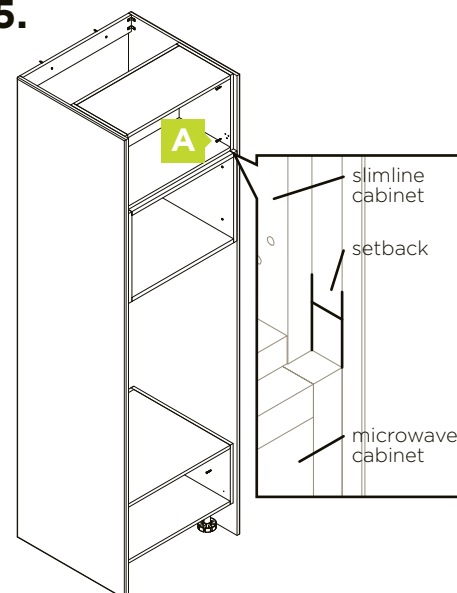


Attach the slimline cabinet on top of the microwave box.

Note: Set the slimline cabinet back from the front of the end panels 18mm for the melamine doors and 20mm for thermoformed doors.

attaching 890mm oven cleats


1.

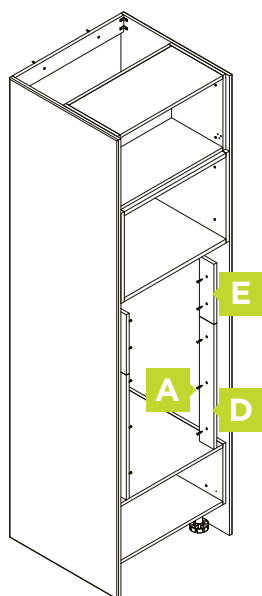

Attach both oven cleats 20mm back from the front of the end panels.




Note: The cleats should sit on the top of the drawer cabinet.

2.

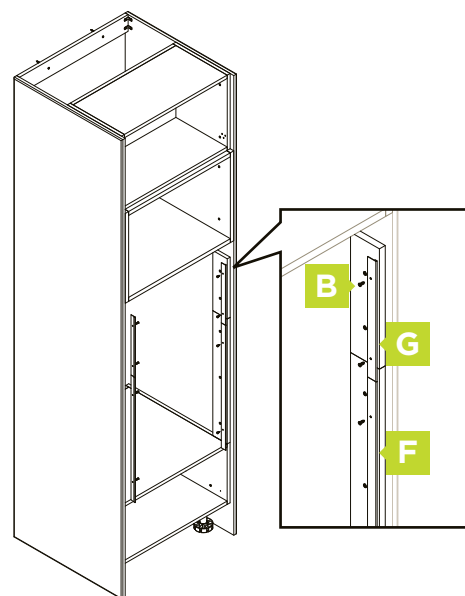

Attach both heat deflectors onto the sides of the end panels in front of the cleats.


Note: the lip of the heat deflectors should sit on the sides of the end panels.

B		C		H	
	14mm wood screws		90° angle bracket		600mm front panel

oven tower cabinets

joining cabinets

1.

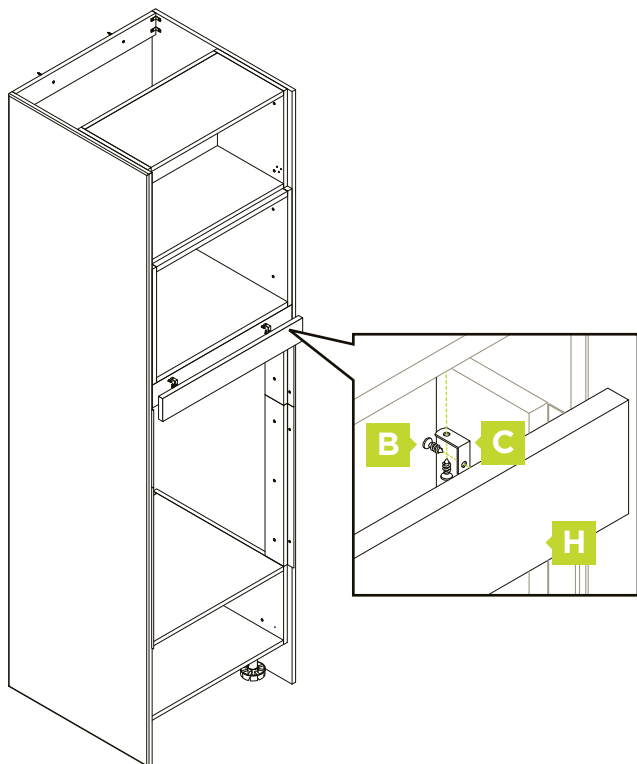

Caring for your kaboodle cabinets

Looking after your cabinets is really easy and with the right care and maintenance they will last you for many years. Just follow these simple steps and if you need any more information you can contact us: Australia: **1800 666 078** Monday to Friday between 8:00am and 6:00pm AEST. New Zealand: **0800 522 663** Monday to Friday between 8:00am and 5:00pm NZST or email: info@kaboodlegroup.com.au.



Clean your cabinets with an all purpose, non-abrasive cleaner with a damp sponge or cloth and make sure you never use saturated cloth, harsh chemicals or thinner based cleaners as these will damage the surface of the melamine. Likewise, never use products that will scratch the surface like steel wool or wire brushes and avoid sharp objects that will scratch, cut or gouge the melamine surface. If this happens the internal board will be exposed and may swell. Kaboodle cabinets are water resistant but not water proof so any spills should be attended to immediately.

Handy hint: if the melamine surface of your cabinet is damaged you can try and cover it with a furniture repair crayon but just remember that this won't seal the board back to its original finish.

We offer a dedicated customer service line for advice or any questions you may have on kaboodle products.

Call customer service on:
Australia: **1800 666 078** Monday to Friday between 8.00am and 6.00pm AEST

New Zealand: **0800 522 663** Monday to Friday between 8.00am and 5.00pm NZST or email: info@kaboodlegroup.com.au

step 1		step 1	Your Kaboodle cabinet is now complete.
step 4	Finish off your Kaboodle Kitchen by installing your benchtop.		step 2
step 3	Then follow the instructions to fit your doors and panels.		Next grab your parts and accessories instructions.