


How to set up Your ADSL Broadband?

What you'll need?

- Your ADSL router
- A microfilter
- A DSL (broadband) cable
- Your telephone handset
- A power socket

The below image shows how the setup should look like:

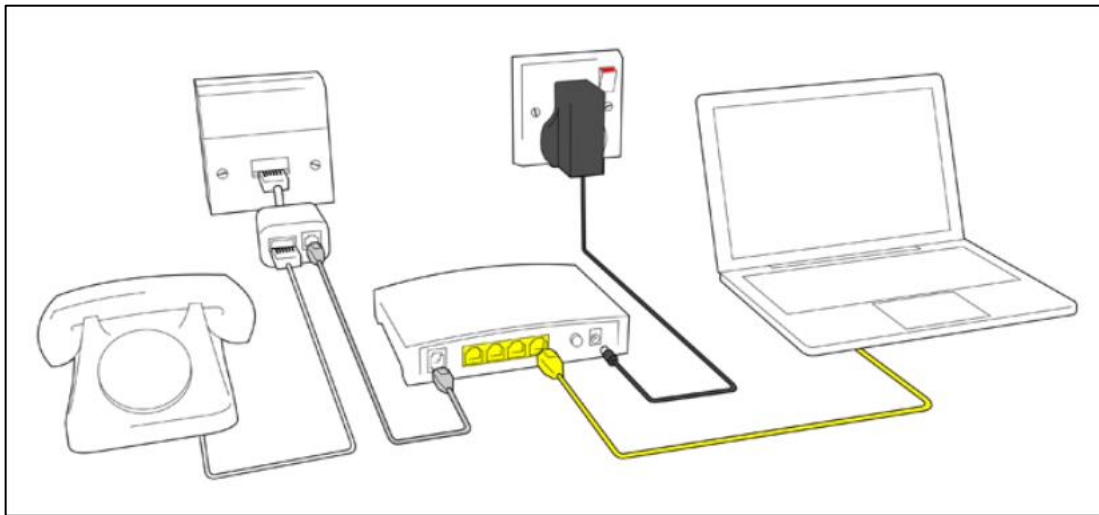

Step 1: Plug in the microfilter

- Insert the microfilter into the wall faceplate
- The microfilter has two ports:
 - One for the phone
 - One for the broadband

Step 2: Connect your phone

- Plug your telephone cable into the phone port on the microfilter.
- Connect the other end to your telephone handset.

Step 3: Connect your broadband

- Plug one end into the DSL/Broadband port on the microfilter.
- Plug the other end into the DSL port on the back of your router.

Below is an example of a **DSL cable**. The most common one we send with our routers is **grey**.



Step 4: Power on the router

- Plug the router into a power socket and switch it on.
- Wait a few minutes for the router lights to stabilise, this means your broadband is connecting.

Step 4: Connect your device

- Use Wi-Fi or an Ethernet cable to connect your computer, laptop, or other device to the router.

If you have any issues:

- Double-check that all cables are firmly connected.
- Make sure the microfilter is fitted correctly.
- Restart the router and wait a few minutes.

Need help?

If you need any help setting up your ADSL broadband, contact our support team by phone or message us on [WhatsApp](#).