



EN

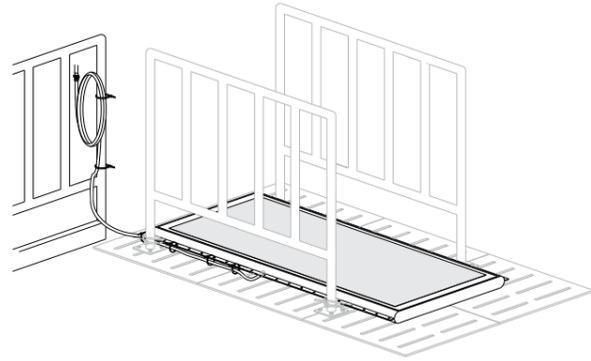


Article no.:  
Version: 1.0  
Date: 10-02-2025

### Parts overview (verification of delivery)

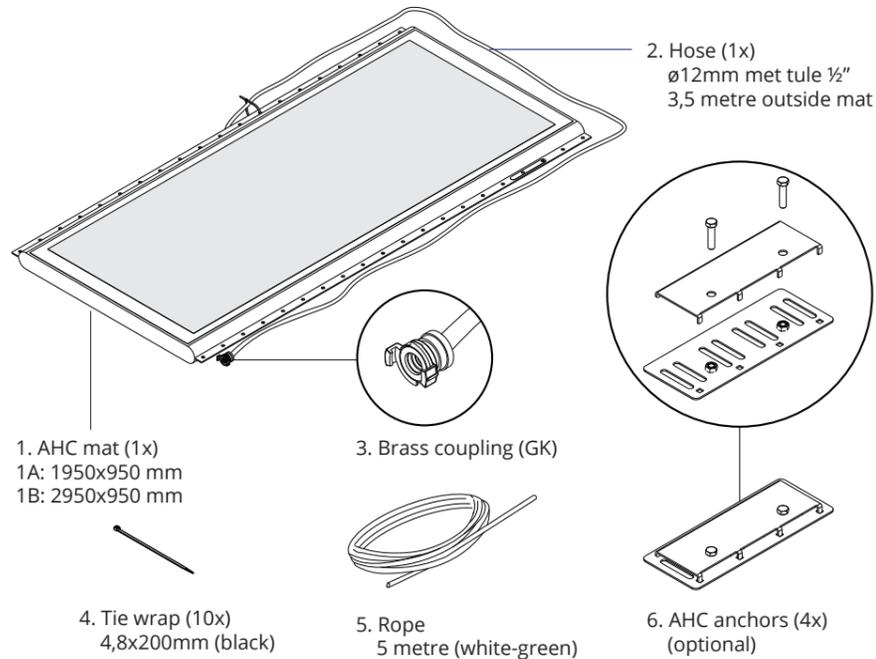

### Product dimensions (in mm)

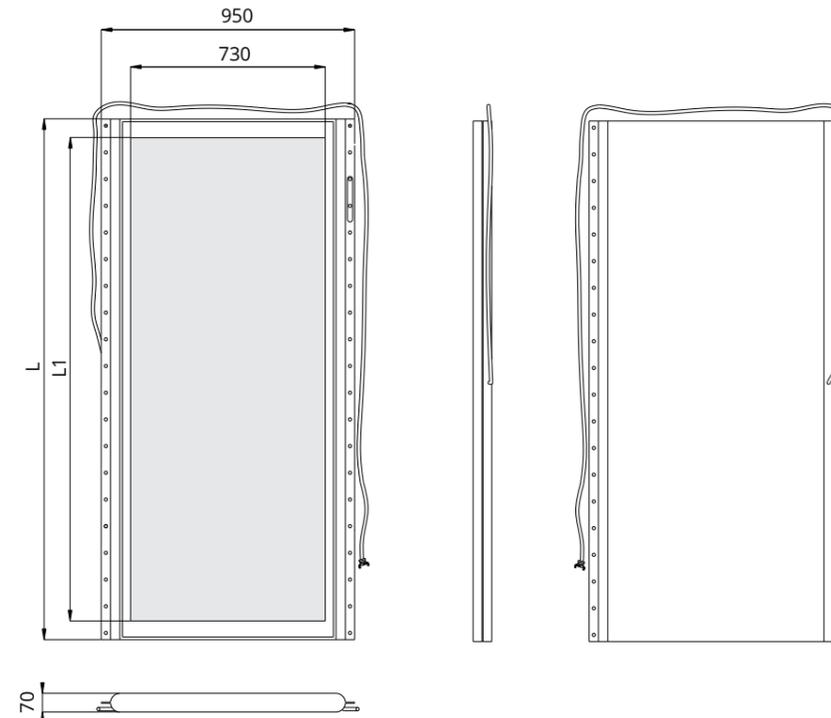

AHC Mat	1A	1B
L (in mm)	1950	2950
L1 (in mm)	1810	2810

### Explanation of symbols



### Required personal protective equipment





### Tool overview



### Preparation


Determine the installation location.  
Flat/level/straight surface for the mat.

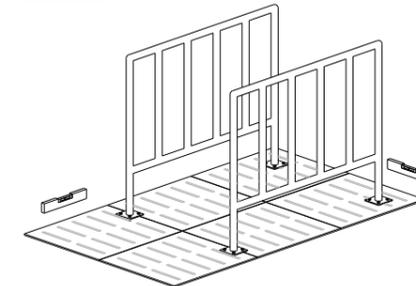


Cleaning the location for the mat.  
Remove contamination with HP washer.




No sharp objects.

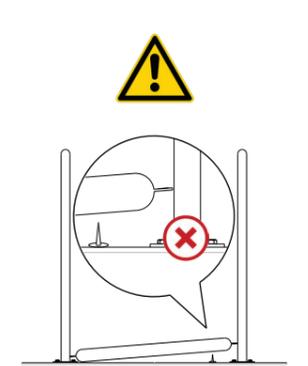

The mat (including parts) is packed in a sleeve.  
Cut open the sleeve with a knife at one side. Be careful not to damage the parts! Carefully remove the mat from the sleeve.

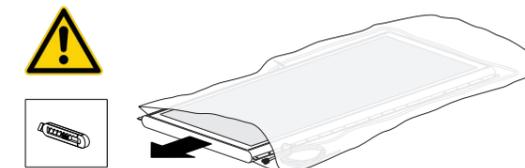

Detaches the rope/hose and tie-wraps from the mat by cutting the tie-wrap. Detach the parts of the mat on a clean level surface without grids.

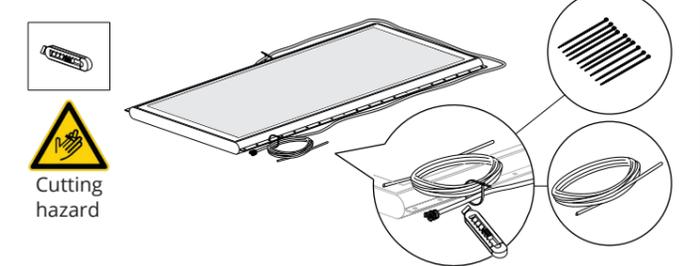

# Installation Steps

**1** Place/position the mat in the right place between the round tubes/fences.  
 ⚠️ Make sure the black side of the mat is at the top.

**2** Centre the mat between the round tubes/fence.

**3** Secure the mat to the round tubes at at least 4 connection points with rope.  
 Tie the rope through the holes of the mat around the round tubes.  
 ⚠️ Make sure the mat can not move.  
 Cut off the excess rope.

**3A** **Optional:** Securing the mat at 4 fixing points with AHC anchors in concrete.  
 Position the bottom plate on the ground and pre-drill the holes in concrete.  
 Place the tabs of the top plate through the round holes in the mat.  
 Fasten the top plate to the bottom plate with M12 bolts.  
 ⚠️ Make sure the mat can not move.

**4** Connect the hose using the GK coupling of the supply hose.

**5** Securing the hose to the mat with at least 4 tie-wraps to prevent movement.  
 ⚠️ Make sure the hose comes out of the mat in a good loop. Do not attach the hose too tight in one direction at the exit of the mat to prevent leakage.

**6** ⚠️ Safely arranging excess hose out of reach from cows.  
 Firmly secure the hose to the round tube with at least 2 tie-wraps to prevent movement. Make sure the hose makes a good loop.

**7** ✓ **Congratulations** your MS AutoHoofClean has been successfully installed!

**Contact**

**The Schippers Group B.V.**  
 Smaragdweg 60  
 5527 LB Hapert  
 The Netherlands

Phone: + 31 (0)497 339 787  
 E-mail: klantenservice.nl@schippers.eu  
 Website: www.msschippers.com

Scan QR-code for video installation instruction