


MONTERINGSANVISNING FÖR HELINTEGRERADE DISKMASKINER I ART

DISKMASKINER MED INBYGGNADSHÖJD 820 MM - LÅG MODELL (HÖGA MODELLER PASSAR EJ) H-SERIEN ART

DISKMASKIN MELLAN SKÅP

För Art gäller alltid den låga höjden på diskmaskinerna.


- Montera det medföljande DM-taket (638x500) ovanpå mötande skåp med ett indrag på 23 mm från skåpsframkanten.
- Kontrollera att hålmåttet för diskmaskinen är 600 mm.
- Montera den medföljande fuktavledande plåten under DM-taket enligt diskmaskinsleverantörens instruktioner.
- **Golvskydd monteras under diskmaskinen.**
- Montera diskmaskinen enligt anvisning.
- Montera snickeriluckan på diskmaskinen.
- Montera sockeln på skåpen och dra den även förbi diskmaskinen. Eventuellt måste man jacka ur sockeln för att kunna öppna snickeriluckan.

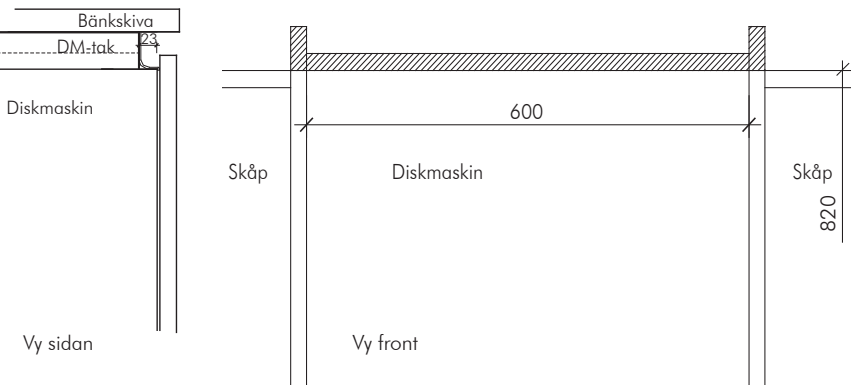

DISKMASKIN SOM YTTERSTA SKÅP MED HÖG TÄCKLUCKA

För Art gäller alltid den låga höjden på diskmaskinerna.


- Montera det medföljande DM-taket (638x500) ovanpå mötande skåp med ett indrag på 23 mm från skåpsframkanten.
- Kontrollera att hålmåttet för diskmaskinen är 602 mm.
- Montera den medföljande fuktavledande plåten under DM-taket enligt diskmaskinsleverantörens instruktioner.
- **Golvskydd monteras under diskmaskinen.**
- Montera diskmaskinen enligt anvisning.
- Montera snickeriluckan på diskmaskinen.
- Montera sockeln på skåpen och dra den även förbi diskmaskinen. Eventuellt måste man jacka ur sockeln för att kunna öppna snickeriluckan.

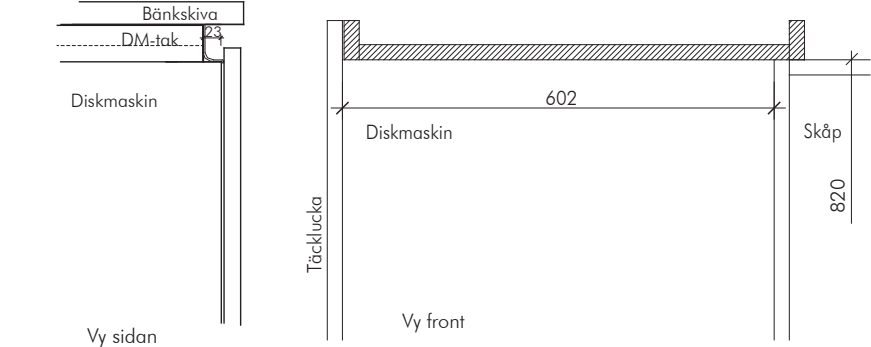

DISKMASKIN SOM YTTERSTA SKÅP MED LÅG TÄCKLUCKA

För Art gäller alltid den låga höjden på diskmaskinerna.

- Kontrollera att höjden till underkant DM-tak blir minst 825 mm (sockelhöjd 103mm).
- Montera vinkeljärnen i den förborrade täckluckan.
- Montera det medföljande DM-taket (638x500) tillsammans med täckluckan i de förborrade markeringarna.
- Montera sedan DM-taket ovanpå mötande skåp med ett indrag på 23 mm. Kontrollera att hålmåttet för diskmaskinen är 602 mm.
- Montera den medföljande fuktavledande plåten under DM-taket enligt diskmaskinsleverantörens instruktioner.
- **Golvskydd monteras under diskmaskinen.**
- Montera diskmaskinen enligt anvisning.
- Montera snickeriluckan på diskmaskinen.
- Montera sockeln på skåpen och dra den även förbi diskmaskinen. Eventuellt måste man jacka ur sockeln för att kunna öppna snickeriluckan.

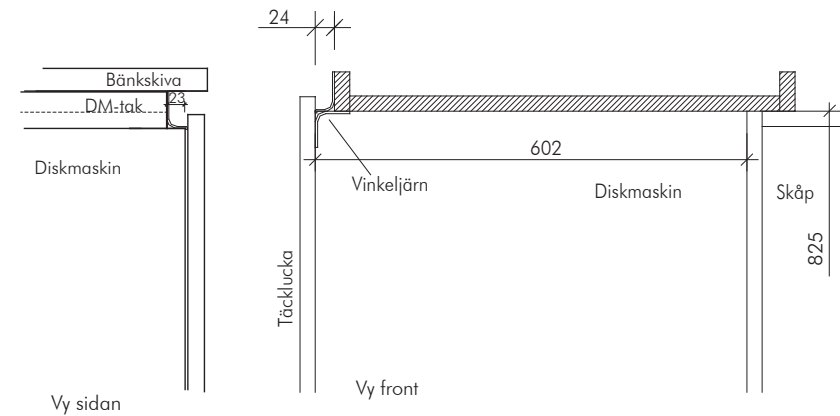


ASSEMBLY INSTRUCTIONS – FULLY INTEGRATED DISHWASHERS IN ART

DISHWASHERS WITH A BUILT-IN HEIGHT OF 820 MM – LOW MODEL (TALL MODELS DO NOT FIT), H-SERIES ART

DISHWASHER BETWEEN UNITS

Always use low-height dishwashers with Art.


- Mount the supplied DW-ceiling (638×500) on top of the adjacent units with an indentation of 23 mm from the front edge of the unit.
- Check that the opening for the dishwasher is 600 mm.
- Mount the supplied condensation deflector plate beneath the DW-ceiling according to the dishwasher manufacturer's instructions.
- **Install a floor protection tray under the dishwasher.**
- Install the dishwasher according to the instructions.
- Mount the door front onto the dishwasher.
- Install the plinth along the units and continue it across the dishwasher. It may be necessary to notch the plinth to allow the door front to open properly.

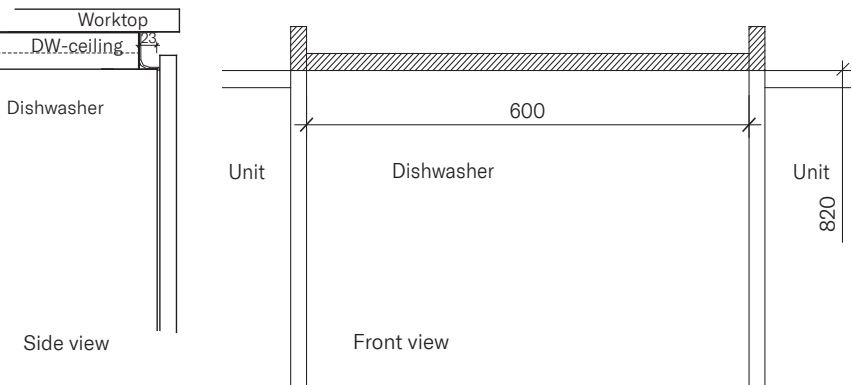

DISHWASHER AS AN END UNIT WITH A HIGH COVER PANEL

Always use low-height dishwashers with Art.

- Mount the supplied DW-ceiling (638×500) on top of the adjacent unit with an indentation of 23 mm from the front edge of the unit.
- Check that the opening for the dishwasher is 602 mm.
- Mount the supplied condensation deflector plate beneath the DW-ceiling according to the dishwasher manufacturer's instructions.
- **Install a floor protection tray under the dishwasher.**
- Install the dishwasher according to the instructions.
- Mount the door front onto the dishwasher.
- Install the plinth along the units and continue it past the dishwasher. It may be necessary to notch the plinth to allow the door front to open properly.

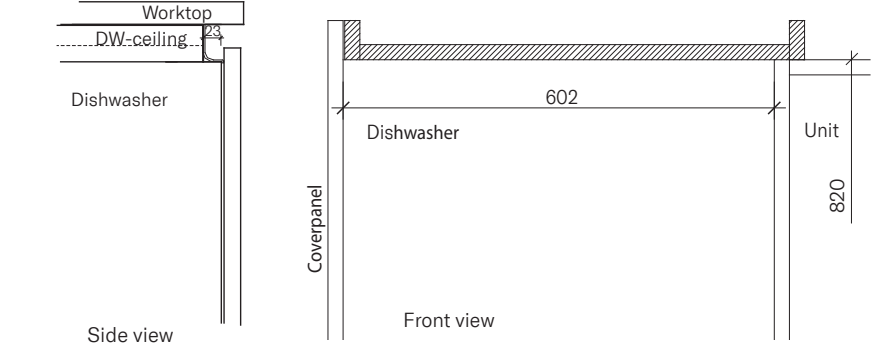

DISHWASHER AS END UNIT WITH LOW COVER PANEL

Always use low-height dishwashers with Art.

- Check that the height to the underside of the DW-ceiling is at least 825 mm (plinth height 103 mm).
- Mount the angle brackets onto the pre-drilled cover panel.
- Mount the supplied DW-ceiling (638×500) together with the cover panel using the pre-drilled markings.
- Then mount the DW-ceiling on top of the adjacent unit with an indentation of 23 mm from the cabinet front edge. Check that the opening for the dishwasher is 602 mm.
- Mount the supplied condensation deflector plate beneath the DW-ceiling according to the dishwasher manufacturer's instructions.
- **Install a floor protection tray under the dishwasher.**
- Install the dishwasher according to the instructions.
- Mount the door front onto the dishwasher.
- Install the plinth along the units and continue it past the dishwasher. It may be necessary to notch the plinth to allow the door front to open properly.

