Welcome to the set up guide for the Goatz and Ropes Single game.

The game will arrive on 1 pallet. Please inspect the pallet for shipping damage and report immediately to the freight company if any damage is found.

#### Tools Needed:

Ladder (8-15 foot) 7/16" Wrench 9/16" Socket 2 people # 2 Square bit T30 Torx bit

### Important:

Portions of this game are heavy, bulky and large.

Assembly requires 2-3 people to lift heavy components, and ladders that are tall and strong enough to position components to the top of the game.

The game will arrive with multiple cabinet components, and hardware for assembly. There are shipping bolts that must be removed by a T30 Torz bit to remove the cabinet from the pallet.

Installation time is about 1 hour.

#### Instructions:

Remove cardboard covering and plastic shrink wrap.

Remove the marquee from the front console by removing the 4 screws using a #2 square bit.

Discard the 4 screws, and save the marquee for later installation.






Remove the 2 wood spacers by removing the 6 screws using a #2 square bit.

Discard the 6 screws and 2 wood pieces - these are not needed.



Remove the next 2 wood spacers by removing the 4 bolts using a 9/16" socket.

Discard the 4 bolts and 2 wood pieces - these are not needed.

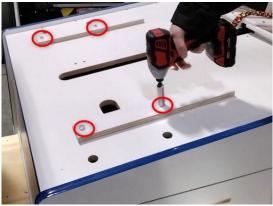

Remove both lower side doors using a Phillips screwdriver.





Reach inside and remove from cabinet:

Black plastic pulley assembly

White plastic pieces

Save for later installation.







Inside the 2 lower side doors, remove the 2 lag bolts using a T-30 Torx bit.

Discard the screws, they are not needed.

Using 2 people, carefully remove the front console from the pallet and place in room near the final destination of the game.

Do Not Remove Monitor from Pallet at this time. (It will not stand on its own - it will be placed on top of front console after it is ready.)






### **Prepare Front Console**

Carefully snip the plastic tie wrap on rope using a snips.

doors.

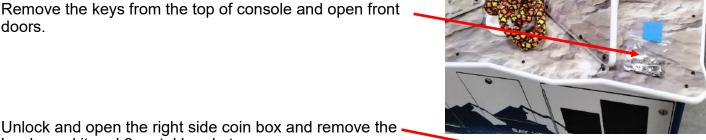

hardware kit and 2 metal brackets.



Open the hardware kit and locate:

- 4 bolts
- 4 lock washers
- 4 washers

These will be used to secure the monitor section to the Front Console.









#### **Remove Monitor Console from Pallet**


Carefully snip 2 banding straps using a snips.

Remove both back doors using a Phillips screwdriver. Save for later installation.

Inside the lower back door, remove the 1 lag bolts using a T-30 Torx bit.

On back edge of cabinet, remove the 2 lag bolts using a T-30 Torx bit.



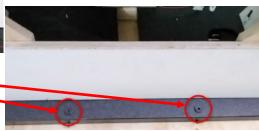

Using 2 people, carefully remove the monitor console from the pallet and place directly on top the slanted surface of the Front Console.

One person should hold monitor in position, while the second person installs the bolts.



Install the 4 bolts, lock washers, and washers into the 4 holes from the back of the monitor, down into the lower console.

Tighten using a 9/16" wrench.




### **Install Rope**

The rope will have to be looped up to the top of the cabinet and down inside the rear of the cabinet.

Some disassembly/reassembly of cabinet sections are needed.

Remove the 2 bolts from front of monitor frame using a Philips screwdriver.

Swing open the monitor frame.

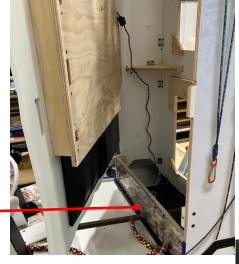



This board will be removed next.

With the monitor door opened, remove the 4 screws using a Phillips' screwdriver. Save for later installation.

Remove the board with plexi attached.

Position the rope above the board and re-install the board with plexi using the same hardware.

Tighten using a Phillips screwdriver.





Using a ladder, carefully climb to the top of the game.

The top of the cabinet will hinge open to allow the rope to loop around the top pulleys.

Remove the bolt using a 7/16" wrench. Save for later installation.

Loop rope over the top of the monitor frame.



Lift the roof up, loop rope inside the roof edge to the back of cabinet.





Loop rope past the rear edge.




Finish by looping the rope up over the top of the 2 pulleys.





Reinstall the bolt in the top panel, tighten using 7/16" wrench.

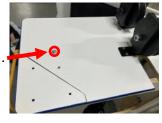



Reinstall the 2 bolts in the monitor frame, tighten using Phillips screw-driver.

Locate 2 black brackets previously removed from the coin box.


Locate 4 bolts from hardware kit.



Place a bracket on top of each pulley on the top of the game.

Install the 4 screws and tighten using a Phillips screwdriver.



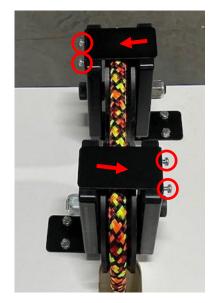

Locate Rear Pulley previously removed from the bottom of the cabinet.



Locate 2 bolts, 2 lock washers, and 2 washers from the hardware kit.



Install the Rear Pulley in the back of the Monitor Console.

Loop the rope around the pulley and install the 2 bolts, lock washers, and washers. Tighten using 7/16" wrench.



#### **Finalize Rope Installation:**

The rope installation is complete and it should move smoothly when pulled, It will loosen up with time and play, so there are adjustment points in the cabinet to tighten the rope.

Locate 2 white plastic pieces previously removed from cabinet.

Locate 6 black bolts from hardware kit.



Position white plastic pieces over the gap in the front console.

Install the 6 black bolts and tighten using a Phillips screwdriver.



### Install Marquee:

Locate marguee previously removed from the pallet.



Locate 2 bolts, 2 lock washers, and 2 washers from the hardware kit.



Using 2 people, carefully lift and place marquee on the top of the cabinet.

Install the 2 bolts, lock washers, and washers. Tighten using 7/16" wrench.




#### **Route and Connect Cables:**

From the side door, carefully snip the plastic tie wrap on cable harness using a snips.




Route all 4 cables up through the hole into the monitor console.

From the back of the monitor console, clip cables CE32509 & CE32500 into the first wire saddle.

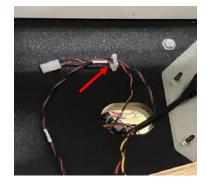


Plug the CE32500 cable into the speaker.

Plug the CE32509 cable into CE32518 (monitor surround LED's)

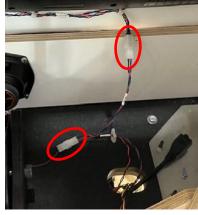

Plug the AC power cord into the monitor power cord.

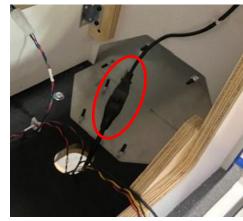

Continue routing the remaining 3 cables up the wall of the cabinet and clip into the 3 wire saddles.





Plug the HDMI cable into the top edge of the monitor - into the HDMI 1 slot.




Route the remaining 2 cables up through the hole in the top of the cabinet - to the marquee.



At the top of the game, plug the 2 pin connector to CE32524

Plug the 3 pin connector to CE32511

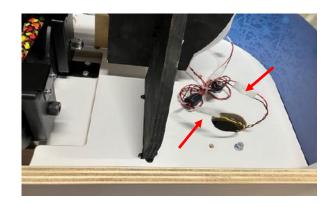

From side door, carefully snip the plastic tie wrap on power cord using a snips.

Route the power cable out the cabinet and plug into the wall socket.



#### Power on game:

Open the front door and turn on the rocker switch on the power strip.

The game is now set up and ready for play! Enter menu to adjust settings to your location specific price per play and ticket payout.

