

Kingspan DCH2

Cold storage doors (hinged)

Cold storage doors (hinged, double leaf) for use in buildings where the required interior temperature range is 0°C to +16°C.



**Door frame:**

- Fitted onto the opening
- One side exterior, made of aluminium, not insulated.
- Galvanized steel covered with 25 µm PES coating in R9002/R9010; protection foil.
- Foamed-in-place polyurethane insulation of 50 (+/- 2) kg/m³ density.
- For assembly to insulated panel wall using appropriate flashings from internal side.

Hardware:

- Lock - provided by FERMOD.
- Rising hinges provided by STUV.
- Screws and flashings for installation

Standard dimensions range:


- min: 1000 x 2000 mm,
- max.: 2400 x 2900 mm
- Non-standard dimensions are also available.

Technical information:**Temperature range:**


- For use in buildings where the required interior temperature range is 0°C to +16°C

Door leaf:


- Door leaf thickness: 80 mm, 100 mm
- Galvanized steel covered with 25 µm PES coating in R9002/R9010; protection foil.
- Other material can be used, e.g. INOX stainless steel, Foodsafe chemically neutral coating 150 µm thick for interior and food contact applications, etc.
- Foamed-in-place polyurethane insulation of 42 (+/- 2) kg/m³ density
- Rounding gasket to seal the contact point between the door leaf and the frame.
- Bottom gasket to seal the space between the door leaf and the threshold.
- Possibility to equip the door with a combined, two-chamber window and plastic bump stops.

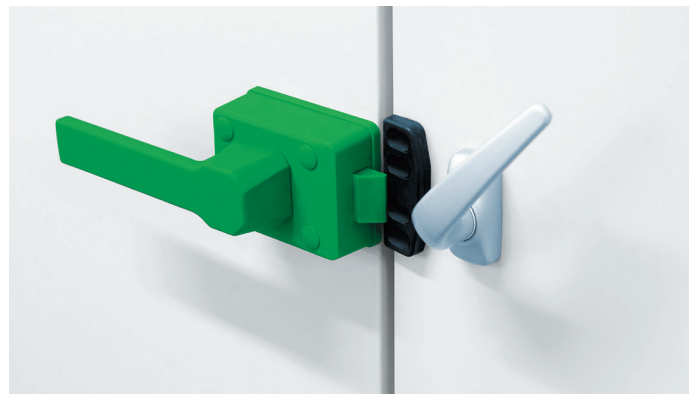


Drawings of installation:

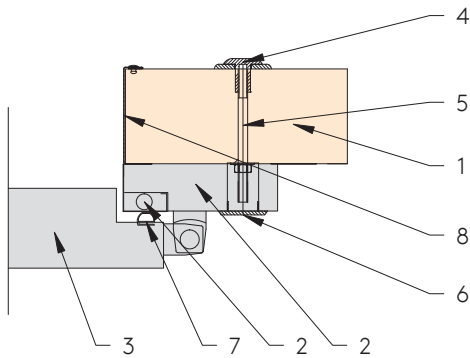


- 1 - Insulated wall panel
- 2 - Frame
- 3 - Door leaf
- 4 - "Castel Cool" bolt
- 5 - Ertalon rod M10
- 6 - Plug
- 7 - Circuit gasket
- 8 - Flashing
- 9 - Heating wire in the frame

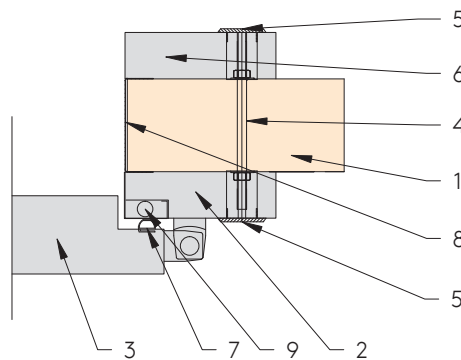


- 1 - Insulated wall panel
- 2 - Frame
- 3 - Door leaf
- 4 - Ertalon rod M10
- 5 - Plug
- 6 - Internal frame
- 7 - Circuit gasket
- 8 - Flashing
- 9 - Heating wire in the frame

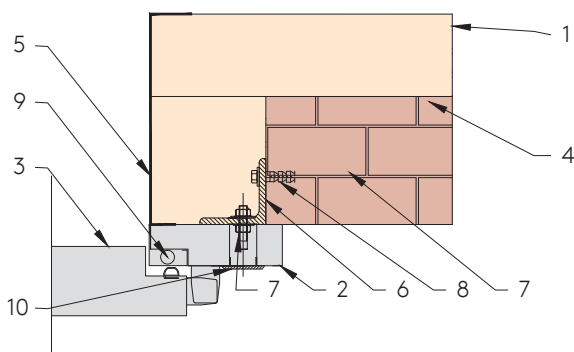

- 1 - Insulated wall panel
- 2 - Frame
- 3 - Door leaf
- 4 - Brick wall
- 5 - Flashing
- 6 - Angle bar 80x80x8 mm
- 7 - M10 type bolt with expanded washer
- 8 - Expansion anchor
- 9 - Heating wire in the frame
- 10 - Plug

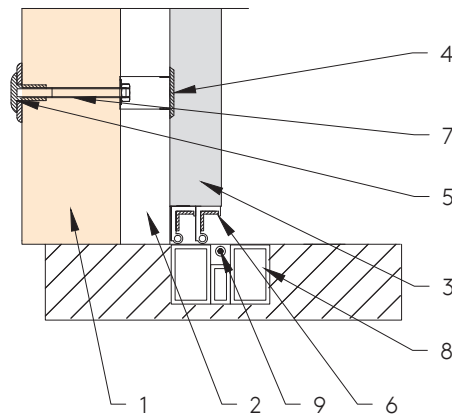

- 1 - Insulated wall panel
- 2 - Frame
- 3 - Door leaf
- 4 - Plug
- 5 - "Castel Cool" bolt
- 6 - Bottom gasket
- 7 - Ertalon rod M10
- 8 - Threshold
- 9 - Heating wire in the frame

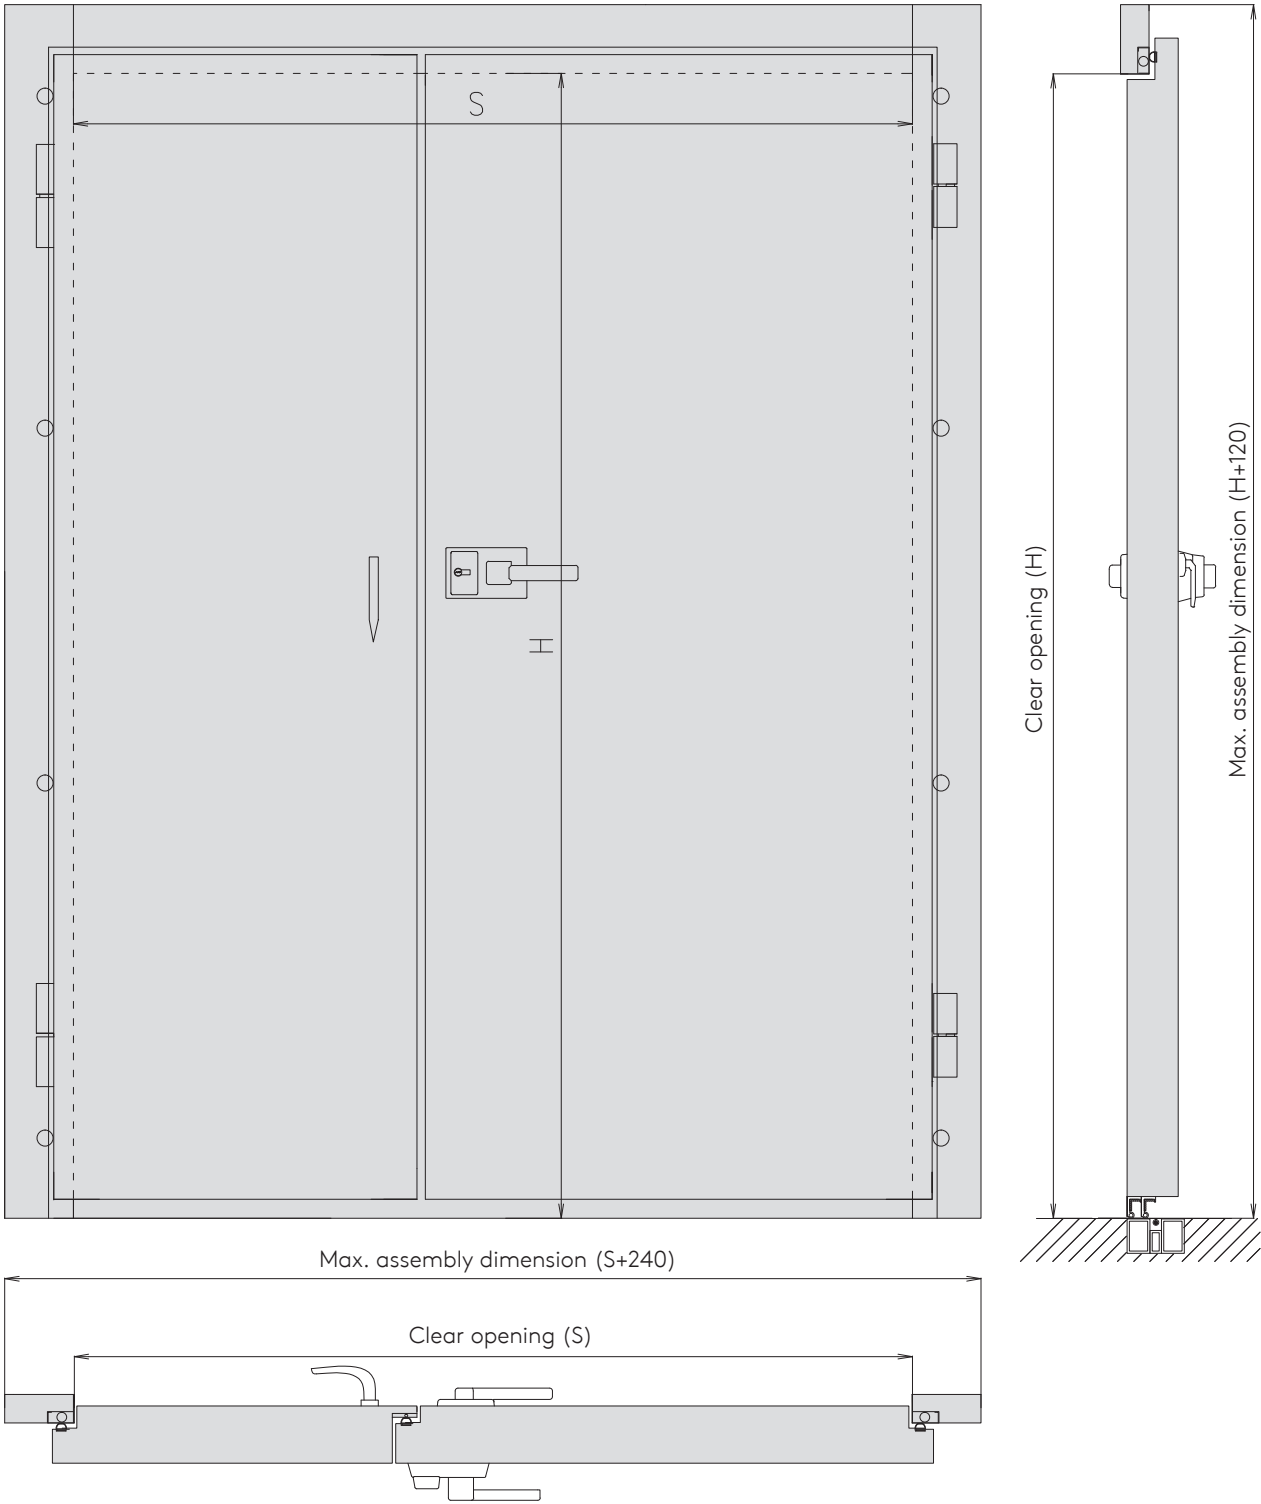

Installation guide:

1. Unpack doors.
2. Read a product description and compare it with your order and goods that have arrived to you (width, height, opening direction).
3. Check dimensions of an opening in a wall with the ones recommended by a producer (see Picture no 1 and 2).
4. Clean and smooth edges and surfaces of the opening.
5. Check the floor level at the area of a leaf revolution. In case of a lack of a target form of the floor you should allow for a proper installation gap.
6. Take the door leaf down a frame and remove a technological beam.
7. Put the frame temporarily in the chosen opening in the wall and immobilize it.
8. Correct the initial arrangement of the frame in the opening and immobilize it with quick installation handles.
9. Indicate and make installation holes for screws (installation to panels) or anchors (installation to brick wall)..
10. Install flashings in case of installation to panel.
11. Put the frame in the prepared place and immobilize it with quick installation handles. As far as freezer doors are concerned you should install a threshold on the same level as the existing floor and embed it in concrete.
12. Check the horizontal and vertical level of the frame and regulate it if necessary.
13. Check how the leaf closes and opens in the frame - depending on the situation, regulate it.
14. Tighten screws to install the arms of the frame.
15. Fill in a gap between the frame and the wall (the frame and a panel) with silicone.
16. Cover installation holes.
17. Remove protective foil from the leaf surface directly after the installation.

Maintenance:

Recommendations:

- At least twice a year you should smear lubricant on all hinges and a lock.
- At least twice a year you should preserve gasket with a substance for sealant preservation.
- You should fill in a loss of lacquer or zinc layer (which has been cased by scratches) to prevent the product from corrosion. Losses should be filled in with commonly-used anticorrosion paints.

Transport and storage of doors:

- You should exercise extreme caution while door transport and storage.
- Loading room should be clean and no sharp elements should stick out of the floor and walls to prevent doors from damage.
- Doors for transport (storage) should be laid vertically (separately) or horizontally – maximum 5 layers separated with a protective separator (standard-sized doors are packed in a carton box). In cases of big-sized doors, transport and storage should be arranged on a special rack.
- Doors that have been loaded on a truck should be belted to the vehicle in such a way that stability is ensured and goods are prevented from movement and damages during transport.
- Storage place should be dry and airy; apart from this it should shelter doors from rain, snow and sunlight.

Poland:

Kingspan Sp. z o.o.
ul. Przemysłowa 20
27-300 Lipsko
tel.: +48 48 378 31 00
fax: +48 48 378 13 30
www.kingspan.pl

Estonia:

Kingspan Eesti
Tel (+371) 28 393 333
info@kingspan.ee
www.kingspan.ee

Latvia:

Kingspan Latvia
Kronvalda bulv. 3-1
LV-1010 Riga
Tel: +371 28393 333
info@kingspan.lv
www.kingspan.lv

Lithuania:

UAB Kingspan
Neries kr. 16
LT-48402, Kaunas
Tel: +370 66 565 862
info@kingspan.lt
www.kingspan.lt

Ukraine:

ТОВ «Кінгспан-Україна»
7Б Наукова, офіс 113В
79060 м. Львів
+38 067 538 8930
email: info@kingspan.ua
www.kingspan.ua

Information about the product offer in others countries can be obtained from your local sales representative or on the website www.kingspan.com

Although Kingspan makes every effort to provide information contained in this publication were as accurate as possible, correct and complete, please note that its content should not be the basis of the procedure in any particular case. Any advice, opinions, information or other content is published solely based on the principle that neither the company, its employees or representatives, or people who contributed to the uprising of this publication, do not assume any liability for its content or any damage caused in connection with this content.

Issue: 05/08/2025 (v3)

To ensure you are viewing the most recent and accurate product information, please scan the QR code:

