

HEA•THOR IoT: Operation Manual

Last update: 17.12.2025, 13:32

Contents

1 Introduction

1.1 Explanation of the safety instructions

2 Intended use

2.1 Disclaimer and warranty exclusion

3 Safety instructions

4 Assembly

5 Technical Data

6 Device description

6.1 Control and display elements

6.2 Possible Settings with the rotary knob

6.2.1 Set the target temperature

6.2.2 Resetting the STL (safety temperature limiter)

7 Local websetup

7.1 Download local websetup

7.2 Connect the HEA•THOR IoT with the local web interface

7.3 Home – Homepage

7.3.1 Widgets

7.4 Data logger

7.5 Status information

7.6 Device settings

7.6.1 Cloud Mode

7.6.2 Hot Water

7.6.3 Time

7.6.4 IP Settings

7.6.5 Legionella Protection

7.6.6 Hysteresis

7.6.7 Version Firmware

8 Control options

8.1 Modbus TCP/ RTU, http

8.2 API

8.3 my-PV DTO

9 Error table

These operating instructions contains important information on operating and maintaining the product.

Please be sure to observe the safety instructions and carefully read the assembly instructions and the quick start guide supplied with the device.

The current version of the assembly instructions and the quick start guide can be found [here](#).

1.1. Explanation of the safety instructions



Warning!

Indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.



Caution!

Indicates a hazard with low risk which, if not avoided, may result in minor or moderate injury.



Note!

Indicates information that is considered important but is not related to hazards

2. Intended use

The HEA•THOR IoT is an electronic heating rod for heating drinking water and heating water. The device is intended exclusively for heating water in closed, pressure-resistant hot water tanks or buffer tanks.

The HEA•THOR IoT is intended for stationary use in domestic technical systems and may only be operated in suitable containers with sufficient water content and tested pressure resistance.

The device is designed for operation with electrical energy in accordance with the nominal values specified on the type plate.

2.1. Disclaimer and warranty exclusion

The information in this manual has been carefully researched and checked. However, the manufacturer does not guarantee the accuracy, completeness or actuality of the information provided. Any use of the product described in this manual is at your own risk. The manufacturer is not liable for any damage caused by improper handling, installation or use of the product.

Always follow the safety instructions given in this manual to avoid injury or damage.

Changes or modifications to the products without the express approval of the manufacturer can affect safety and performance and will void the warranty.

Please be sure to read the safety instructions and information on how to assemble the device correctly in the assembly instructions provided with the device!

The product complies with legal, national and European requirements.

The company name and product designation are trademarks of my-PV GmbH.

All rights reserved

3. Safety instructions

The device is intended exclusively for heating drinking water and heating water in accordance with (VDI 2035) in a closed or open metal storage tank.

During operation, the heating element must be completely immersed in the medium to be heated on all sides. The thermally induced flow must not be impeded.

The installation position must be horizontal or vertical. A sleeve with a suitable thread size (G1 ½") must be available. Alternatively, installation can be carried out using a lock nut, which is not included in the scope of delivery. In front of the installation sleeve, "installation length +150 mm" must be kept free for installation and servicing.

The housing must not become damp or wet; it is only suitable for dry indoor areas. There is a risk of fatal electric shock!

Do not install the device in an environment contaminated with ammonia.

Do not install the device in dusty environments.

The ventilation slots on the housing must not be covered under any circumstances.

The device housing may become warm during operation.

Avoid exposure to extreme heat, cold or direct sunlight during storage and operation.

This device can be used by children aged 8 years and above and by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised or instructed in the safe use of the device and understand the resulting dangers. Children must not play with the device. Cleaning and user maintenance must not be carried out by children without supervision.

The heating output must be adapted to the volume of the medium to be heated. The user is responsible for making the correct selection. The specified surface load must be observed. If necessary, consult the manufacturer before putting the device into operation.

A fixed electric potential equalisation must be established for the hot water tank.

The maximum operating pressure is 10 bar.



WARNING!

- Electrical connection, installation, commissioning and servicing must only be carried out by a qualified specialist.
- The power supply plug must never be disconnected while the device is under voltage!
- The SELV relay is a potential-free switching contact for safety extra-low voltage. There is a risk of death if mains voltage is connected.

4. Assembly

Information on installing the HEA•THOR IoT can be found in the assembly instructions supplied with the device.

The current version of the assembly instructions can be found [here](#).

5. Technical Data

Product	Heating capacity
----------------	------------------

HEA•THOR IoT 3.5 kW	3.500 W
--------------------------------	---------

HEA•THOR IoT 9 kW	9.000 W
------------------------------	---------

Product	Mains connection
----------------	------------------

HEA•THOR IoT 3.5 kW	Single-phase, 230 V, 50 Hz
--------------------------------	----------------------------

HEA•THOR IoT 9 kW	Three-phase 3 x 230 V, 50 Hz
------------------------------	------------------------------

Product	Standby consumption
----------------	---------------------

HEA•THOR IoT 3.5 kW	<1,5 W
--------------------------------	--------

HEA•THOR IoT 9 kW	<1,5 W
------------------------------	--------

Product	Adjustment options
----------------	--------------------

HEA•THOR IoT 3.5 kW	via rotary knob, my-PV Websetup or my-PV Cloud
--------------------------------	--

HEA•THOR IoT 9 kW	via rotary knob, my-PV Websetup or my-PV Cloud
------------------------------	--

Product	Interfaces
----------------	------------

HEA•THOR IoT 3.5 kW	Ethernet RJ45, WLAN, RS485, potential-free switching output
--------------------------------	---

HEA•THOR IoT 9 kW	Ethernet RJ45, WLAN, RS485, potential-free switching output
------------------------------	---

Product	Operating temperature range
HEA•THOR IoT 3.5 kW	The ambient temperature at the housing must not exceed 40°C
HEA•THOR IoT 9 kW	The ambient temperature at the housing must not exceed 40°C

Product	Protection class
HEA•THOR IoT 3.5 kW	IP 21
HEA•THOR IoT 9 kW	IP 21

Product	Dimensions (L x H x W)
HEA•THOR IoT 3.5 kW	580 x 133 x 117 mm (with heating element)
HEA•THOR IoT 9 kW	865 x 133 x 117 mm (with heating element)

Product	Heating rod length
HEA•THOR IoT 3.5 kW	460 mm (from sealing level)
HEA•THOR IoT 9 kW	740 mm (from sealing level)

Product	Heating rod thread dimension
HEA•THOR IoT 3.5 kW	G 1 1/2 inch
HEA•THOR IoT 9 kW	G 1 1/2 inch

Product	Heating-free zone
----------------	-------------------

HEA•THOR IoT 3.5 kW	140 mm from seal surface
--------------------------------	--------------------------

HEA•THOR IoT 9 kW	140 mm from seal surface
------------------------------	--------------------------

Product	Warranty
----------------	----------

HEA•THOR IoT 3.5 kW	2 years (except calcification)
--------------------------------	--------------------------------

HEA•THOR IoT 9 kW	2 years (except calcification)
------------------------------	--------------------------------

Product	Tightening torque
----------------	-------------------

HEA•THOR IoT 3.5 kW	50 Nm
--------------------------------	-------

HEA•THOR IoT 9 kW	50 Nm
------------------------------	-------

Product	Max. operating pressure
----------------	-------------------------

HEA•THOR IoT 3.5 kW	10 bar
--------------------------------	--------

HEA•THOR IoT 9 kW	10 bar
------------------------------	--------

Product	Mounting position
----------------	-------------------

HEA•THOR IoT 3.5 kW	horizontal / vertically standing
--------------------------------	----------------------------------

HEA•THOR IoT 9 kW	horizontal / vertically standing
------------------------------	----------------------------------

Product	my-PV item number
----------------	-------------------

HEA•THOR 21-0300
IoT 3.5 kW

HEA•THOR 21-0900
IoT 9 kW

6. Device description

The HEA•THOR IoT can be controlled via Modbus TCP/RTU, HTTP or API.

In combination with a dynamic electricity tariff, the HEA•THOR IoT can be controlled via the my-PV DTO to automatically heat the water at the most favourable electricity prices.

6.1. Control and display elements



1. Rotary knob
2. Temperature display
3. Fault display
4. LAN connection display
5. WLAN connection display

6.2. Possible Settings with the rotary knob

6.2.1. Set the target temperature

1. Press and hold the rotary knob for at least one second
2. The current target temperature flashes
3. Turn the rotary knob to the desired target temperature.
4. To save the setting, press the rotary knob once
5. The current storage temperature is displayed again

6.2.2. Resetting the STL (safety temperature limiter)

The STL is factory-set to trigger at temperatures above 98°C. Before you can reset the STL, the temperature must have dropped by at least 10°C.

To reset the STL, press the rotary knob for at least 5 seconds.

6.2.3. Reset to factory settings

You can reset the HEA•THOR IoT to factory settings at any time using the rotary knob.

To do this, press the rotary knob and hold it down for at least 10 seconds.

Once the factory reset has been completed, the HEA•THOR IoT will restart.

7. Local websetup

The websetup is a single HTML file that is saved locally after downloading. After that, Internet access is no longer necessary.

It only connects to the device within the local network, while remote access is only possible via the my-PV Cloud.

Note

The local web interface must be distinguished from the my-PV Cloud

<https://live.my-pv.com/>

7.1. Download local websetup

Note


- my-PV recommends not making the HEA•THOR IoT accessible to the Internet via port forwarding!
- Please note that the display and setting options may change with more recent software versions.

Download the my-PV Websetup to your end device beforehand:

<http://www.my-pv.com/download/currentversionget.php>

7.2. Connect the HEA•THOR IoT with the local web interface


When opening for the first time, the IP address range of the network in which the device is located must be set. The entry is saved by the web browser, but the address range can be redefined at any time via Settings and the "IP search range" button.

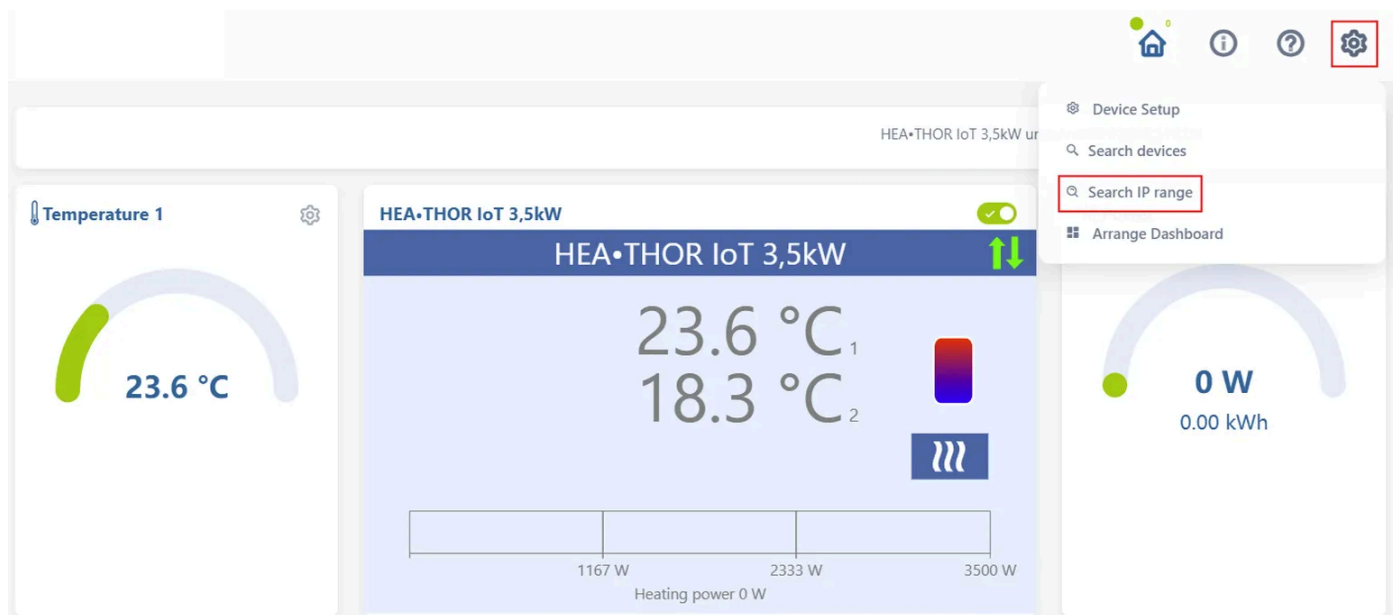

If the IP address of the device is known, it can also be entered directly by selecting "Known IP address".

The screenshot shows a dialog box for selecting an IP address. It has two radio buttons: 'Search IP range' (selected) and 'Known IP address' (highlighted with a red box). Below the radio buttons are four input fields containing '192', '168', '178', and '1-254'. A 'Submit' button is at the bottom right.

7.3. Home – Homepage

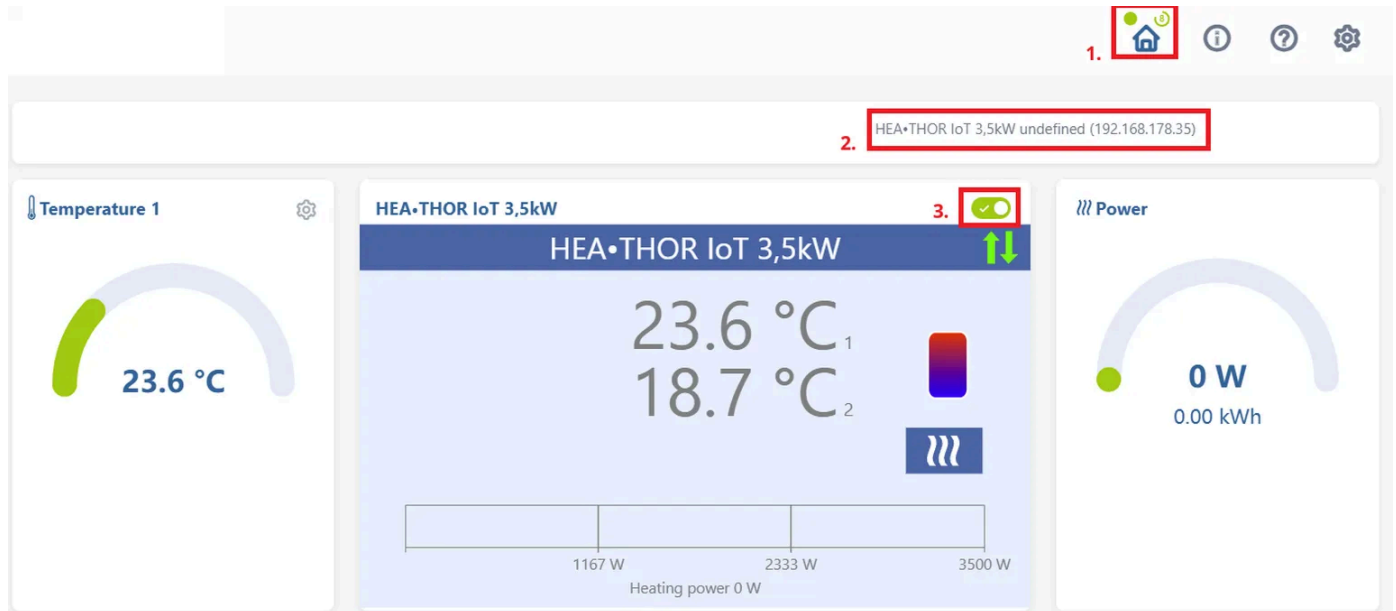


The start page offers the same information in the web browser as the home screen on the display.

1. The countdown (10 seconds) next to the Home button shows the time remaining until the next data update.
2. The websetup of other my-PV devices in the same network can be accessed directly via a quick selection in the top right-hand corner.
3. The HEA•THOR IoT can be deactivated with "Device status on/off".

7.3.1. Widgets

If you are on the start page, the "Arrange dashboard" button is available under Settings. This allows you to rearrange the windows on the start page ("Widgets"). To hide a widget, drag it under the horizontal line and press the "Save" button to save the new arrangement.

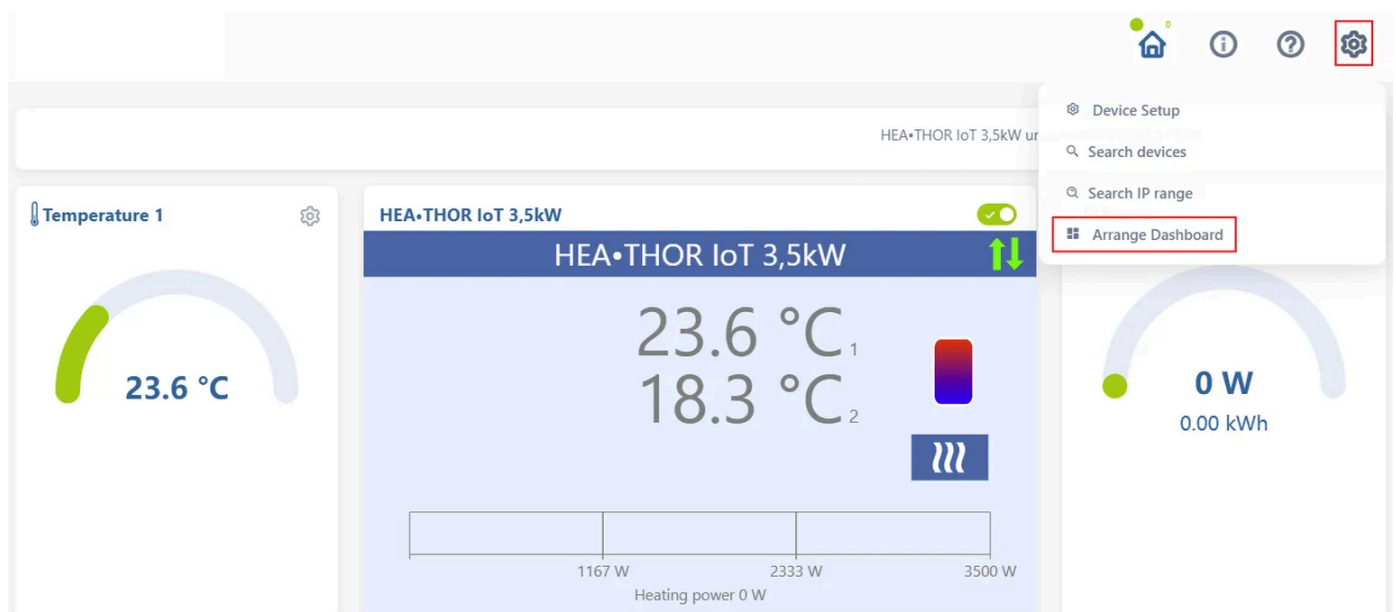

7.4. Data logger

Note!

The data logger is only available in the my-PV Cloud.

The data logger provides the same information in the web browser as the data logger on the display. The values and the time period can be selected using the menu bar above the diagram.



7.5. Status information

The status information in the websetup contains detailed informations about the HEA•THOR IoT.

Solthor State		
State	1, Heating	
Solthor	466 W	
Solarpart	466 W	
Gridpart	0 W	
Temperature 1	23,4 °C	
Temperature 2	0 °C	
Temperature 3	0 °C	
Boost active	0	
Time	10:37:52	
Mains Voltage	242 V	
Solar Input Voltage	169,2 V	
Current L1	0 A	
Mains frequency	50,1 Hz	
Temperature power stage	29 °C	
State power stage	Wait for startup	
Relay Boost	0	
Relay Alarm	0	
Cloud state	4, Connected (0)	

State:

Current device status

Power:

Current heating power of the HEA•THOR IoT

Power L1:

Current heating power of the HEA•THOR IoT on L1

Power L2 (only HEA•THOR IoT 9 kW):

Current heating power of the HEA•THOR IoT on L2

Power L3 (only HEA•THOR IoT 9 kW):

Current heating power of the HEA•THOR IoT on L3

SELV Relays state:

Current state of the SELV Relay (0 = off; 1 = on)

Temperature 1:

Current measured value of internal temperature sensor T1

Temperature 2:

Current measured value of external temperature sensor T2

Boost active:

Shows if boost is active (0 = not active; 1= boost active)

Next legionella boost:

Shows the days until the next legionella boost starts (only if activated)

Date:

Shows the actual date

Time:

Shows the actual time

Mains voltage L1:

Current input voltage

Mains current L1:

Actual input current on L1

Mains current L2:

Actual input current on L2

Mains current L3:

Actual input current on L3

Mains frequency:

Current mains frequency

Temperature power stage:

Current mains of the power stage


Cloud state:

Current state of the cloud connection.

Regardless of whether cloud mode is active or not, it is displayed whether the my-PV cloud server is accessible. If the information "99, Timeout" is displayed at this point, check in the user interface of your router whether the HEA•THOR IoT has a connection to the router and whether it can establish a connection to the Internet.

7.6. Device settings

The "Device Setup" in the websetup allow you to configure all the necessary settings for the HEA•THOR IoT.

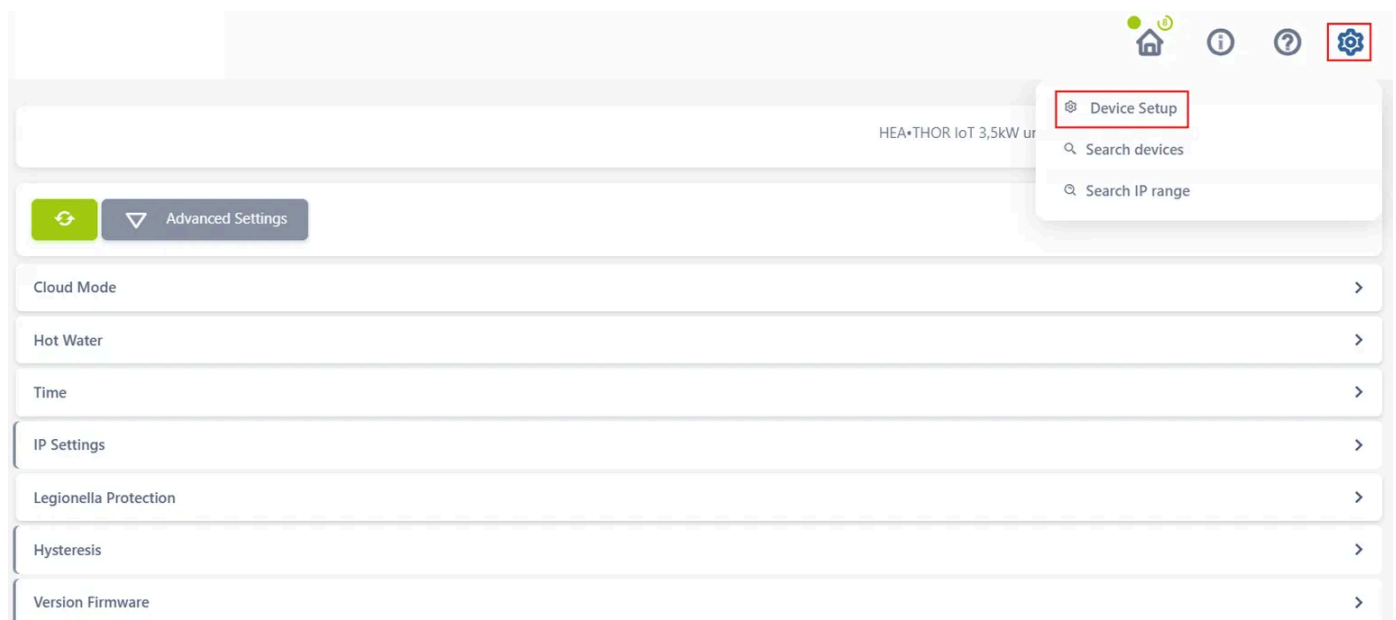

7.6.1. Cloud Mode

In this menu item, you can activate or deactivate Cloud Mode.

7.6.2. Hot Water

Hot Water

Temperature max.

Boost mode
☐ Off
☒ On
☐ Relay

Single Boost

Temperature min °C

Boost timeframe 1 from / to

Boost timeframe 2 from / to

Weekday
☒ Mon ☒ Tue ☒ Wed ☒ Thu ☒ Fri ☒ Sat ☒ Sun

Save

You can set the target temperature and configure the "Boost Mode" in the "Hot Water" menu.

Boost Mode "On":

When this function is activated, the connected heating element is supplied with maximum power.

Boost Mode "Relay":

Alternatively, the minimum temperature can be maintained by activating an external heat source. Details on the wiring of the potential-free contacts can be found in the assembly instructions.

There are two time slots available for ensuring the minimum temperature is maintained. The start and end time can be specified in full hours.



Tip

If you only want to use the BOOST button, enter 0 in all fields of the two time windows.

Note

- The start hour and end hour refer to the same calendar day. If a time window is defined over midnight, there is no hot water boost!
- If the set start hour is after the end hour, there is no hot water boost!

7.6.3. Time

The region and location can be selected in the Time menu. A time server or NTP server (NTP = Network Time Protocol) can be defined in the web setup using a domain name.

Time

14:40:37

Region Europe ▾

Location Austria/Vienna ▾

NTP server pool.ntp.org

Save

7.6.4. IP Settings

In the IP Settings menu, you can read the current network data of the HEA•THOR IoT, set the type of connection (Ethernet.Mode) and specify whether the HEA•THOR IoT connects to the network with a static IP address.

IP Settings

ⓘ Notice: Changes to the IP settings lead to a reboot of the device.

MAC address 98-6d-35-c2-15-b3

Current IP address 192.168.178.35

Current subnet mask 255.255.255.0

Current gateway 192.168.178.1

Current DNS 192.168.178.1

Ethernet-Mode ☒ LAN
☐ WiFi
☐ Wireless Access Point

DHCP-Mode ☒ DHCP
☐ Static IP

ⓘ Use static IP only if you are familiar with network administration.

Save

7.6.5. Legionella Protection

To ensure drinking water hygiene, a time period can be specified by which a defined minimum temperature must be reached again after the last time this value was reached at the internal sensor T1. The number of days of this period can be set between 1 and 14. It is possible to specify a time for the start of the legionella programme. The factory setting is for a period of seven days, the legionella programme starts at 8 p.m., the target temperature is 60 °C and the programme is deactivated. The HEA•THOR IoT is supplied with maximum power until the target temperature set for the legionella mode at sensor T1 is reached.

Legionella Protection

Avoidance of legionella

☒ Off

☐ On

Activation intervall [Days]

7

Start hour

20

Target temp [°C]

60

Save

7.6.6. Hysteresis

Here, you can set the hysteresis for both the maximum target temperature and the minimum boost temperature. The HEA•THOR IoT will only start heating again when the temperature has fallen by the set value from the maximum or boost temperature.

Hysteresis

Hot water max / min [°C]

3

3

Save

7.6.7. Version Firmware

In the Firmware version menu, you can view the current firmware version, check for updates and perform updates. It is also possible to restart the HEA•THOR IoT or perform a factory reset.

Version Firmware	
Version Controller	h0000103 State: Up to date
Version Power stage:	hp017 State: Latest
Serial No	Check for updates
	2103002511270004
	Reboot Device
	Factory Reset

8. Control options


8.1. Modbus TCP/ RTU, http

No further settings are required for Modbus TCP/RTU and http. These interfaces are already activated by default.

A detailed description of the listed controls can be found in the [HEA•THOR IoT Documentation Control](#).


8.2. API

The my-PV Cloud is required to use the API interface. Under Settings --> Device settings --> API, you will find the option to generate an API token in order to use the API interface.

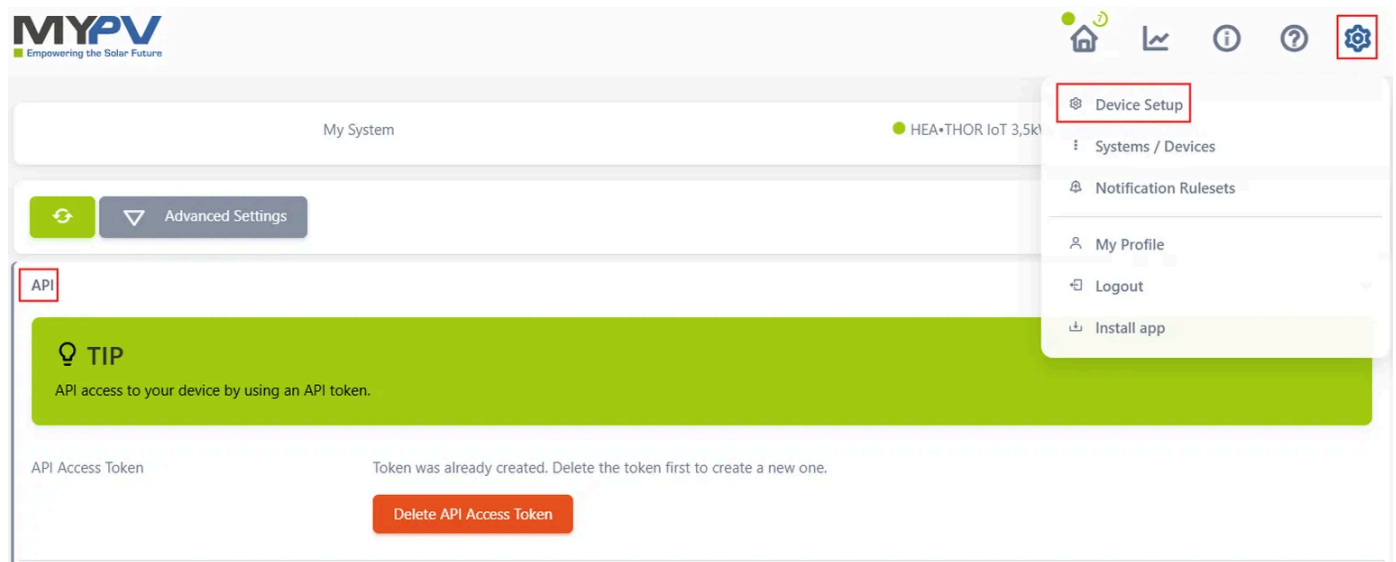

8.3. my-PV DTO

Der my-PV DTO kann über das entsprechende Widget, in der Cloud aktiviert werden.

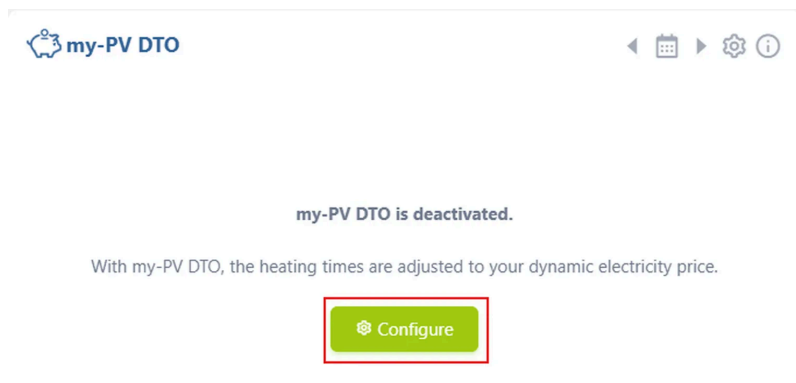

9. Error table

error category	Temperature
Description	STL (safety temperature limiter) has triggered
LEDs	2&9
troubleshooting	Wait until the temperature has dropped by 10 °C and reset the STB as described in section 6.2.

error category Temperature

Description The standard temperature sensor T1 is missing.

LEDs 2&10

troubleshooting Check if the 3-pin plug on the back of the HEA•THOR IoT is properly inserted.

error category Temperature

Description STL (safety temperature limiter) temperature sensor missing

LEDs 2&11

troubleshooting Check if the 3-pin plug on the back of the HEA•THOR IoT is properly inserted.

error category Temperature

Description Power unit overheating

LEDs 2&12

troubleshooting The power stage has an excessive temperature (>85°C). Power can only be supplied again once the device has cooled down to 50°C.

error category Relay open

Description N relay does not close

LEDs 4&9

troubleshooting Check whether the heating rod plug is correctly connected to the rear of the HEA•THOR IoT.

error category Relay open

Description L1 relay does not close or no heating element is connected

LEDs 4&10

troubleshooting Check whether the heating rod plug is correctly connected to the rear of the HEA•THOR IoT.

error category Relay open

Description L2 relay does not close or no heating element is connected

LEDs 4&11

troubleshooting Check whether the heating rod plug is correctly connected to the rear of the HEA•THOR IoT.

error category Relay open

Description L3 relay does not close or no heating element is connected

LEDs 4&12

troubleshooting Check whether the heating rod plug is correctly connected to the rear of the HEA•THOR IoT.